


Hardware Guide for P/N 918-P

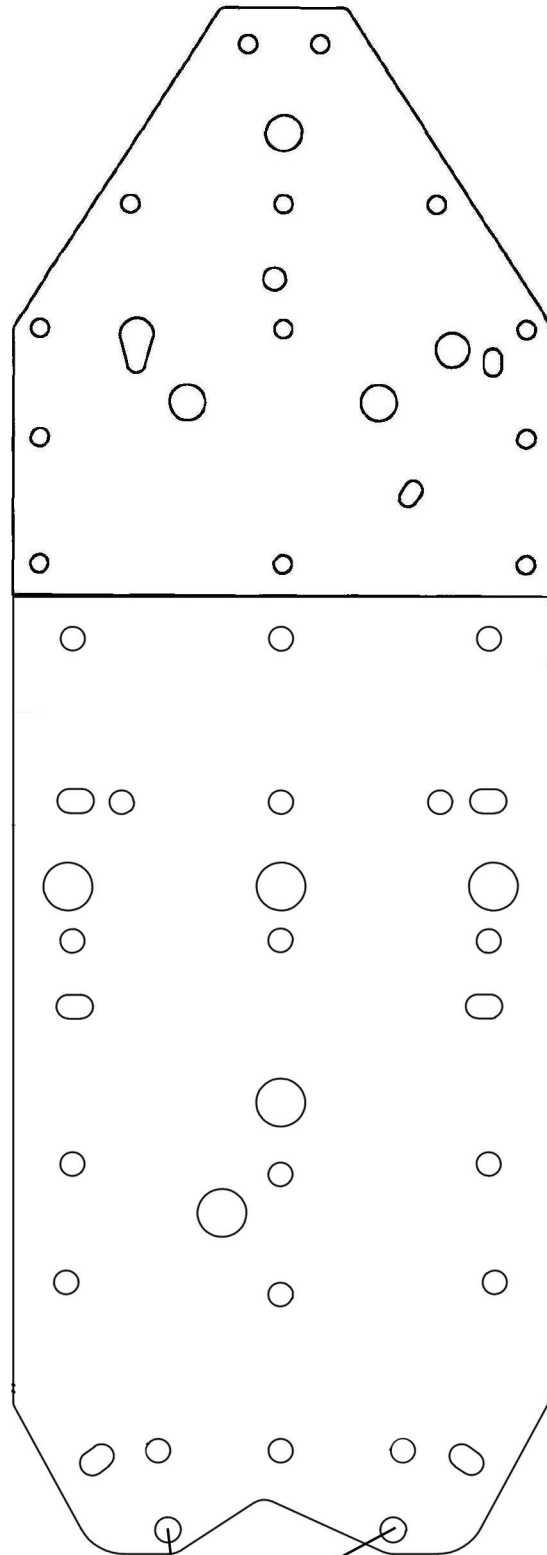

775P1

- 31) #833 Cupped Washers
- 31) 6x16mm Flange Bolts
- 2) 6x20mm Hex Bolts
- 2) 6mm Flat Washers
- 2) #700-827 spacer

918P2

mount to inserts using (all locations not marked):
M6x16 Flange w/ #833 Cupped Washer

Common with aluminum mounting
M6x20 Hex w/ #700-827 Spacer