

QuickLock

CABINETS

Step By Step Refrigerator & Microwave Wall Cabinet Assembly Guide Page 1

Contents Included

- (1) Door & Frame assembly
- (2) Side Panels
- (1) Back panel
- (1) Top panel
- (1) Bottom panel
- (2) Cleats
- (6) Phillips screws



(1) Door & Frame Assembly-(Part A)



(2) Side Panels-(Part B)



(2) Top & Bottom Panels-(Part C)



(1) Back Panel (Part D)



(2) Top & Bottom Cleats-(Part E)



(6) Phillips screws (Part F)


Items Needed

- (1) Phillips Screwdriver
- (1) Wood glue




STEP 1

(Fig. 1) Remove the face frame assembly (Part A) from the packaging and place onto a clean, sturdy, level work surface ideally on a blanket or carpet to prevent scratching the surface. Place a small bead of glue along the panel grooves of the face frame (we recommend dry fitting the pieces together first before gluing). (Fig. 2) Slide the side panels (Part B) into the panel grooves of the face frame making sure the panel grooves of the side panels face inside.

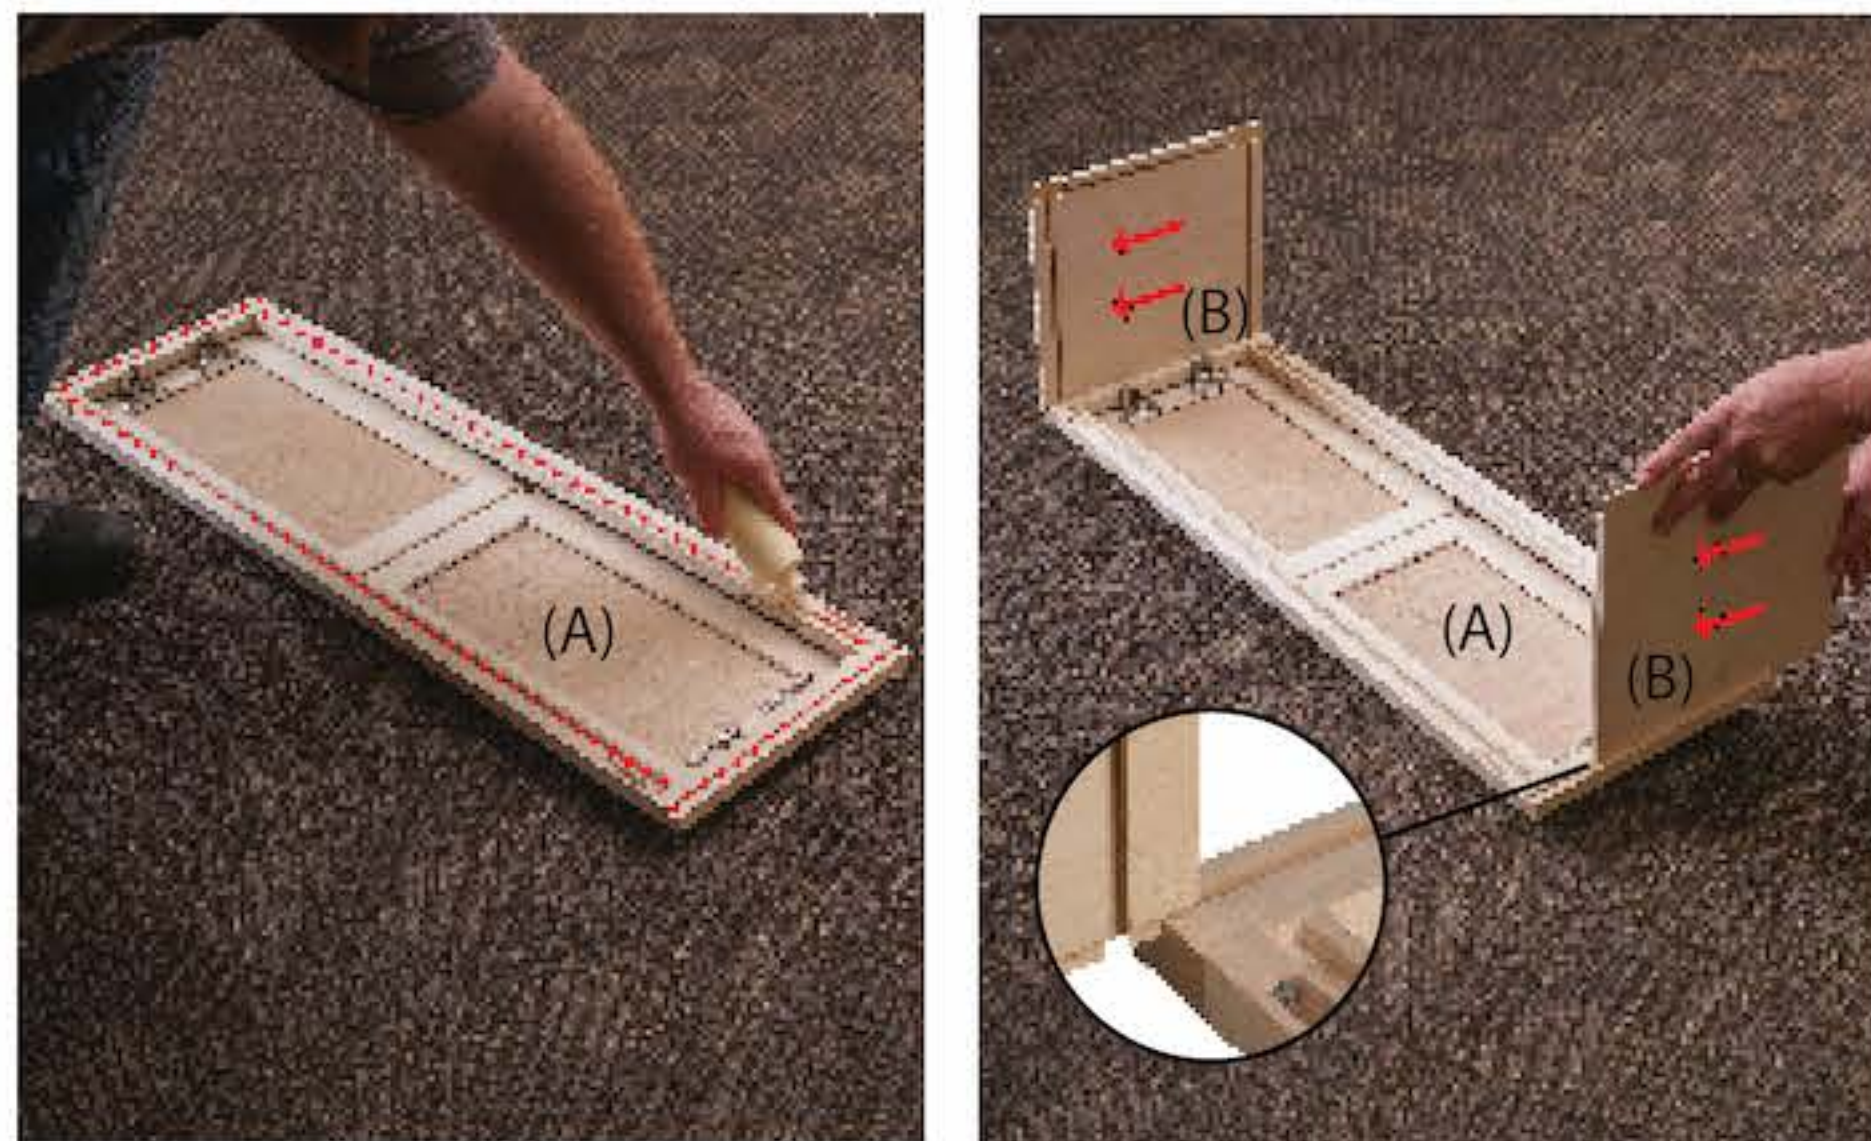

STEP 2

(Fig. 3) After the side panels are installed, place a small bead of glue in the panel grooves of the side panels and slide the top and bottom panels (Part C) down into the channel of the face frame. (Fig. 4) Next slide the back panel (Part D) into the panel grooves of the side panels (Part B) and insure the all the panels are seated flush.

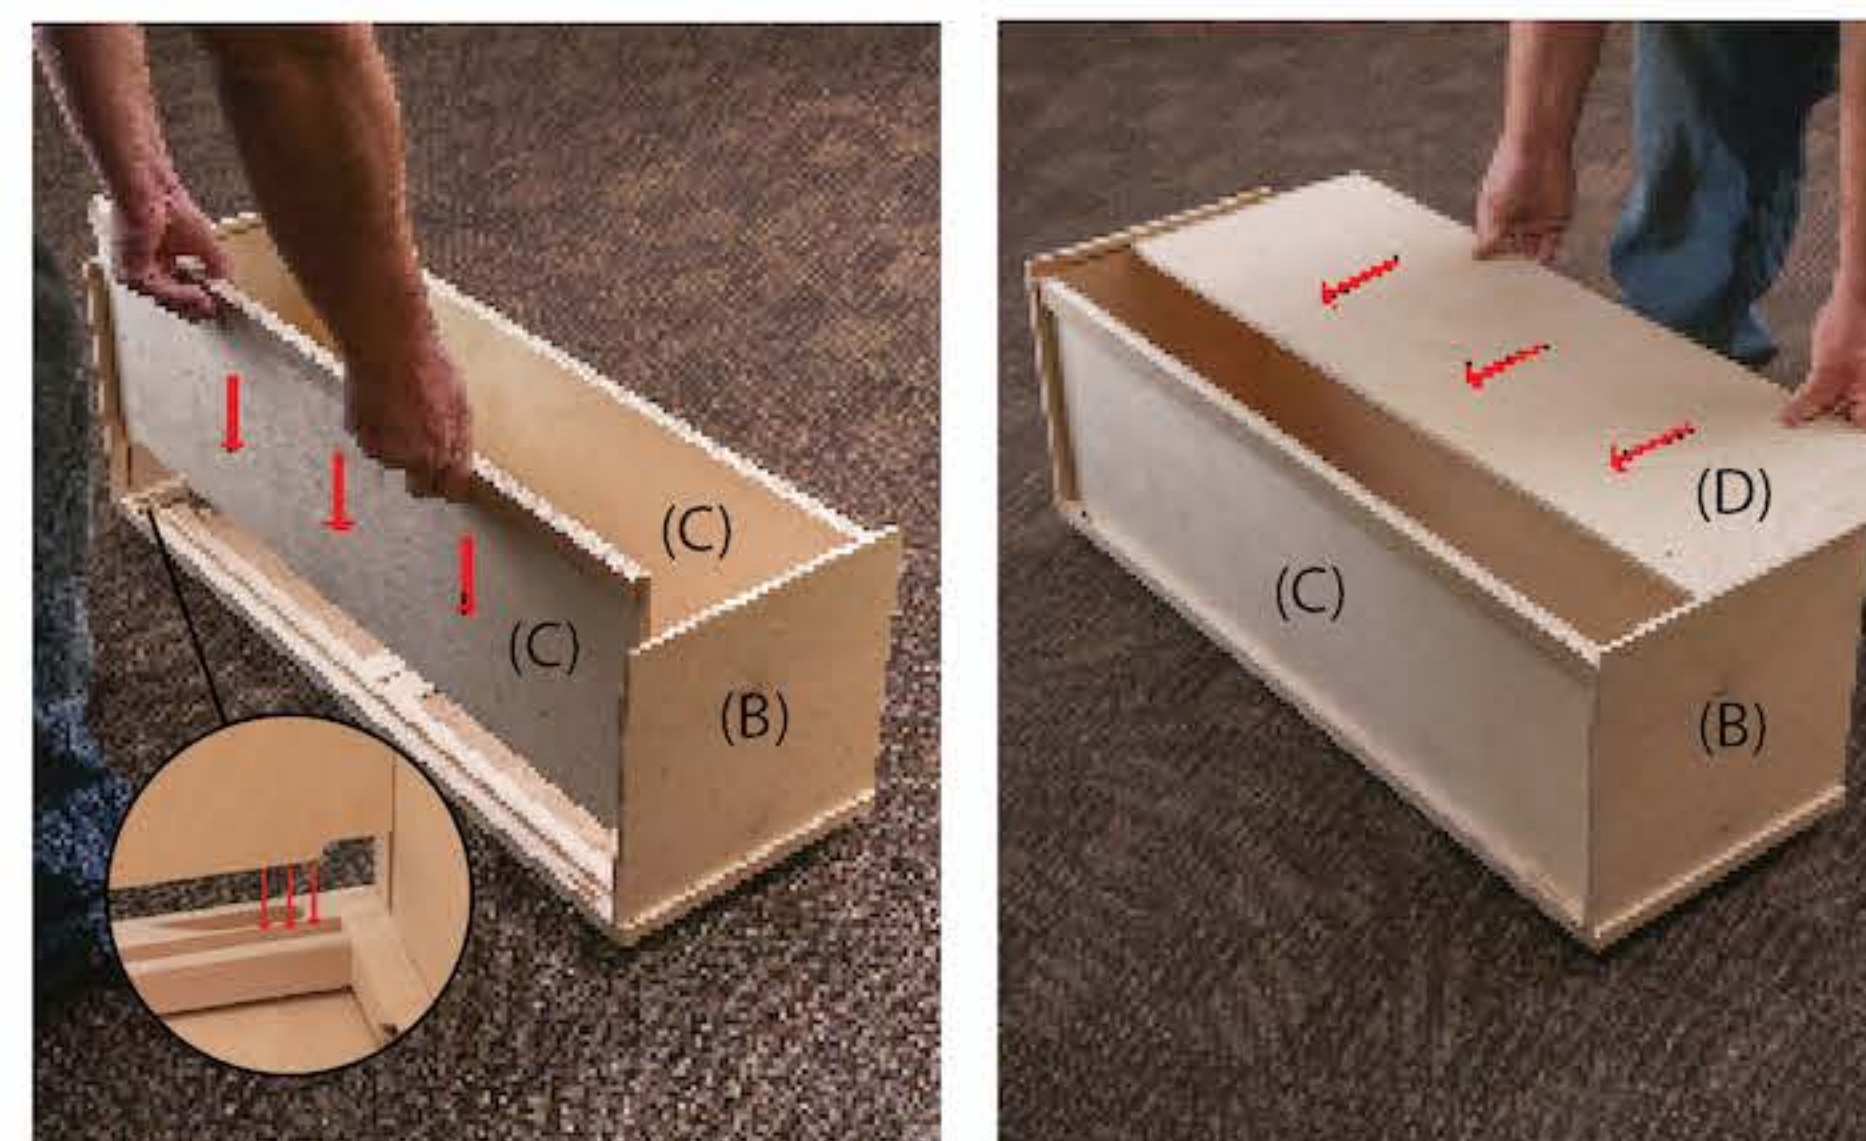

STEP 3

(Fig. 5) Place the back cleats (Part E) down into the pre-cut slots of the side panels. (Fig 6) Using the 6 screws, screw down the cleats. This will lock your cabinet in place and finish the assembly. Congratulations your QuickLock Cabinet is now complete and ready to install. Thank you for letting QuickLock be a part of your home improvement project!

