



INSTALLATION INSTRUCTIONS

PART No. 30433 & 50433

MODEL No.

Frame Cover


Tools Required:

QTY:	Description:
1	Electric Drill
1	7/32" Drill Bit
1	3/8" Wrench

Instructions:

1980 & Newer: Remove existing plastic cover, place Stainless Steel cover in place. Using 1/4" self-tapping screw and flat washer, bolt cover to frame.

1976 – 1979: Place frame cover in place, mark the two holes on each side. Drill with 7/32" drill bit and bolt using 1/4" self-tapping screw and flat washer.

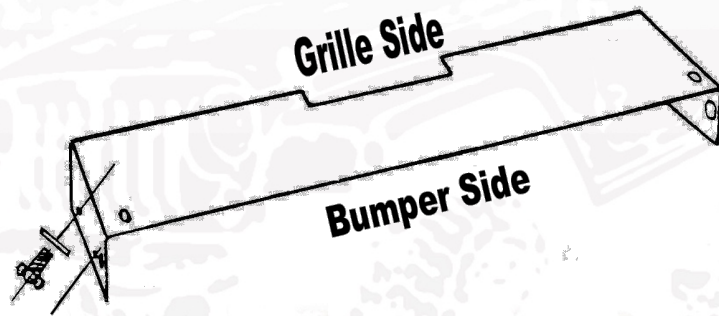

INSTALLATION INSTRUCTIONS

PART No. 30433 & 50433

MODEL No.

Frame Cover

Tools Required:

QTY:	Description:
1	Electric Drill
1	7/32" Drill Bit
1	3/8" Wrench

Instructions:

1980 & Newer: Remove existing plastic cover, place Stainless Steel cover in place. Using 1/4" self-tapping screw and flat washer, bolt cover to frame.

1976 – 1979: Place frame cover in place, mark the two holes on each side. Drill with 7/32" drill bit and bolt using 1/4" self-tapping screw and flat washer.

