



# INSTALLATION INSTRUCTIONS

**PART No.**

**30716**

**Jeep® TJ and JK Wrangler  
Door Alignment Pins**



## REQUIRED TOOLS

None

## KIT CONTAINS

Top pin  
Bottom pin

## QTY


1  
1

### NOTE:

These pins are to aid in the installation of your doors. These are not needed when removing your doors.

### 1) SCREW PINS ONTO DOOR HINGES

Noting the 'T' for top and 'B' for bottom, screw the pins onto your factory door hinges finger tight.

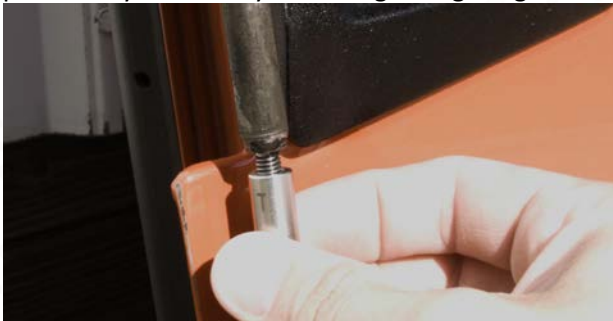

### 2) INSTALL DOORS

Using the alignment pins as a guide, begin inserting your top pin into your body hinges first. **The pins are designed at different lengths to allow you to focus on inserting one pin at a time.**

Once your top pin is lined up, align the bottom pin and set the door into place.



### 3) REMOVE PINS

Once your door is installed, remove the pins to help install the rest of your doors.



3071600