



INSTALLATION INSTRUCTIONS

PART No.

30717

**Jeep® JL Wrangler
Door Alignment Pins**



REQUIRED TOOLS

None

KIT CONTAINS

Top pin
Bottom pin

QTY

1
1

NOTE:

These pins are to aid in the installation of your doors. These are not needed when removing your doors.

1) SCREW PINS ONTO DOOR HINGES


Noting the 'T' for top and 'B' for bottom, screw the pins onto your factory door hinges finger tight.



2) INSTALL DOORS


Using the alignment pins as a guide, begin inserting your top pin into your body hinges first. **The pins are designed at different lengths to allow you to focus on inserting one pin at a time.**

Once your top pin is lined up, align the bottom pin and set the door into place.

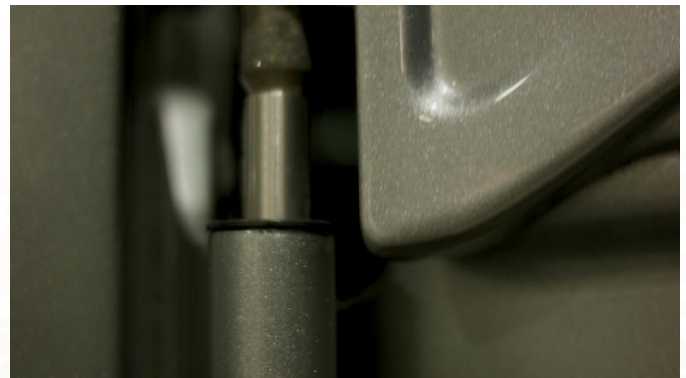

3) REMOVE PINS

Once your door is installed, remove the pins and re-secure the door.

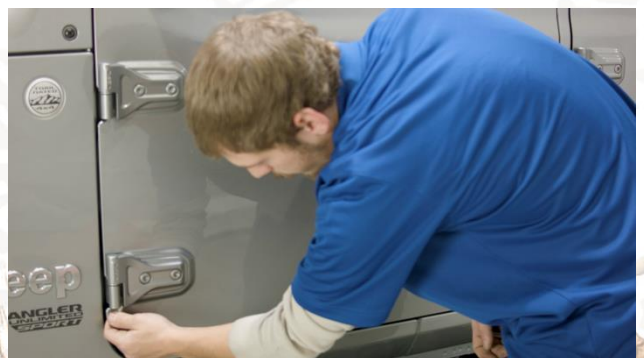

3071700