




INSTALLATION INSTRUCTIONS

PART No.

KEN30723 & 50723
Jeep® TJ and JK Wrangler
Hood Bumper Delete Kit

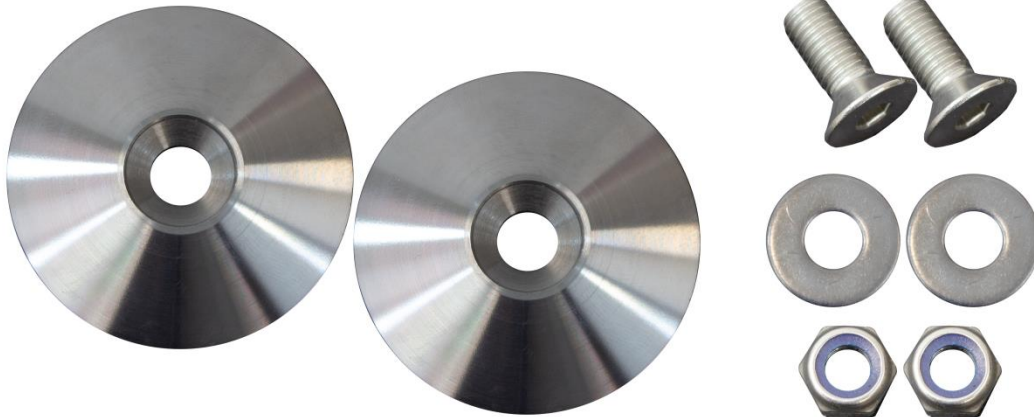

REQUIRED TOOLS

10mm Socket
13mm Socket
Ratchet
5mm Allen

KIT CONTAINS

Hood Bumper Delete
M8 SS Washer
M8-1.25 SS Nyloc Nut
M8-1.25x20mm SS Countersunk Bolt

QTY

2
2
2
2

KEN30723 & 5072300



INSTALLATION INSTRUCTIONS

PART No.


KEN30723 & 50723
Jeep® TJ and JK Wrangler
Hood Bumper Delete Kit

REMOVAL

Open your hood and prop it open with its hood prop rod.



Peel back the heat shield enough to gain access the hood bumper nuts.

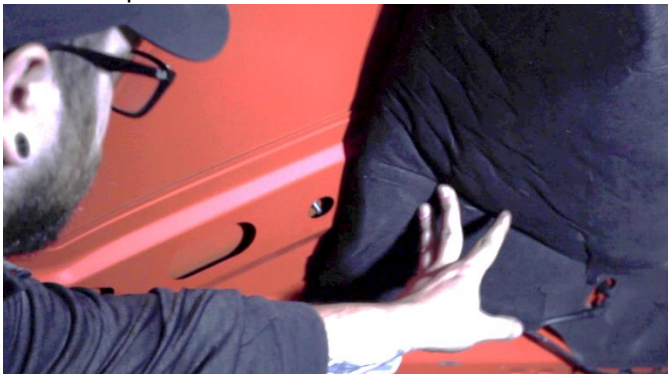

On a JK, with a 10mm socket, hold the bumper with one hand and unscrew and remove the nut. Repeat on the opposite side.


On Jeep TJ you would only need to pry/pull out the hood bumper.

INSTALL

Place the delete into the hood and support it with one hand.



With the other, secure a washer and a nut to the countersunk bolt. With a 13mm socket and 5mm hex wrench, tighten the nut and repeat on the opposite side.

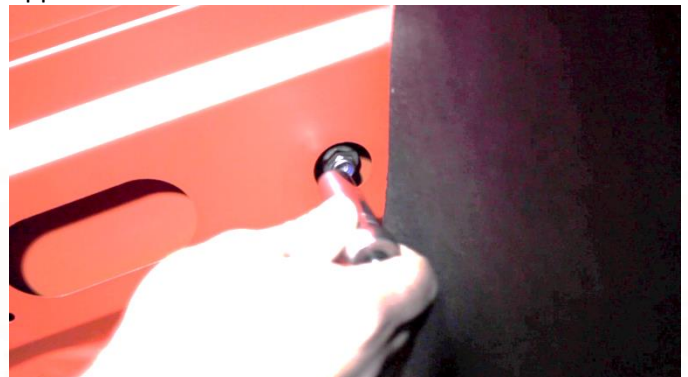

ENJOY YOUR NEW KENTROL HOOD BUMPER DELETE!