



# Install Battery LED System

## Provided Materials:

- 1.) 17" Magnetic Pigtail
- 2.) ILW QU-BLED Light System
- 3.) Magnetic Charging Adapter

## Tools Required:

- Philliphead Screwdriver
- Box cutter

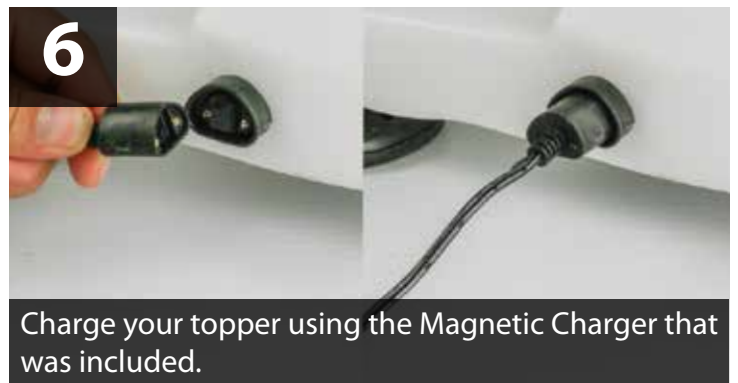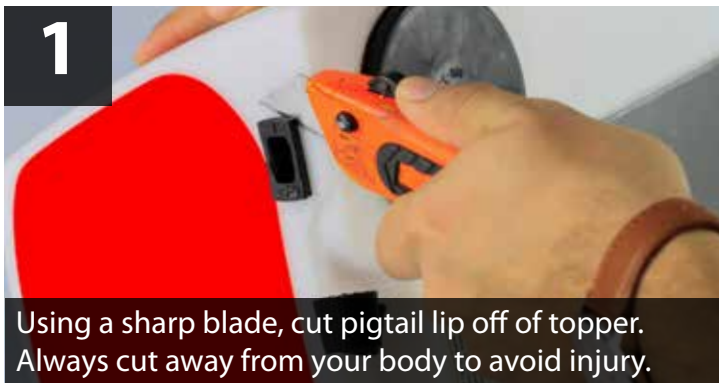

If you have questions please call 407.629.0012