



WWW.HSPUTELIDS.COM

1300 441 498

Part No: T12

Fitting Time: 20 mins








MITSUBISHI TRITON MV TAILGATE ASSIST KIT

Suitable for
D/Cab models with tubs

TAILGATE ASSIST KIT

PARTS LIST

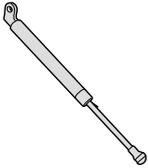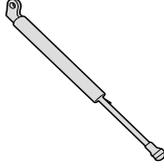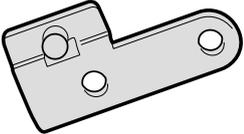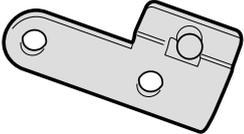 A DAMPER STRUT x1 KSD-SPEC-2	 B TRACTION STRUT x1 TRS-SPEC-2	 C M8 SHOULDER BOLT TUB MOUNT x2 TA-28	 D STRUT LOCKING BOLT x2 TA-16
 E TAILGATE MOUNT LH x1 TA-28LH	 F TAILGATE MOUNT RH x1 TA-28RH		

GENERAL NOTES

- Read through the fitting instructions prior to installation of accessory.
- Ensure all recyclable components and packaging are discarded and recycled following local recycling regulations.
- Safely store and protect any removed vehicle components.

SAFETY NOTES

- Check that all work practices comply with safety standards.
- Please wear appropriate clothing and use safety equipment.

FITTING TIME




20 mins

TAILGATE ASSIST KIT


Step 1

Remove indicated bolts, and retain. **NOTE: Take care not to lose factory alignment.**

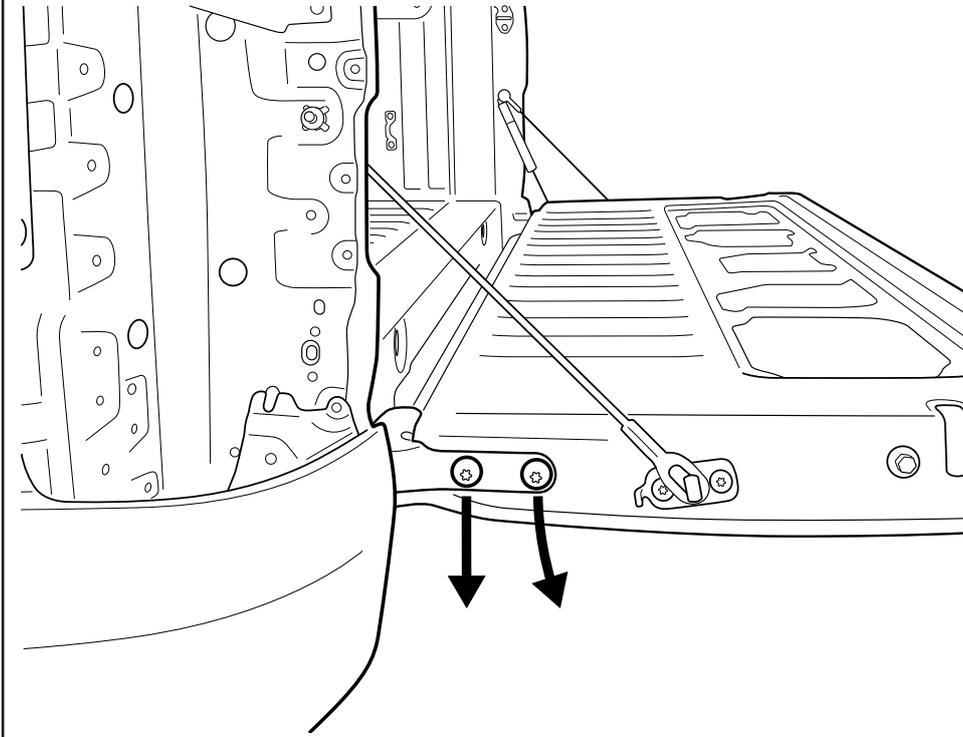

Step 2


Place bracket TA-28LH over the tailgate hinge and align the brackets holes with the factory threads. **Small amount of Loctite is recommended.**

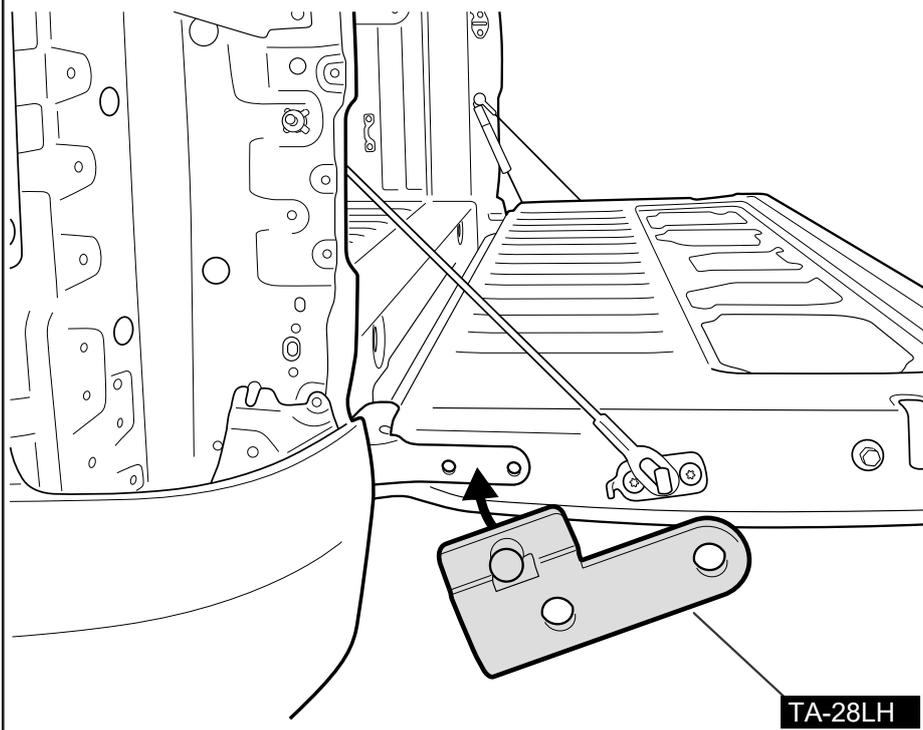

TAILGATE ASSIST KIT



Step 3

Fasten into place using the retained factory bolts. Refer to factory manual for torque settings.
Small amount of Loctite is recommended.

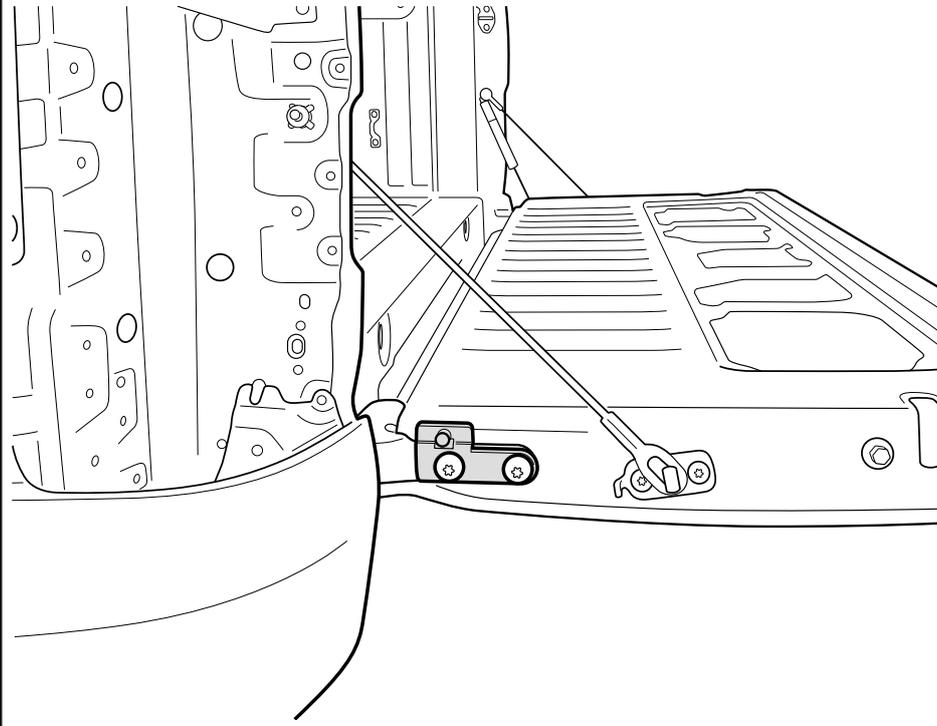

Step 4

Remove indicated bolt, washer, shim and discard.

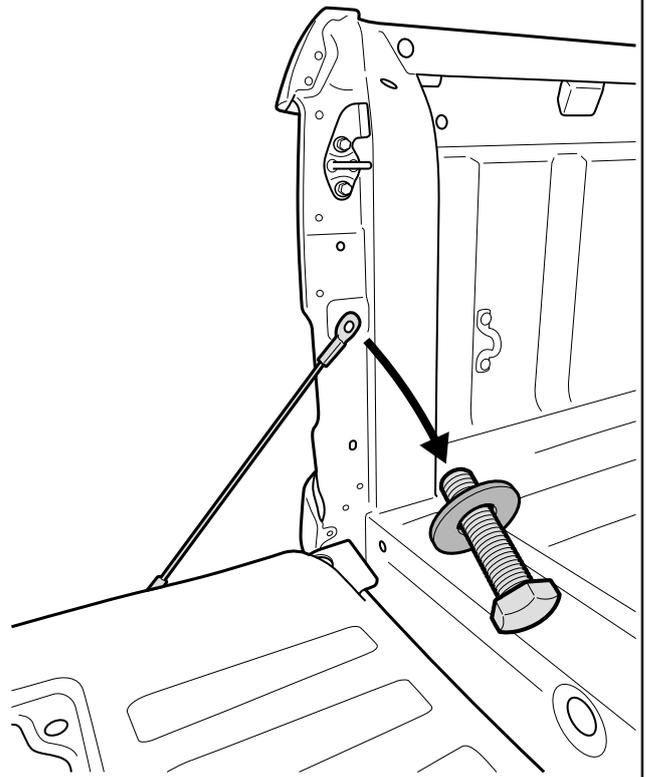
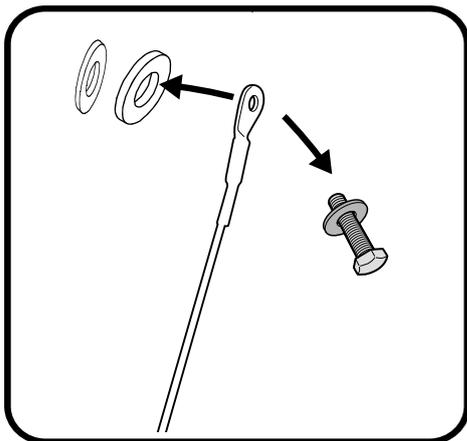


TAILGATE ASSIST KIT

Step 5



Using M8shoulder bolt, part number TA-28, feed through the eylet of the factory cable and fasten to indicated location.

NOTE: TA-28 Should be tighten to 8nm torque, Do not use power tools for this step. Small amount of Loctite is recommended.

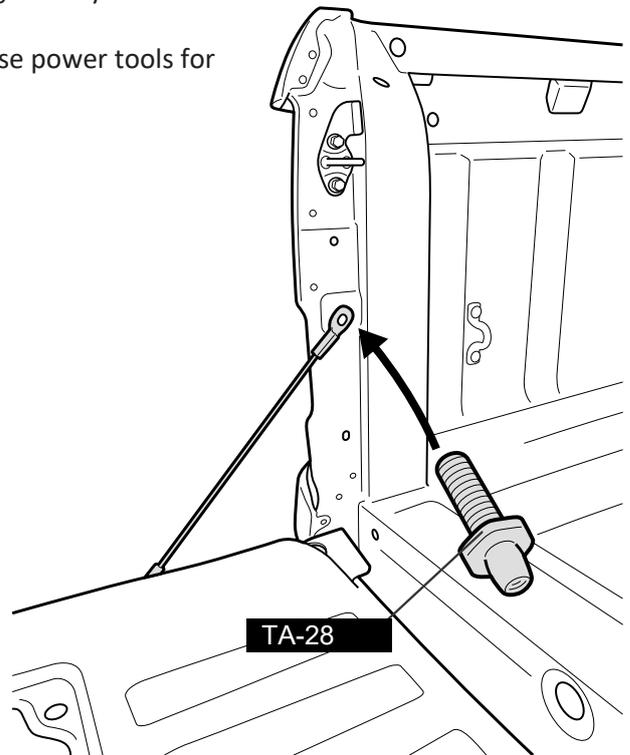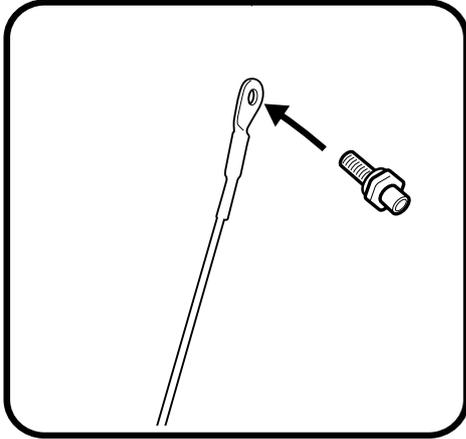

Step 6


Align part number KSD-Spec-2 (shaft end) to ball stud of the ta-28lh bracket. **Push to click into position**

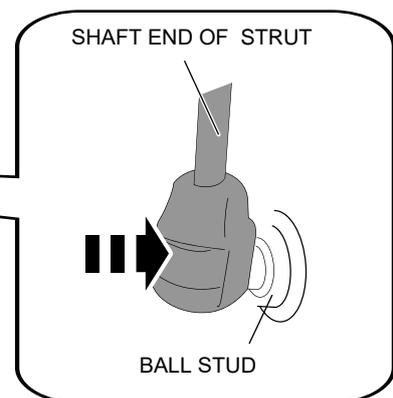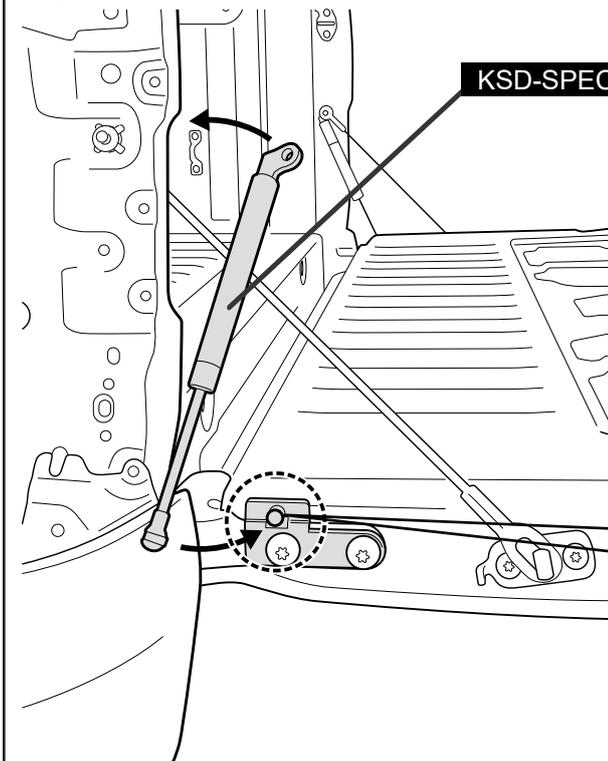

TAILGATE ASSIST KIT


Step 7

In the indicated orientation, fit dampening strut, part number KSD-SPEC-2 cylinder end to the Shoulder of (TA-28).

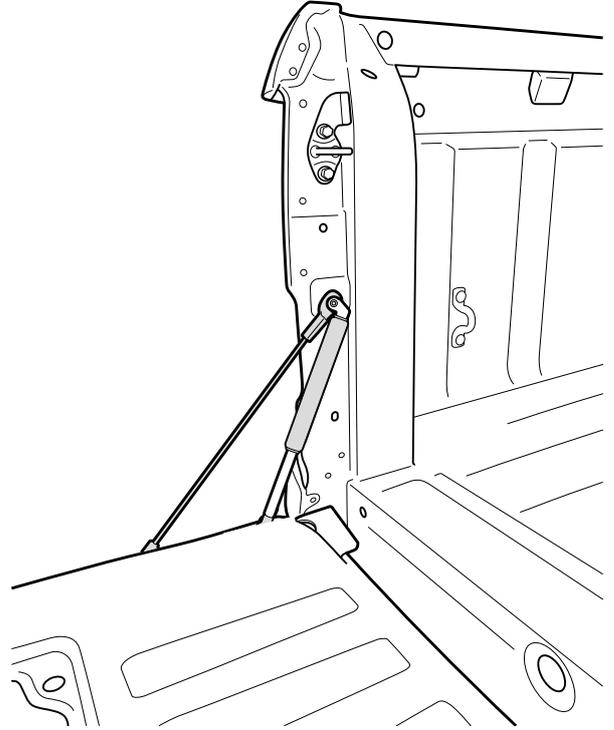

Step 8

Fasten into position with supplied strut locking bolt (TA-16) . **NOTE:** TA-16 Should be tighten to 2nm torque, Do not use power tools for this step. **Small amount of Loctite is recommended.**

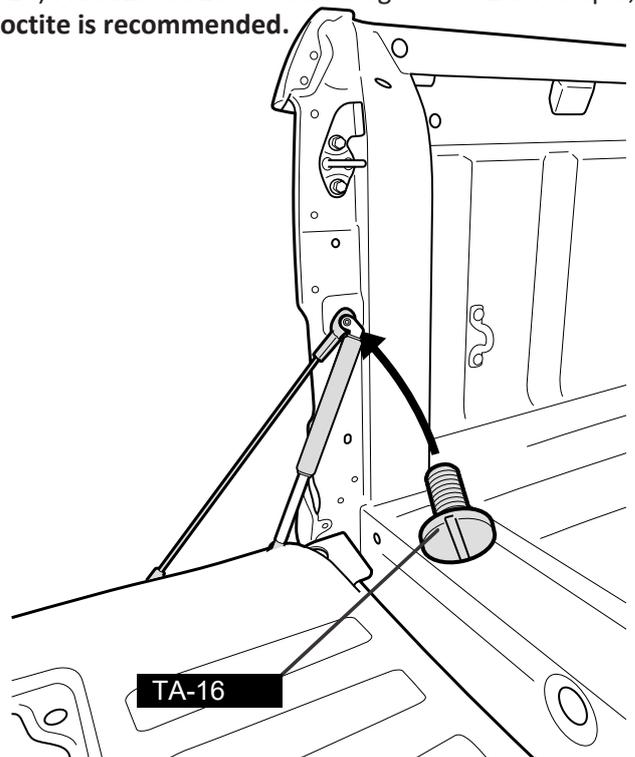


TAILGATE ASSIST KIT

Now repeat all the above steps on the drivers side.

NOTE: The passenger side Strut (part number TRS) has a spacer which will need removing once installed.


Step 9

Lift tailgate to reach cam end of strut, then push in to position.

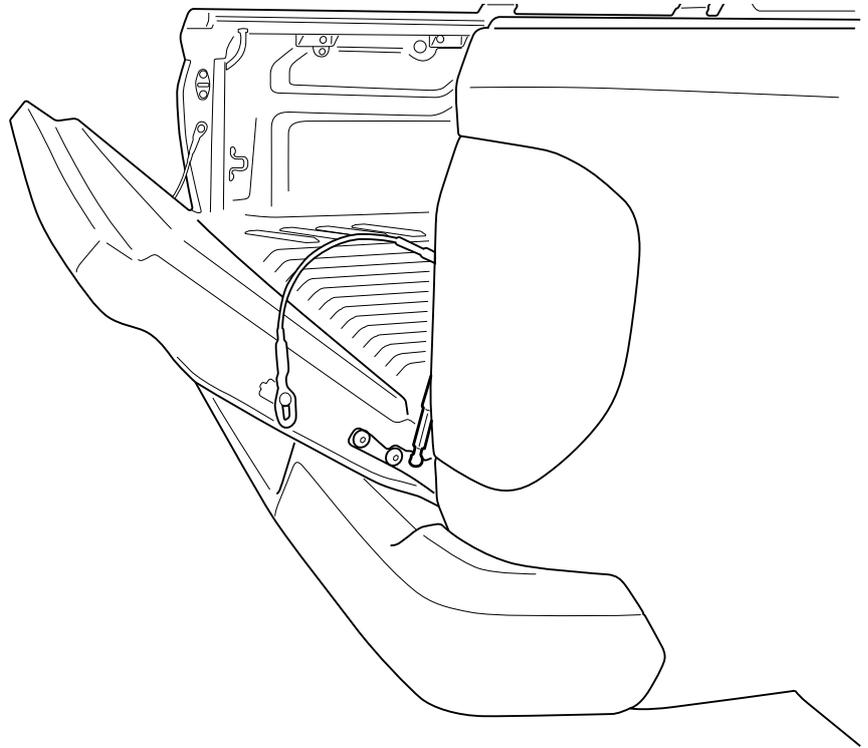

Step 10

Remove safety spacer

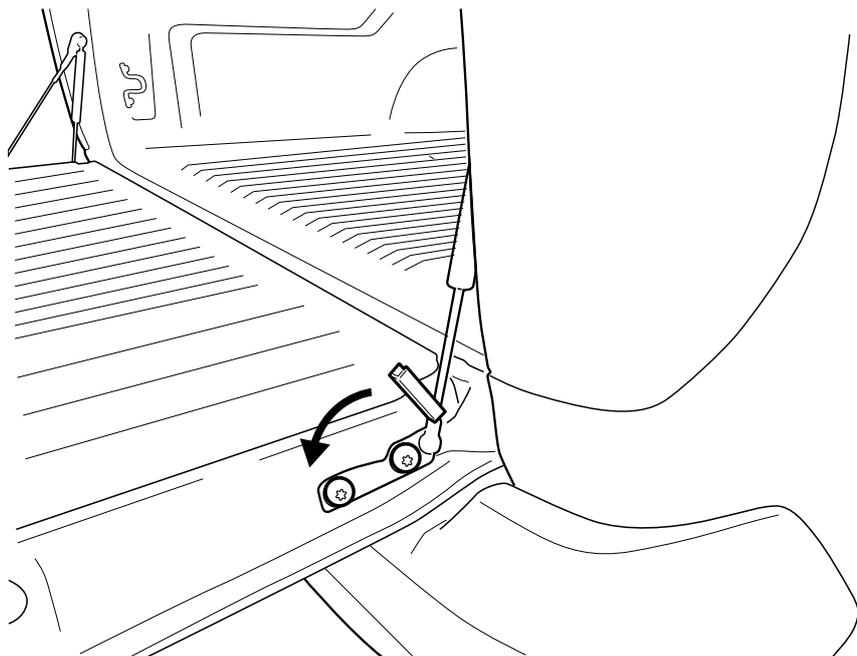

Final check all parts and movements are not impeding over range of operation.

Fitting complete