

CAROMA


Contura II Soft Close Toilet Seat

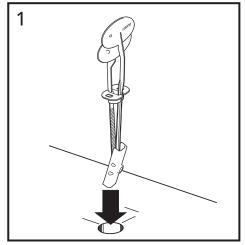


Push metal toggle through pan hole.

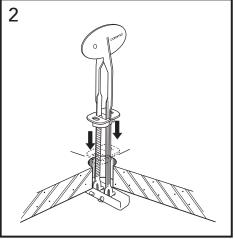


Realign handles and pull upwards while pushing locking bush down into pan hole.

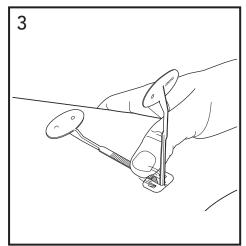


Break off handles flush with locking bush. Trim excess with a pair of side cutters if required.

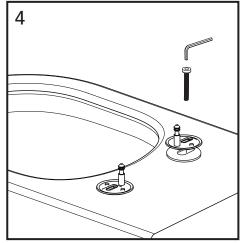


Fit the rubber pads to the underside of the two (2) hinge mounting posts and loosely fasten to the pan.

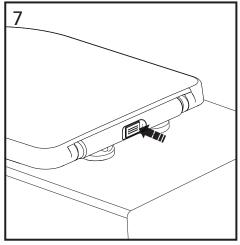


Push the button at the rear of the seat to release and remove the seat taking care not to move the hinge posts.

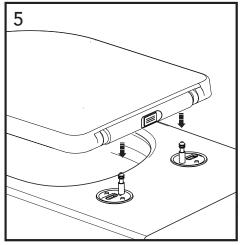


Align the hinge posts with the corresonding holes in the seat assembly and push down until it clicks.

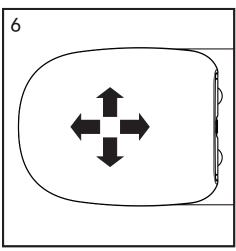

Adjust seat to desired position on pan.

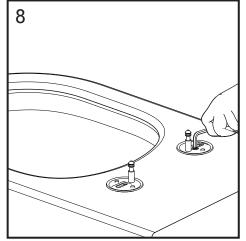

Fully tighten the bolts using the hex key provided.

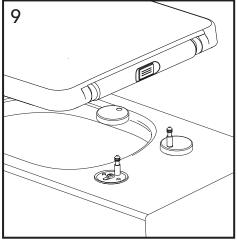

Slide the hinge covers over the hinge posts and fit the seat.