


KALDEWEI BATH & SHOWER FLOOR INSTALLATION

When handling steel enamel baths, care must be taken that they are treated correctly. This applies to their transport, unpacking and installation.


Kaldewei recommends that baths be fitted during the final installation and that the bath be covered until all the building work has been completed.

Australian Standard 2023/1977 Section 1.5 Specifies, "The section of the bath to be installed abutting shall be provided with a tiling flange or bead not less than 12mm in Height".

This bath has been supplied with sufficient high impact rigid PVC modified grade material to allow, where necessary, for the bath to be flashed along the full length and ends to conform with the standard.

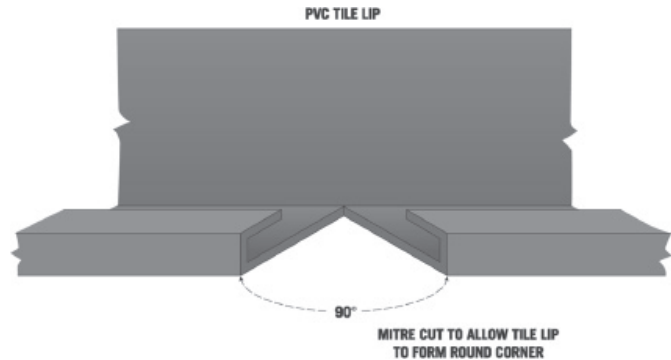

This clip on material should be cut to the required lengths, mitred at the corners, and the area where the flashing material and the rim of the bath meet, should be filled with a mould resistant Sanitary Grade sealant.

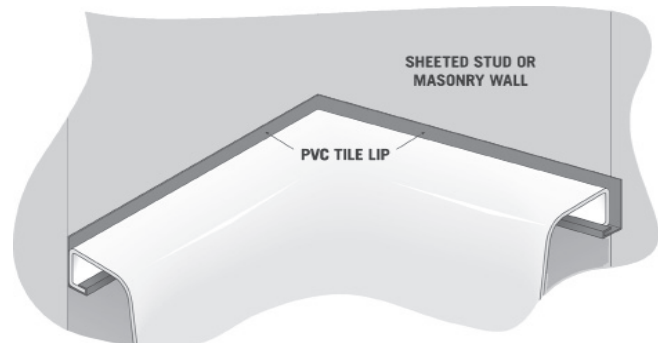

When the bath is installed, the minimum distance from the outside edge of the flange to the finished edge of the tiles shall be 10mm. The exposed area of the flange shall have continuous fall to the inside of the bath.

