


Tapware is to be installed by a Licensed Plumber in accordance with AS/NZS 3500:2003

Recommended working water pressure 300-500 kpa.
Maximum water temperature is 65 deg.c.

INSTALLATION GUIDE

Monsoon Horizontal Shower
Product code: MSHAHSS

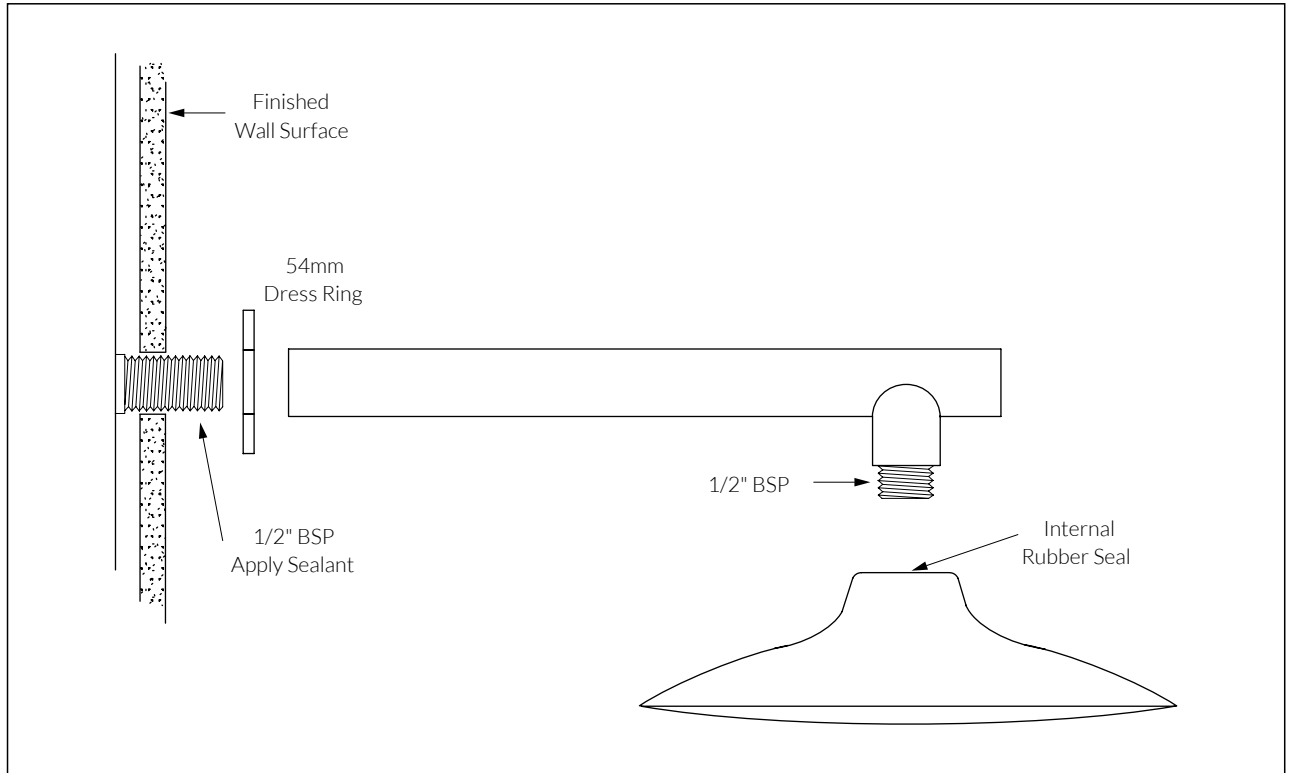

INSTALLATION GUIDELINES

- Flush water lines prior to fitting the shower.
- Apply thread tape or sealant 1/2" BSP thread protruding from the wall.
- Position Dress Ring and attach Horizontal Arm.
- Attach Shower Head to Arm.
- Operate tapware and check all connections for water leaks.