

C L △ R K

# Back to Wall Freestanding Bath

## Care & Installation Guide

In Australia  
For more information call 13 14 16  
or go to [www.clark.com.au](http://www.clark.com.au)

\* For full warranty terms and conditions,  
please visit [www.clark.com.au](http://www.clark.com.au)

In New Zealand  
For more information call 09 279 2700

\* For full warranty terms and conditions,  
please visit [www.clark.com.au](http://www.clark.com.au)

This manual has to be left with the end user

### WARNING:

Before commencing installation, please read these instructions carefully. Installation must comply with all State By-Laws and any requirements imposed by local authorities.

Date: 20/11/2017  
Revision No: 1

 | GWA *Smarter Solutions*

Congratulations on the purchase of your new Clark bath. We are sure you will have many years of relaxation, turning your bathroom into a stylish retreat.

#### CLARK ACRYLIC FREESTANDING BATHS

All our products are made from sanitaryware grade acrylic. It resists chipping, will not rust and has excellent heat retention properties. Its high gloss finish has natural slip resistance.

All dimensions are in millimeters and are subject to normal manufacturing variations. Therefore, Clark reserves the right to vary specifications without notice.

#### CLEANING YOUR BATH

- A) To preserve the polished surface, after using your bath, clean with soft cloth and warm soapy water to wash away any body oils or soap residue that forms a ring tide mark.
- B) As a weekly cleaner we recommend warm, soapy water. Do not use powders, pastes, cream cleaners, thinners, window cleaning sprays or dry cleaning liquid, etc.
- C) Stubborn marks or fine scratches may be polished out with Brasso.
- D) When coloured essentials oils are used, first test that the colour won't stain your bath. Always add oils into a bath full of water. Never pour them into an empty bath.

**WARNING**  
BEFORE COMMENCING INSTALLATION, PLEASE READ THESE INSTRUCTIONS CAREFULLY. INSTALLATION MUST COMPLY WITH ALL STATE BY-LAWS AND ANY REQUIREMENTS IMPOSED BY THE LOCAL AUTHORITIES

**WARNING**  
NO PUTTIES OR SILICONES CONTAINING LINSEED OIL ARE TO BE USED AS SEALANTS ON THE WASTE. WE RECOMMEND SANITARY GRADE SILICONE.

#### RECEIVING YOUR BATH

- A) Unpack and check for damage.  
After receiving your bath, please unpack and remove all plastic covering, checking carefully for any damages. Repack the bath if it is not being immediately installed. Clark reserves the right to reject any claim for damage if not notified in a timely manner.
- B) Protect your bath.  
Before commencing installation, ensure the bath is completely protected, leave protection film in place until the bathroom is complete. Scratches and cracks incurred during installation are not covered by the warranty.

#### WATER TESTING

Water test your bath prior to enclosing to ensure it drains correctly as no claims for non-draining baths will be valid after enclosing or tiling has been done.

#### DRILLING AND REPAIRS

When drilling for taps, use a fine toothed hole saw at less than 1000rpm. Scratches or cigarette burns can be improved with 1200 grade wet & dry sandpaper then repolished with Brasso polishing compound. Always polish scratch in a circular movement.

All materials to comply with appropriate Australian & NZ Standards.

#### STEP 1

Adjust the bath feet until the bath tub base is 8mm above the floor when the floor is finished. This can be done by turning the feet bolts accordingly. When measuring from the unfinished floor, ensure to take the floor finishing (e.g. tile) thickness into consideration.

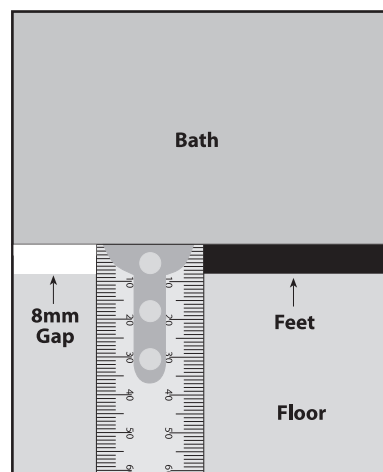


Figure 1  
Feet set at 8mm above the floor

#### STEP 2

Mark the floor and outline of the bath, at final installation position with a marking pencil. Ensure to trace the outline of the flat/tiling flange side of the bath on the wall.

#### STEP 3

If using footlocker option, simply drill and secure the footlockers to the floor where the two back feet of the bath will be positioned on final installation. Refer to Figure 2 and Figure 3.

Figure 2

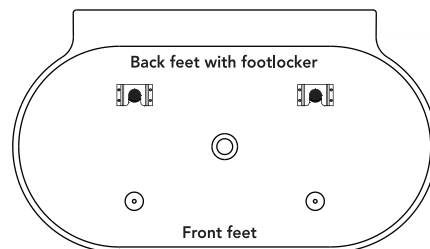
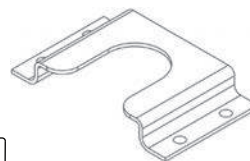


Figure 3  
Freestanding bath with footlocker.

#### STEP 4

Carefully tilt bath on its side and use Flexi-Dinger to connect the waste outlet to the drain, as illustrated in Figure 4. Make sure to cut the Flexi-Dinger to correct length for ease of installation and to prevent it from bowing upward, as this will result in drainage issue.

Be sure to protect the bath surface. Damage during installation is not covered by warranty.

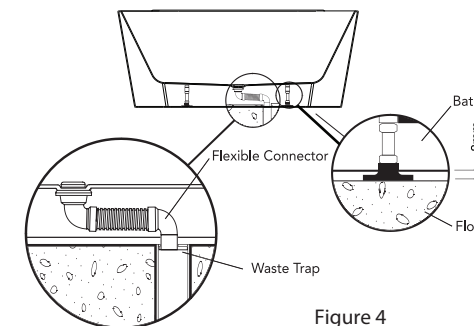


Figure 4  
Flexi-Dinger installation

#### STEP 5

Slide the bath into the wall. Ensure that the bath back feet glide into the footlockers. Refer to Figure 5.

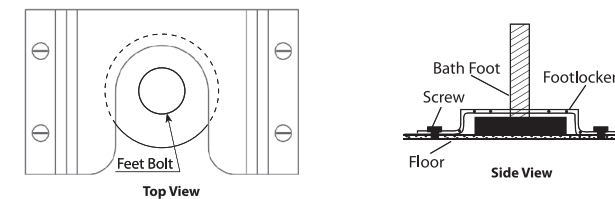


Figure 5  
Foot installation to footlocker.

#### STEP 6

Apply silicone around the base surrounding, leaving a 20mm gap in an inconspicuous position. Refer to Figure 6.



Figure 6  
Silicone applied around base surrounding of bath.

#### STEP 7

Rest the bath for a minimum 24 hours to allow the silicone to fully cure.