

INSTALL INSTRUCTIONS C-VS-0809-CHGR-2

2021-2022 Dodge Charger (Police Package)

VEHICLE SPECIFIC CONSOLE

NOTE: WILL NOT WORK WITH 12.1" INTEGRATED TOUCH SCREEN

TOOLS REQUIRED:

Phillips Screw Driver

Socket set (Standard & Metric)

Wire Cutters


7/16 wrench

Wire Crimping tool

T-20 Torx Bit

PARTS and MOUNTING HARDWARE:

<u>QTY</u>	<u>DESCRIPTION</u>	<u>PART#</u>
1	Driver Side Trim Panel	11635
1	Passenger Side Trim Panel	24164
1	Sensor Cover	11209
1	7/8" Plug	13401
4	Female spade connector	15899
2	6mm x 10mm Hex nut	16104
2	1/4 X 1 Fender washer	16130
3	1/4 X 3/4 Hex head self-threading screw	16359
6	#8-18 X 1/4 PFHMS	16425
1	"O" Ring	23537
1	Manual park release label	24551

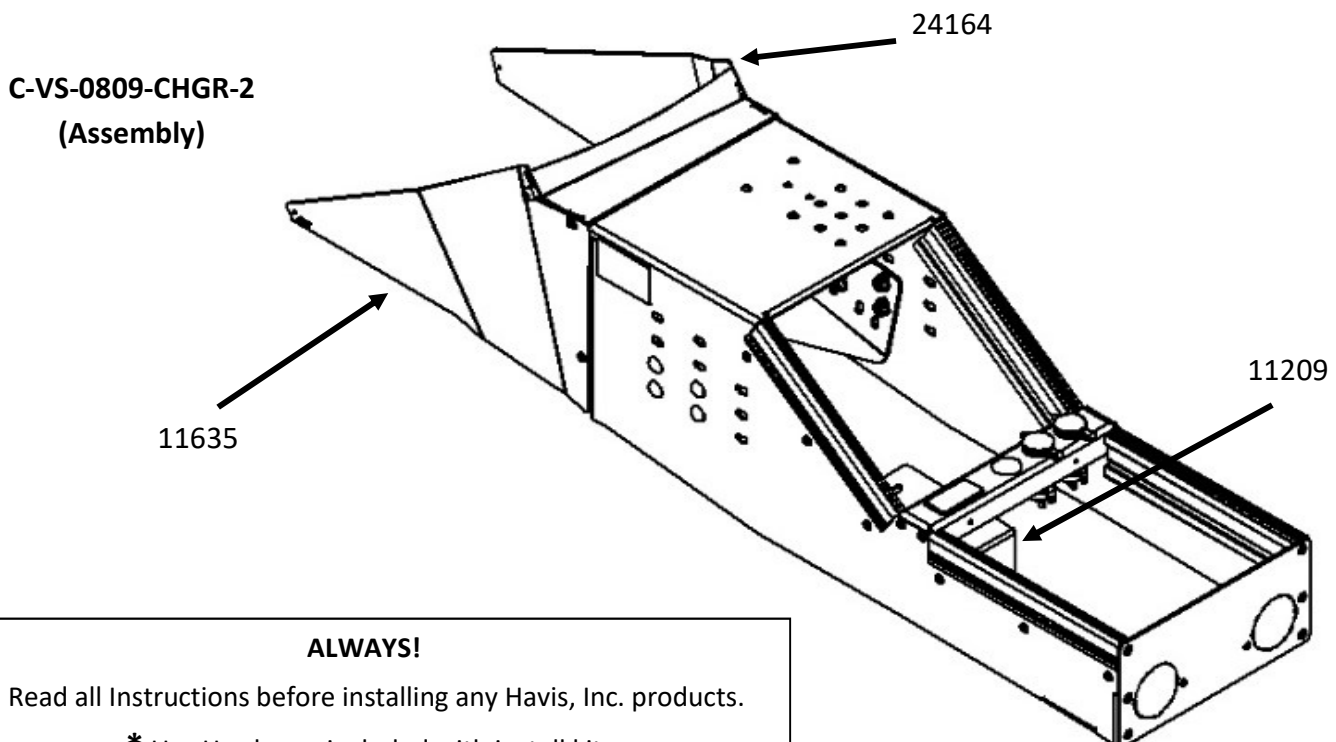

ALWAYS!

* Read all Instructions before installing any Havis, Inc. products.

* Use Hardware included with install kit



O.E.M. console prior to
C-VS-0809-CHGR-2 console installation.



Remove forward O.E.M mini console plastic cover
and remove two (2) nuts from front floor bracket.
Nuts to be reused. (10mm)



Remove bolts that hold underside of extrusion to rear
floor bracket. (7/16 wrench) Remove rear floor
bracket bolts and center console bolt. (10mm)



Remove O.E.M. plastic center console



Sensor bracket will go on top of console, front
floor bracket.



Locate inserts located under rubber mat as
shown.



Use OEM screws (if provided) or 1/4 x 3/4 self-threading screws (included in hardware kit) to mount rear of console. (7/16 wrench)



Push Console assembly forward and tighten all floor mount, bracket hardware. Run all wiring as needed



Attach passenger and driver side trim panels on with # 8 x 1/4 Flat Head Screws. (3 screws each panel included with hardware kit)



After connecting the aux panel wiring, snap panel into side trim panel.



A cover is provided to guard the O.E.M. Sensor on transmission hump. If desired, attach to existing stud and 6mm nut and washer provided.



Installation is now complete.