



ELITE KIT RACK ASSEMBLY INSTRUCTION


Elite Kit Rack Case Storage Column


# **ELITE KIT RACK ASSEMBLY INSTRUCTION**


Thank you for purchasing Elite Kit Rack by Genuwine Cellars. The following instructions will help you assemble the DOUBLE COLUMN DIAMOND BIN. The same procedure can be applied to the following kits shown.


#### Please study the instructions carefully prior to starting the assembly.


SINGLE COLUMN DIAMOND BIN







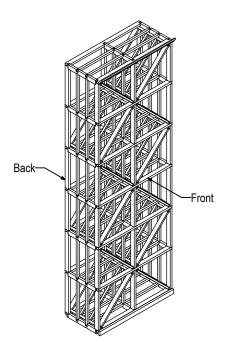

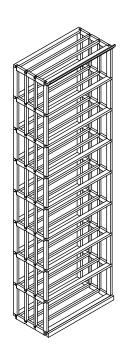

### **HARDWARE**

The following hardware is included in all kits: (QUANTITY WILL VARY, DEPENDING ON KIT.)



(QTY: 6)



(QTY: 5)



Angled Brackets (QTY: 6)



#2 Phillips Screws

(QTY: 5)

## **TOOLS REQUIRED**

The following hardware and tools are required (NOT INCLUDED):

#### IMPORTANT!

Always follow the manufacturer's instructions on how to use the nail gun, to prevent injury. Genuwine Cellars is not liable for any injury incurred while assembling the kit.





Screwdrivers #6 & #8




We Recommend A 18 Gauge Nail Gun (Use 18 gauge brad nailer, with appropriate air compressor or electric nailer set to 80psi, to

prevent splitting)

### **COMPONENTS**

The following components are included in the DOUBLE COLUMN DIAMOND BIN. (COMPONENTS WILL VARY IN QUANTITY AND SIZE, DEPENDING ON KIT.)




2 - BIN Upright 326 (QTY: 36) 3 - BIN Block 717

(QTY: 14)












(QTY: 12)


**STEP** 

For bin ladders (1), there are no fronts or backs. Front and back are visually the same. Be sure to place the ladders on flat, soft surface, so not to damage to bin ladders. Space the ladders accordingly. (Note: Ensure proper placement of ladders, and bottoms are all in same direction.)

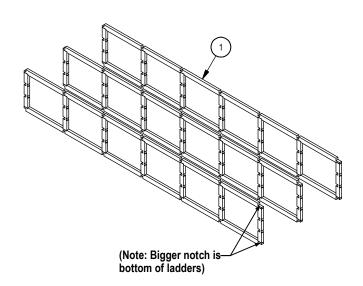

From the bottom and working your way up, place the back spacer bars (4b) according to the ladder notches. Make sure to carefully interlock the spacer bars to the ladders.

STEP

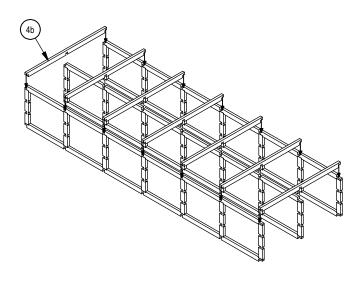

Once the spacer bars are properly placed. Start from the bottom of the rack, firmly apply pressure to lock the joint. Then apply two nails with a nail-gun, to each joint. Remember to firmly lock in each joint.

Firm Pressure

Apply Nails

Apply Nails

While backs are still facing up, screw the angled brackets, to the back spacer bars.


Brackets

Brackets

Brackets



With the help of another person, turn the rack so the back is on the floor, and the front is facing up. Starting from bottom up, place the front spacer bars (4a) according to the ladder notches. Make sure to carefully interlock the spacer bars to the ladders.

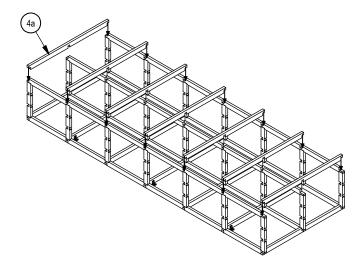

From the front and bottom of the rack, firmly apply pressure to lock the joint. Then apply two nails with a nail-gun, to each joint. Remember to firmly lock in each joint.


Firm Pressure

Apply Nails

C

STEP

From the bottom of the bin, working with one row. Place two bin block (3) into the notches. Make sure the notches on the bin block is facing up as shown. (Note: Do not continue to next row)

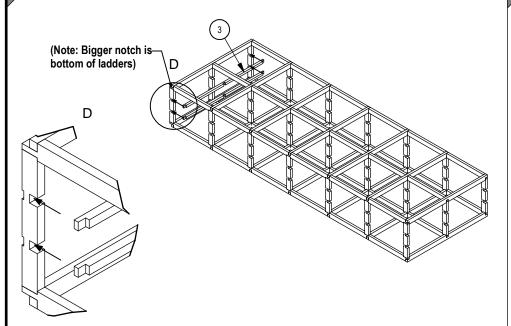

STEP 8

Flush the ends of the bin block to the outside of the ladders. Hold the joint tightly in place, and apply two nails as shown. Apply nails to the middle joints and the other end of the bin block.

