


WALLYYAK!

TM

INSTALLATION

- 1** Lay print face down on smooth surface. Use Frame corner guides to draw alignment marks in each corner. Flip Frame over and place within your alignment marks. Fold edges of paper over into u-groove of Frame and secure with provided 10 clips.

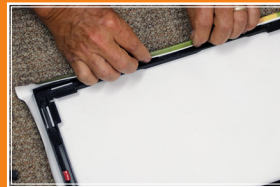

Pro tip: to avoid surface wrinkles, paper should be wrapped flush around the side of the frame but not pulled tight!



- 2** Hang Frame Mount, by removing the protective layer from adhesive strip, level, and press in place.



- 3** Add additional Frame Mounts, by aligning and "butting" up to previous Frame Mounts.



- 4** Snap Frames to Frame Mounts on wall.



For additional video instructions and information please visit:
www.WallyYak.com