

# Instructions


Dual Row Corinthian Low Bed

HEADBOARDS LTD  
headboards.co.uk

## Step 01 : Attach Corner Brackets

Attach 4 Corner Brackets, two on each of the side rails. Use 12 ( M6 x 30mm ) Bolts & Washers.


Note : Please do not tighten fully , Keep All Loosely Bolted. You will tighten these fully in Step 3.

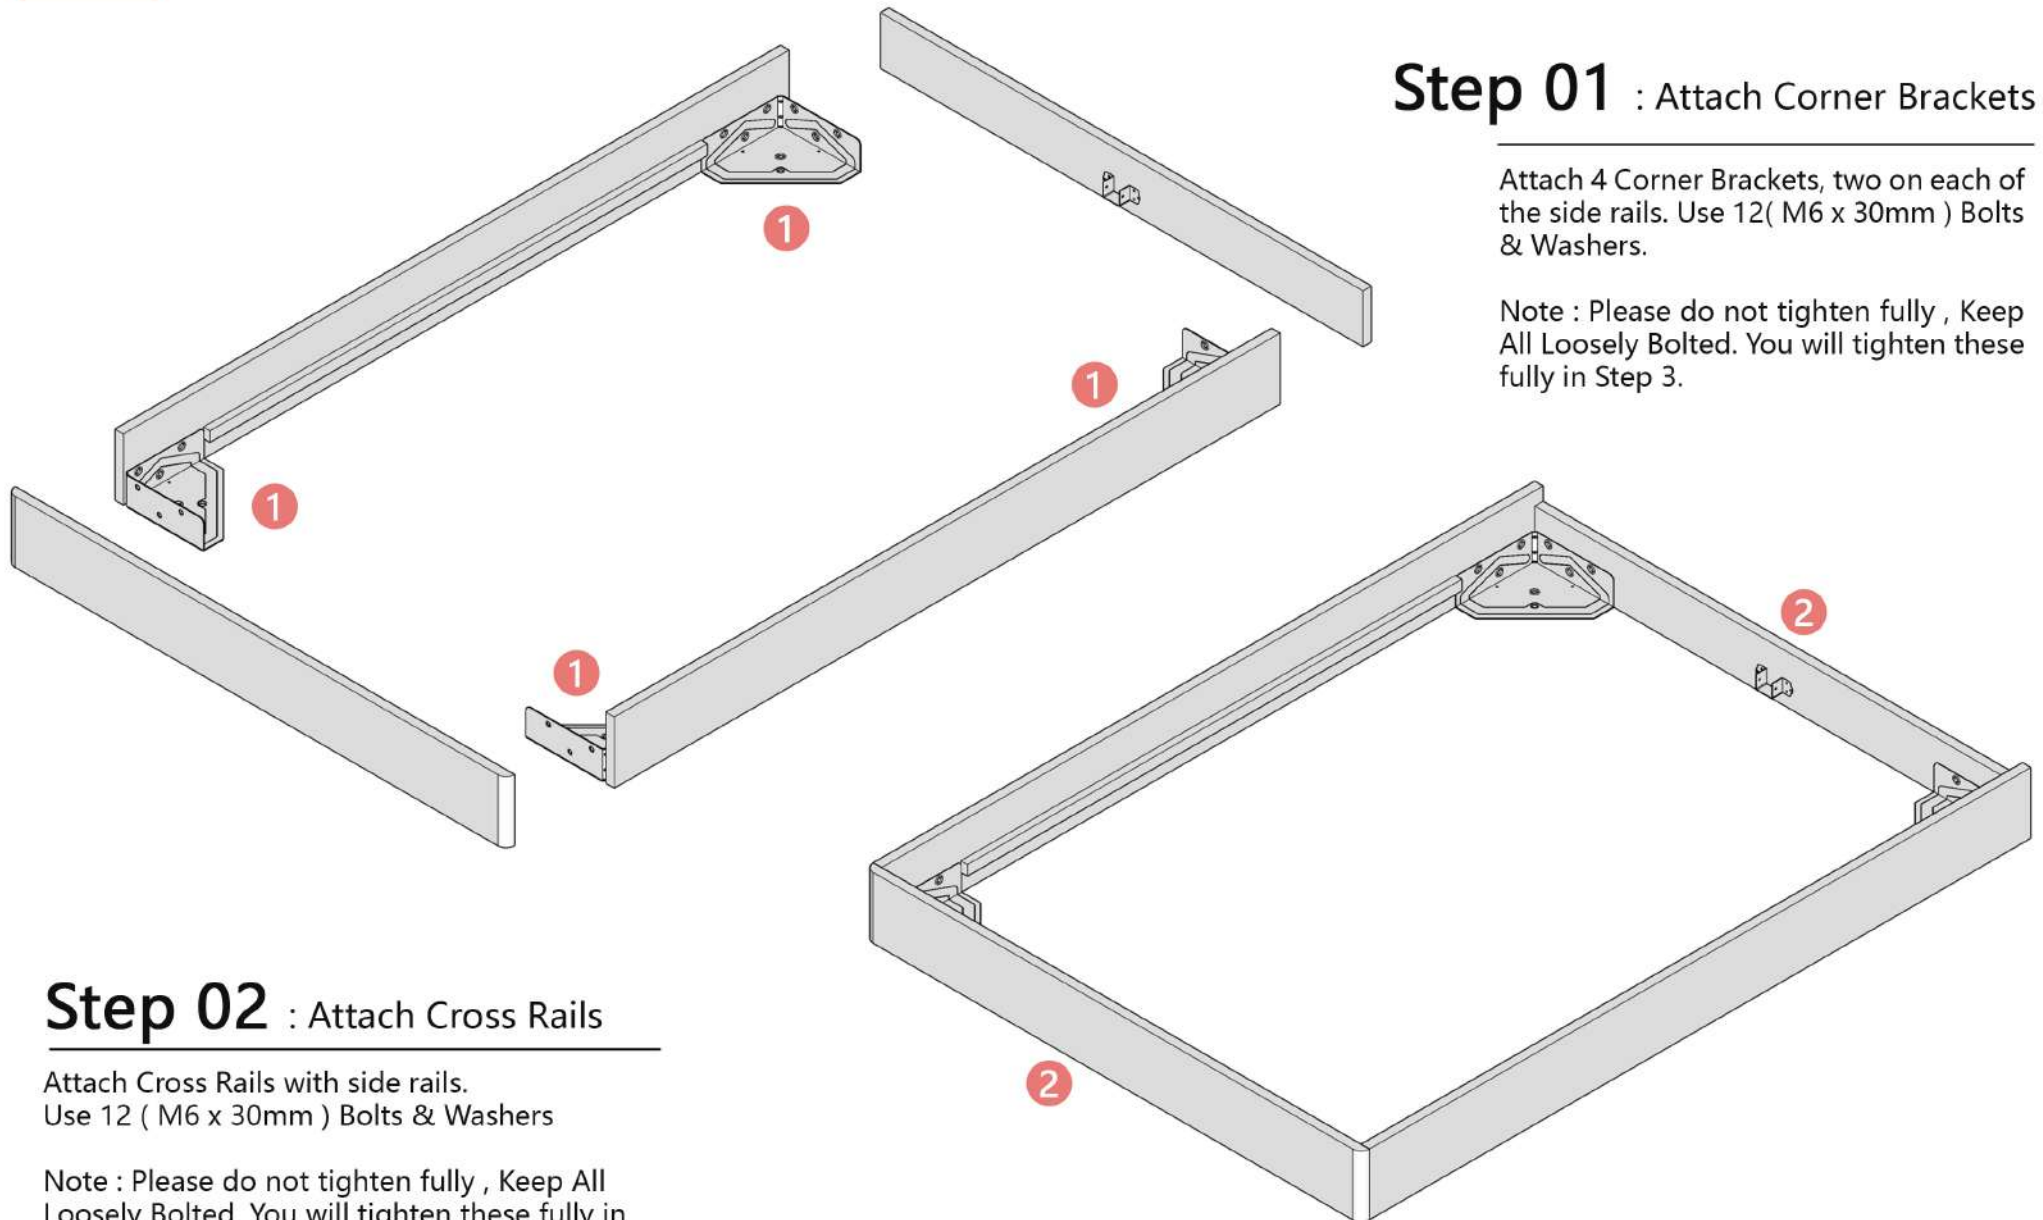

## Step 02 : Attach Cross Rails

Attach Cross Rails with side rails.  
Use 12 ( M6 x 30mm ) Bolts & Washers

Note : Please do not tighten fully , Keep All Loosely Bolted. You will tighten these fully in Step 3.

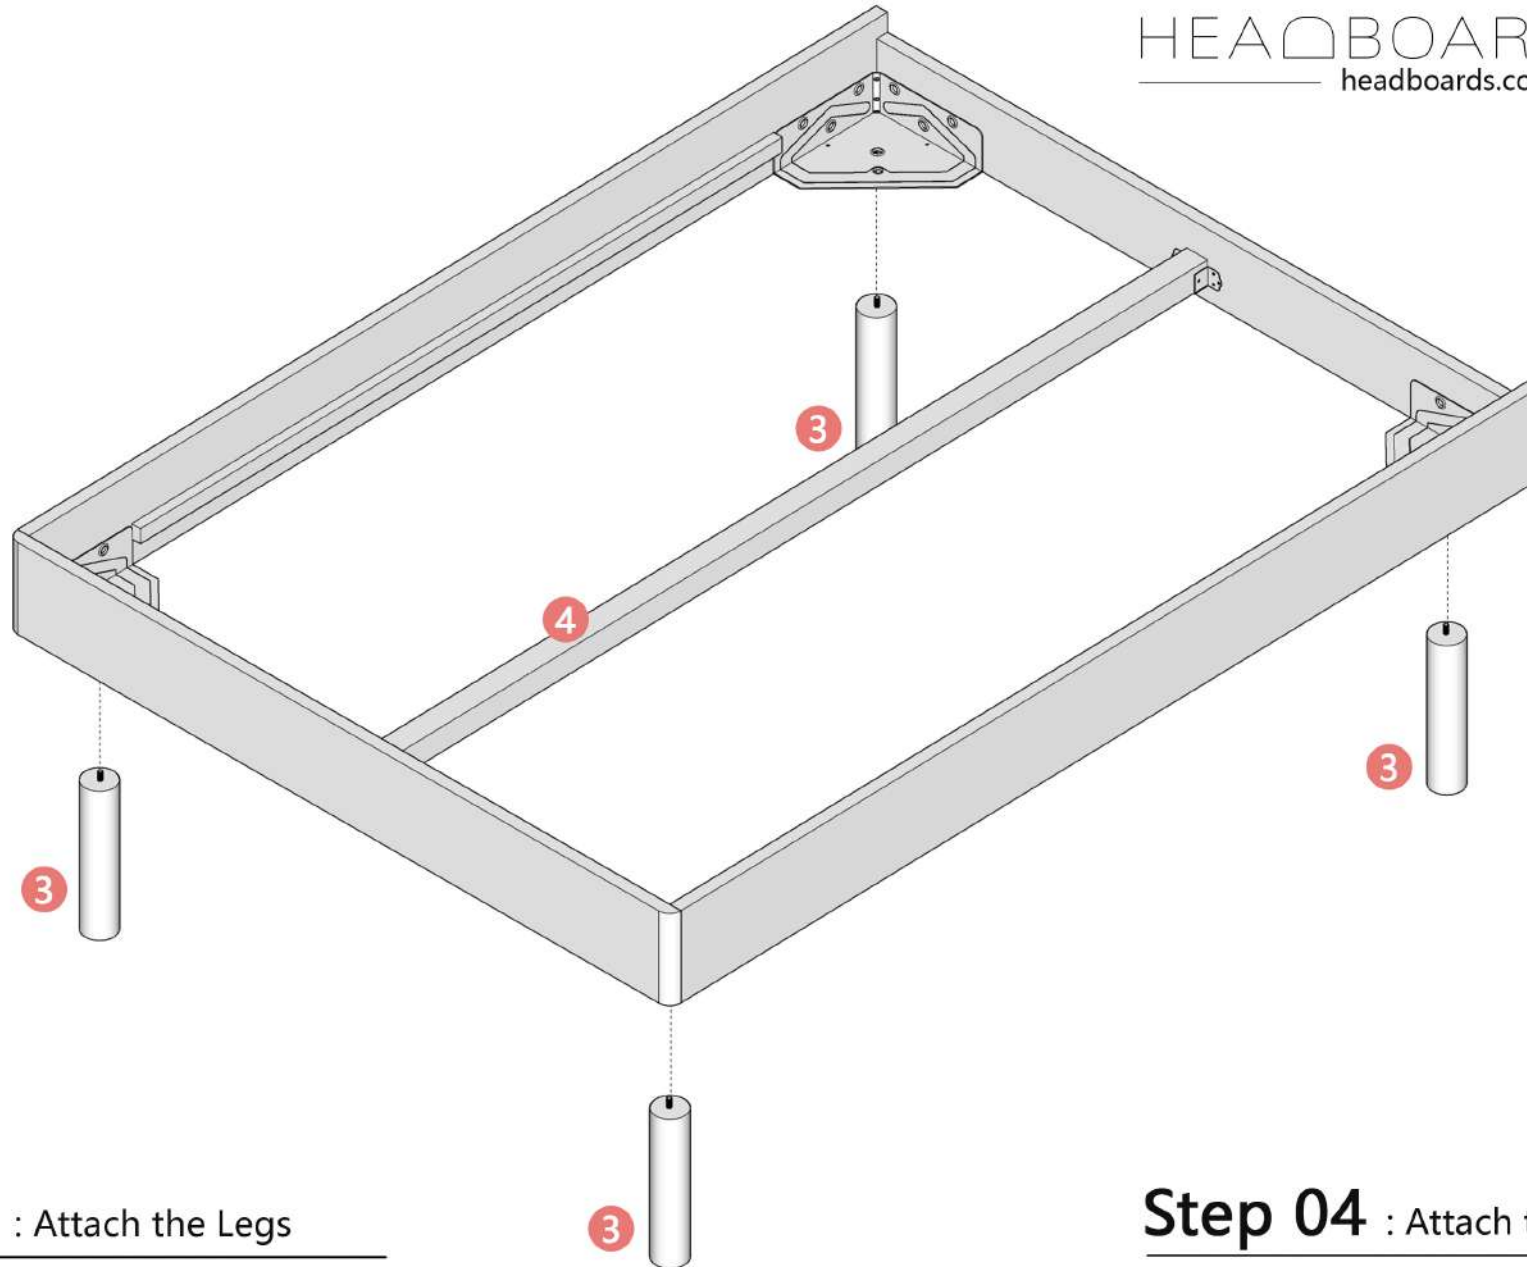


### Step 03 : Attach the Legs

a. Attach All four Legs by using Nuts and Washers.

b. Tighten the All Loosely Bolted Fixings of ( Step 1 & 2 ) Corner Brackets with Side Rails and Cross Rails as frame is settled now in gravitational force.

### Step 04 : Attach the Centre Rail

Place the Centre Rail inside U-Shaped brackets.

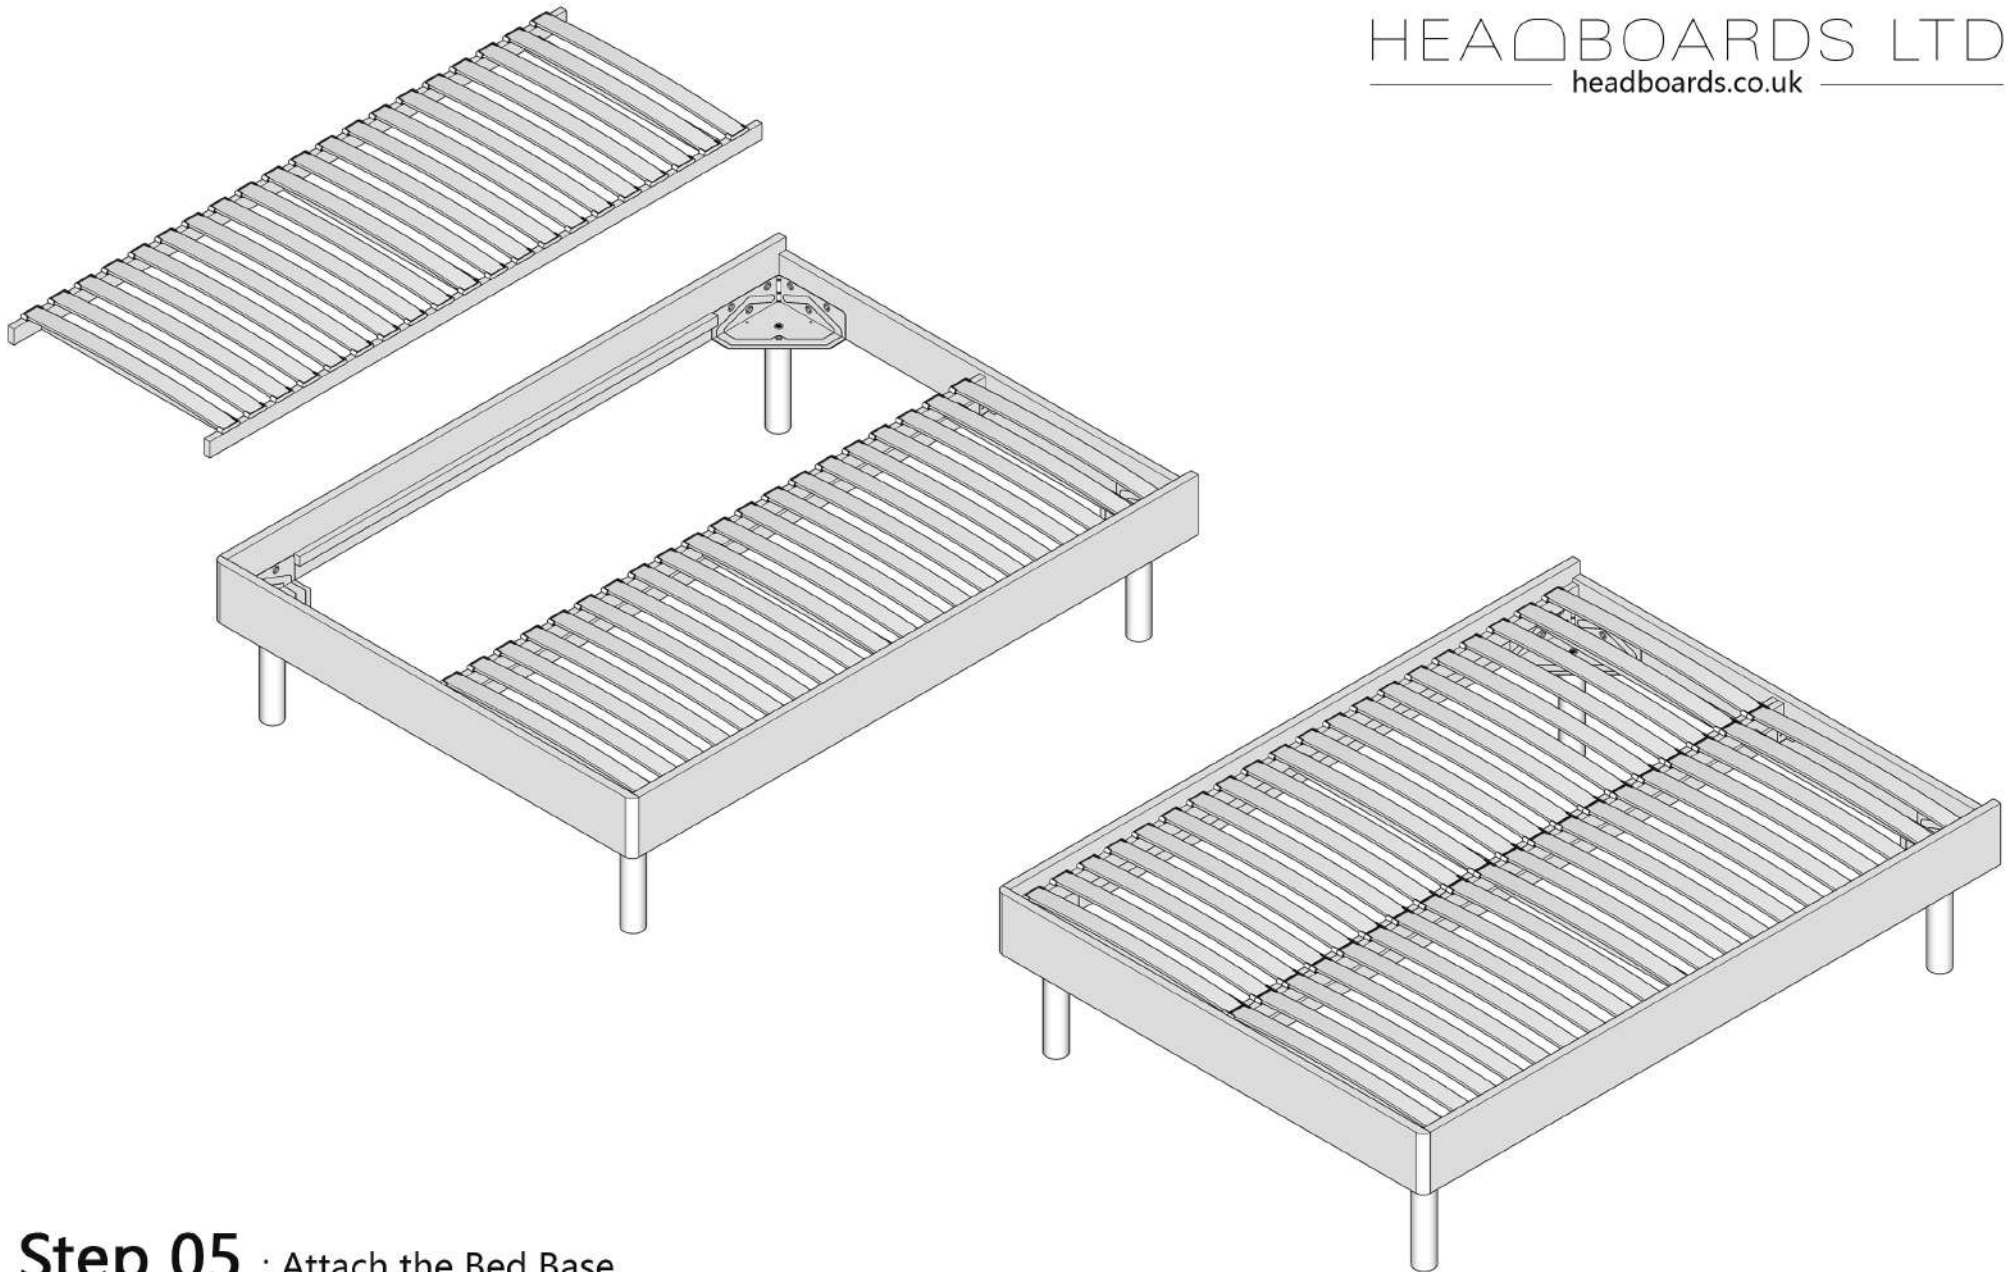

## **Step 05** : Attach the Bed Base

Drop-in your pre-assembled Slatted Bed Base one by one and use the connecting bolts provided to attach them to one another.