

Instructions


Single Row Corinthian Low Bed

HEADBOARDS LTD
headboards.co.uk

Step 01 : Attach Corner Brackets

Attach 4 Corner Brackets, two on each of the side rails. Use 12 (M6 x 30mm) Bolts & Washers.


Note : Please do not tighten fully , Keep All Loosely Bolted. You will tighten these fully in Step 3.

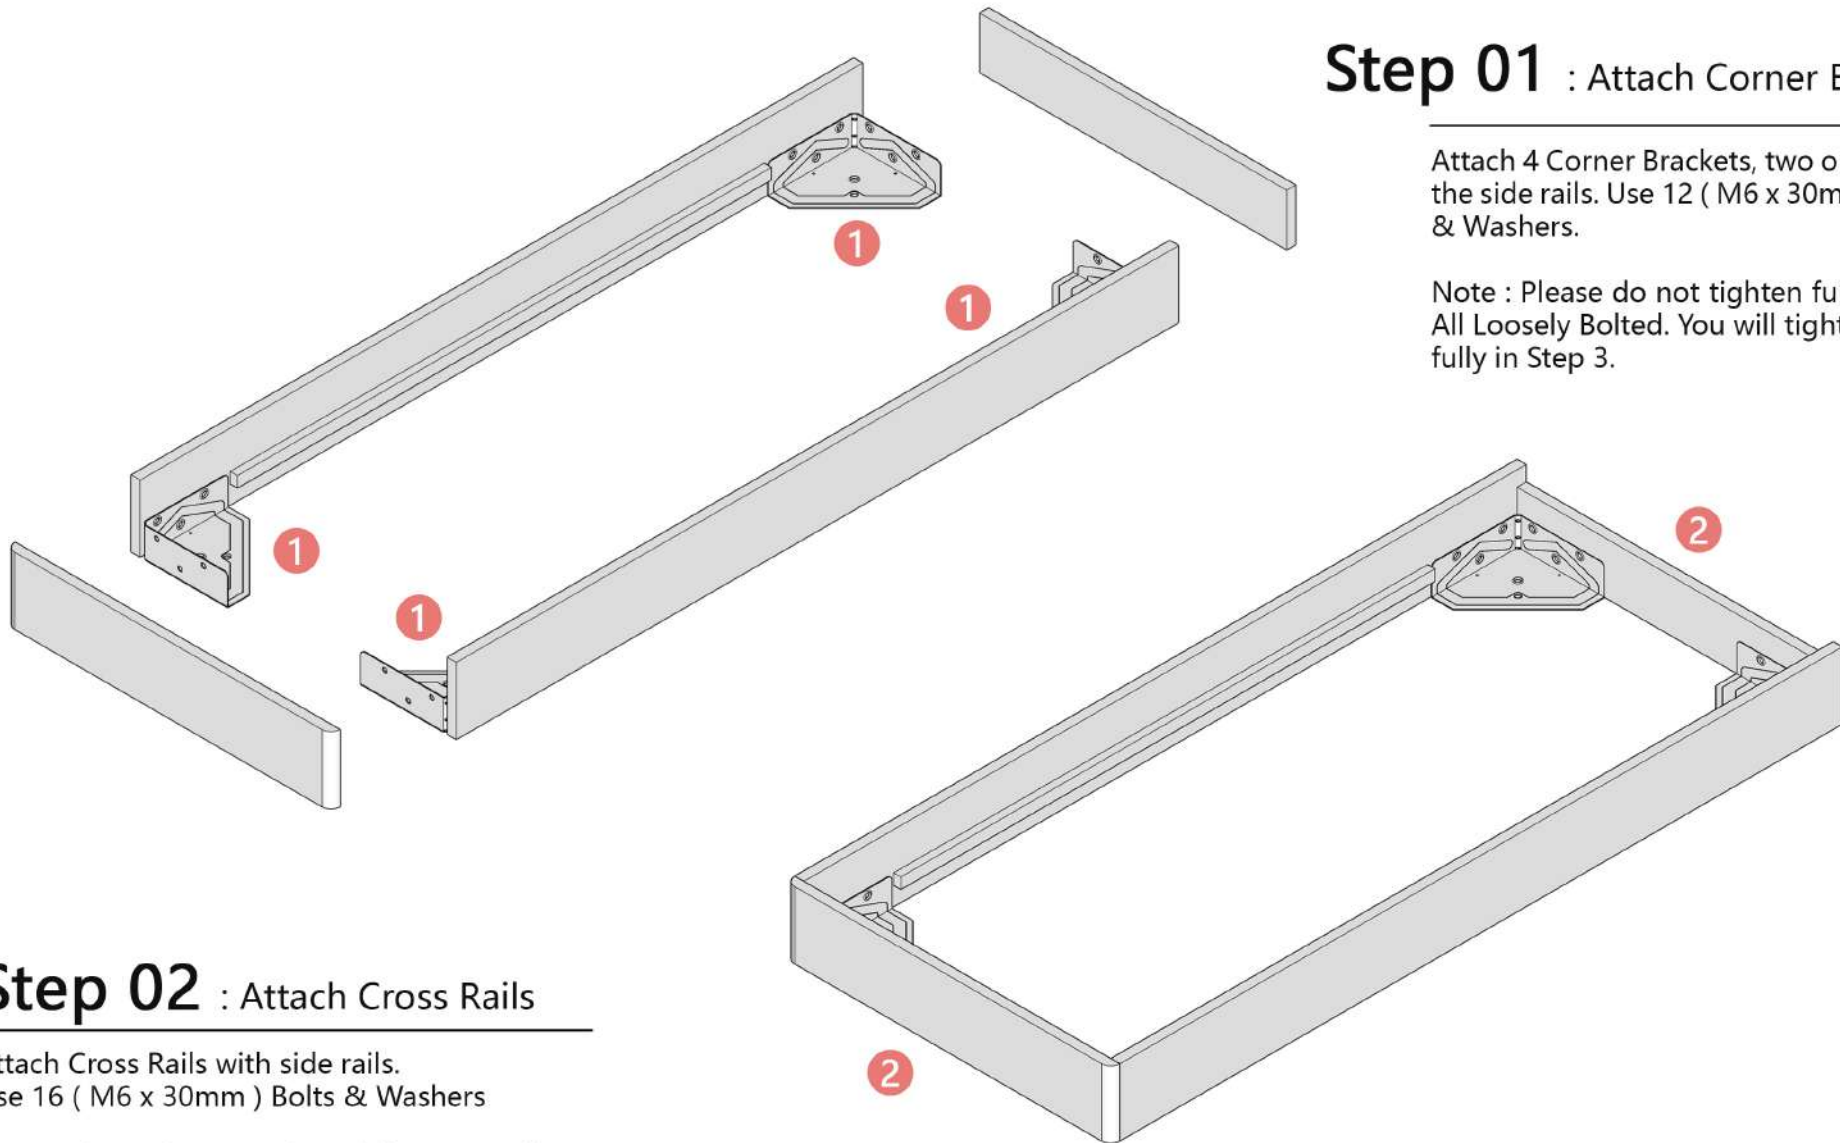

Step 02 : Attach Cross Rails

Attach Cross Rails with side rails.
Use 16 (M6 x 30mm) Bolts & Washers

Note : Please do not tighten fully , Keep All Loosely Bolted. You will tighten these fully in Step 3.

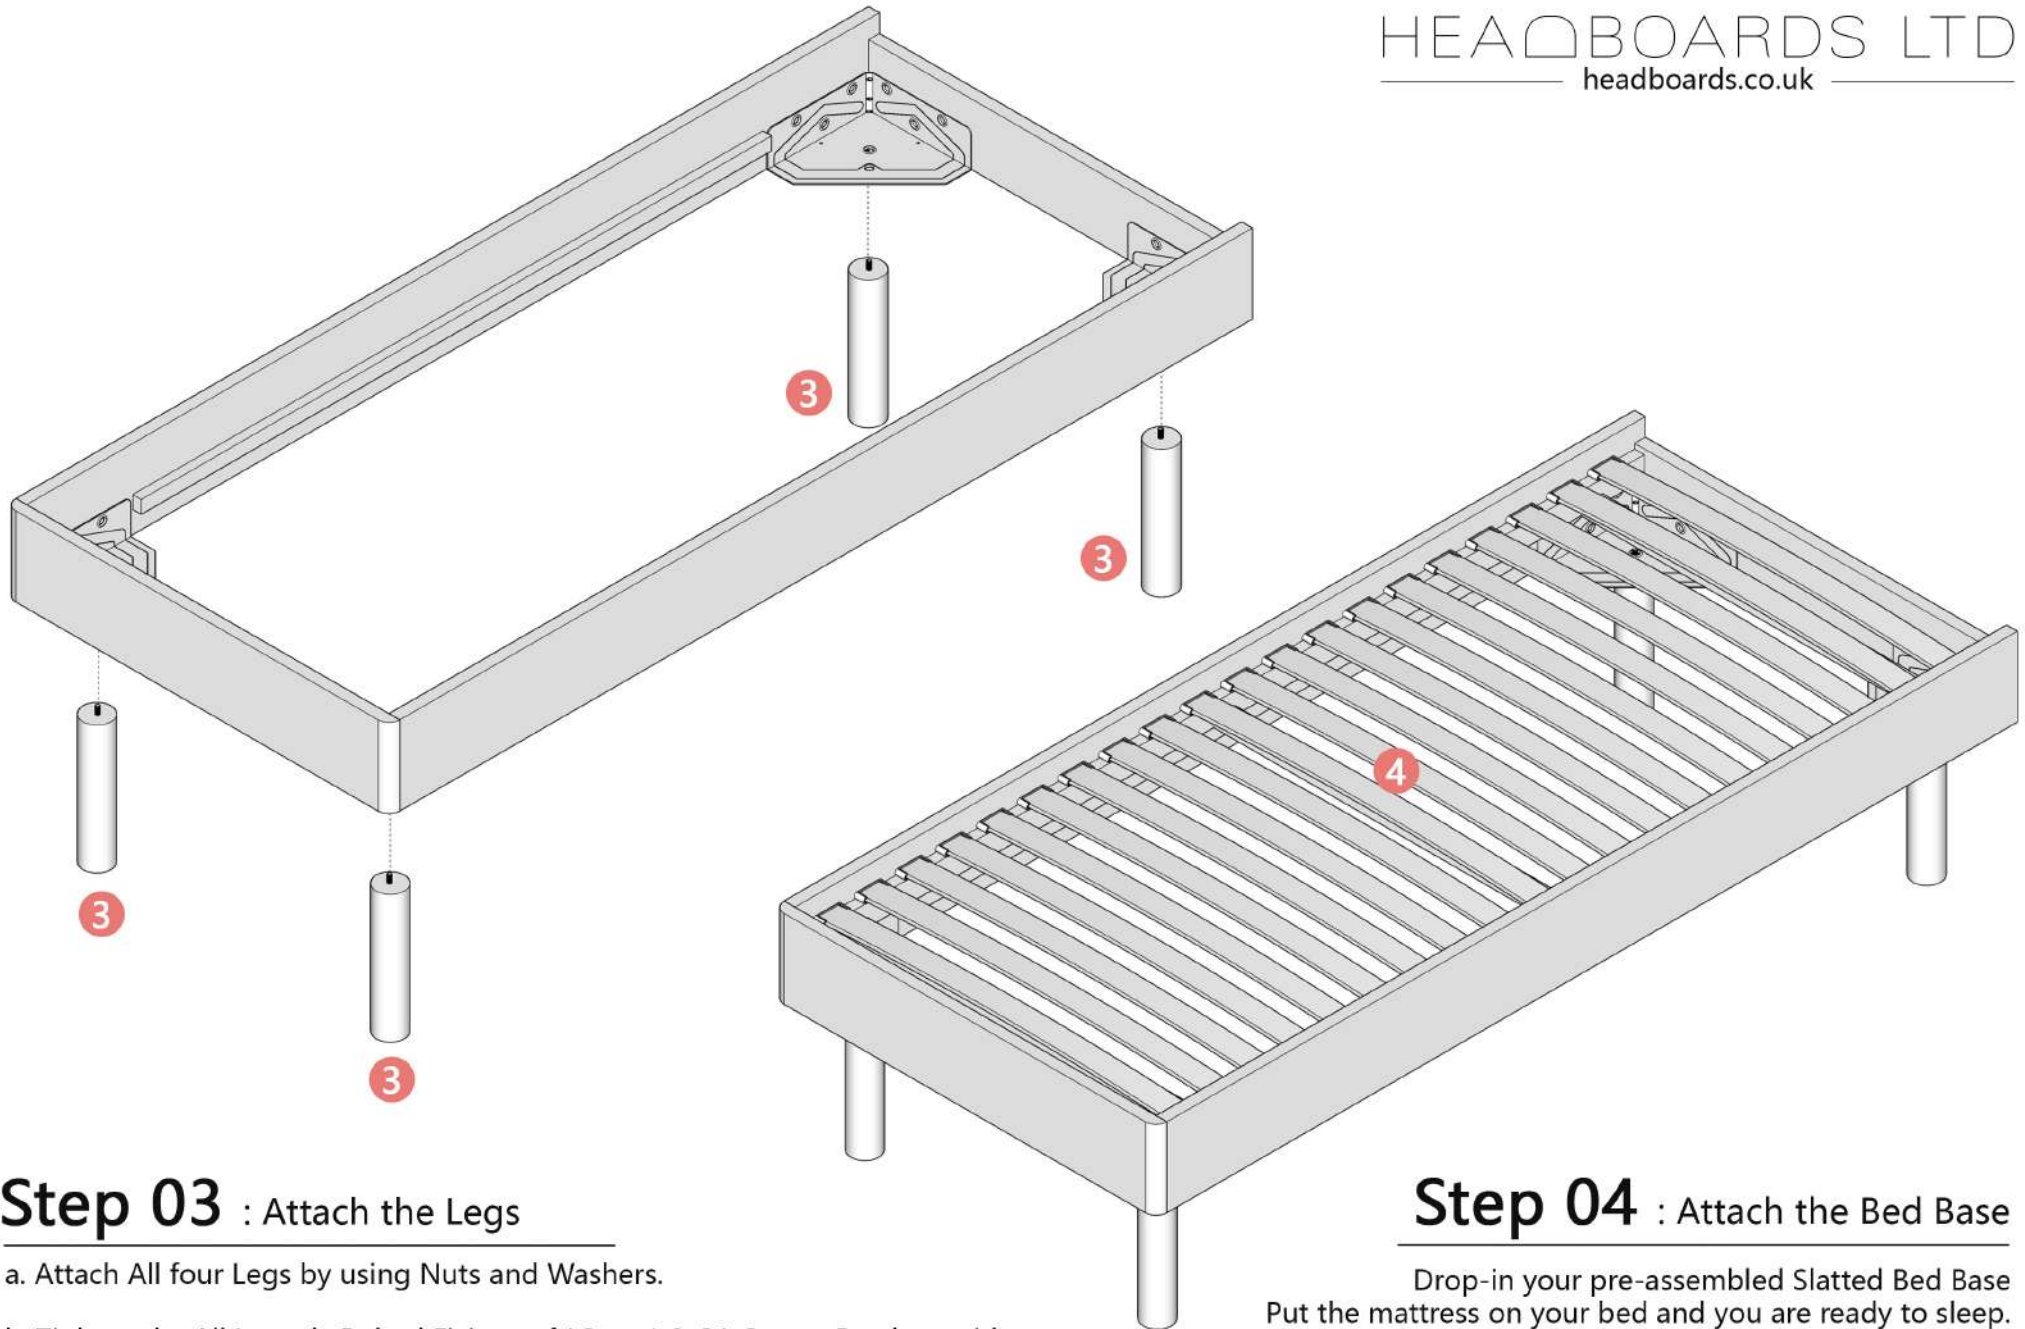

Step 03 : Attach the Legs

a. Attach All four Legs by using Nuts and Washers.

b. Tighten the All Loosely Bolted Fixings of (Step 1 & 2) Corner Brackets with Side Rails and Cross Rails as frame is settled now in gravitational force.

Step 04 : Attach the Bed Base

Drop-in your pre-assembled Slatted Bed Base
Put the mattress on your bed and you are ready to sleep.