


Instructions

Double Row Fleming Bed

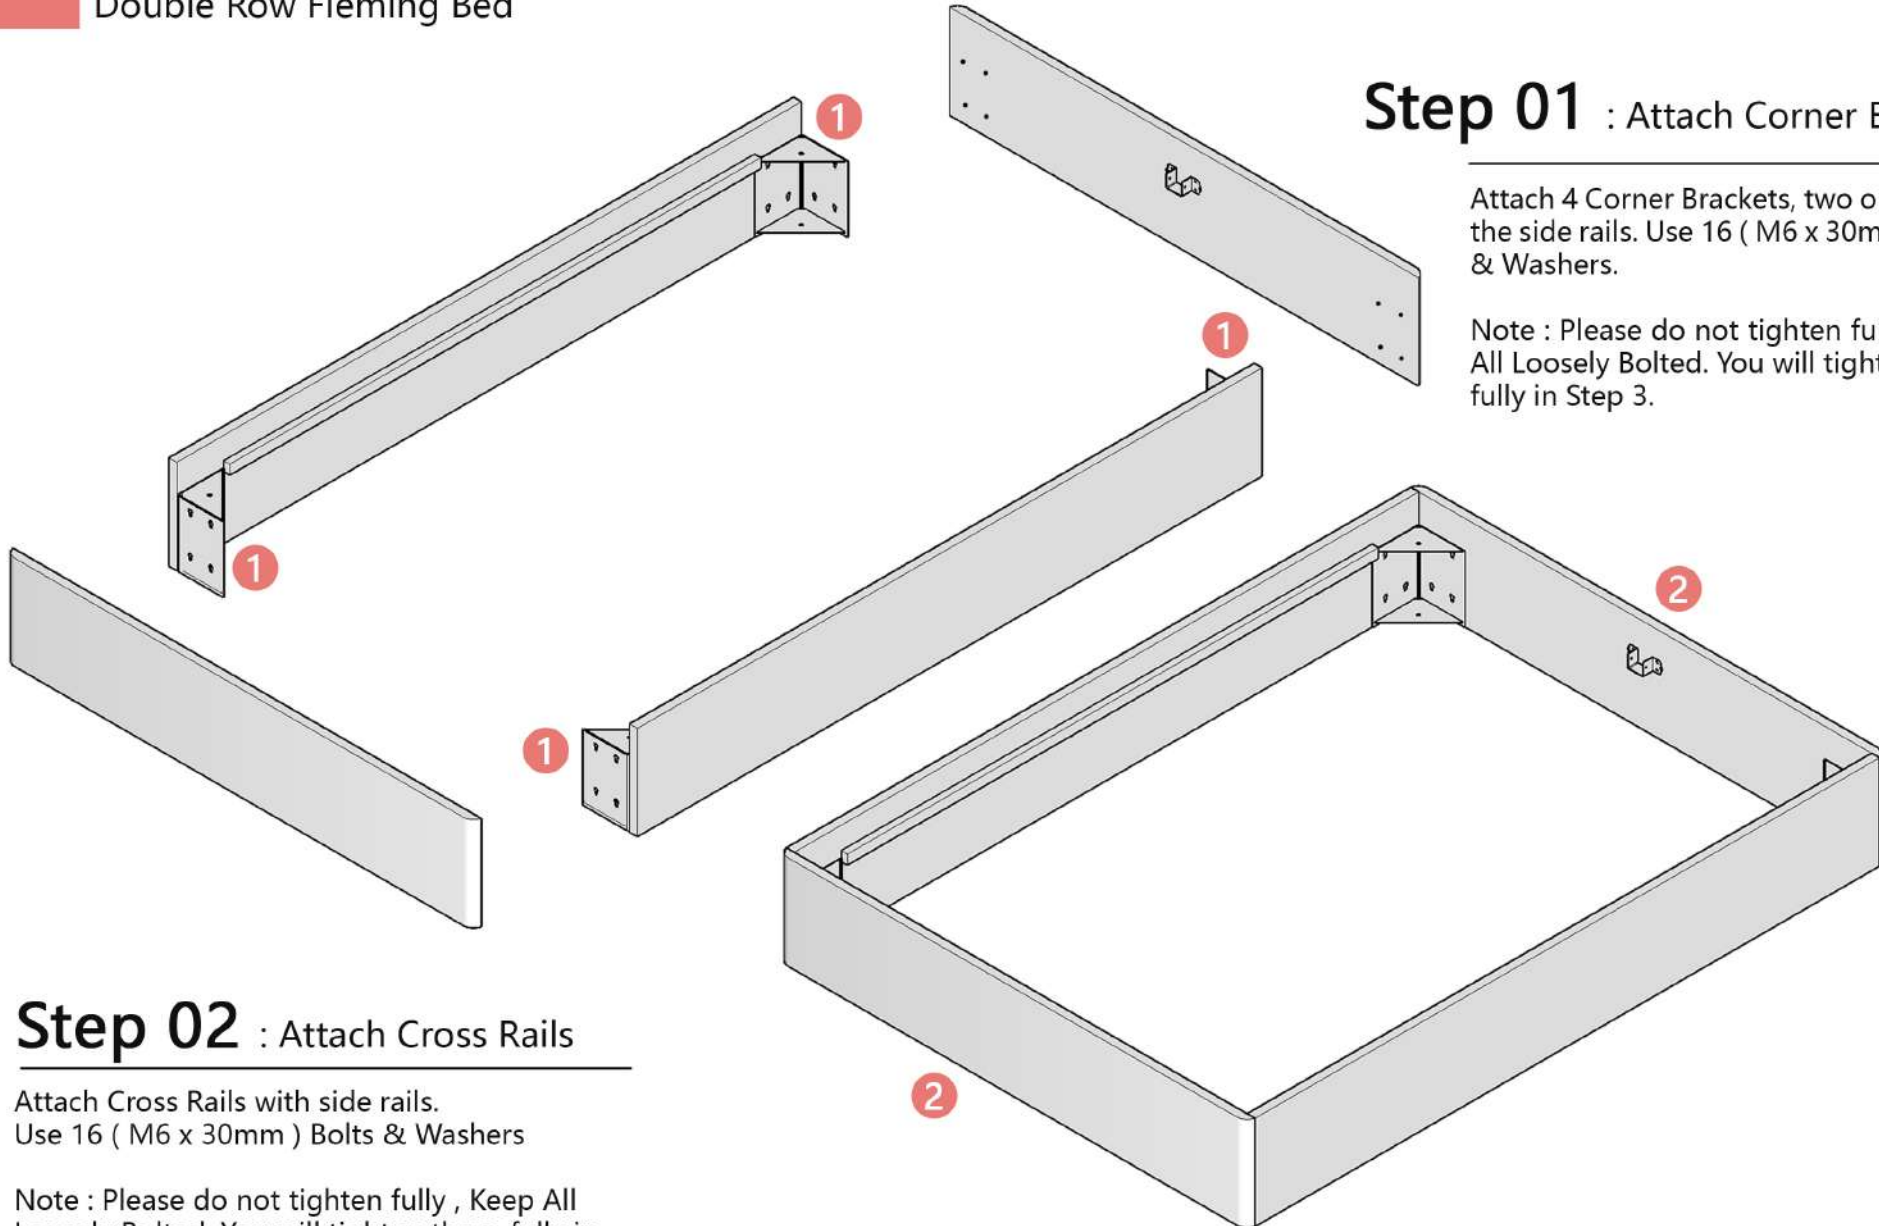

Step 01 : Attach Corner Brackets


Attach 4 Corner Brackets, two on each of the side rails. Use 16 (M6 x 30mm) Bolts & Washers.

Note : Please do not tighten fully , Keep All Loosely Bolted. You will tighten these fully in Step 3.

Step 02 : Attach Cross Rails

Attach Cross Rails with side rails.
Use 16 (M6 x 30mm) Bolts & Washers

Note : Please do not tighten fully , Keep All Loosely Bolted. You will tighten these fully in Step 3.

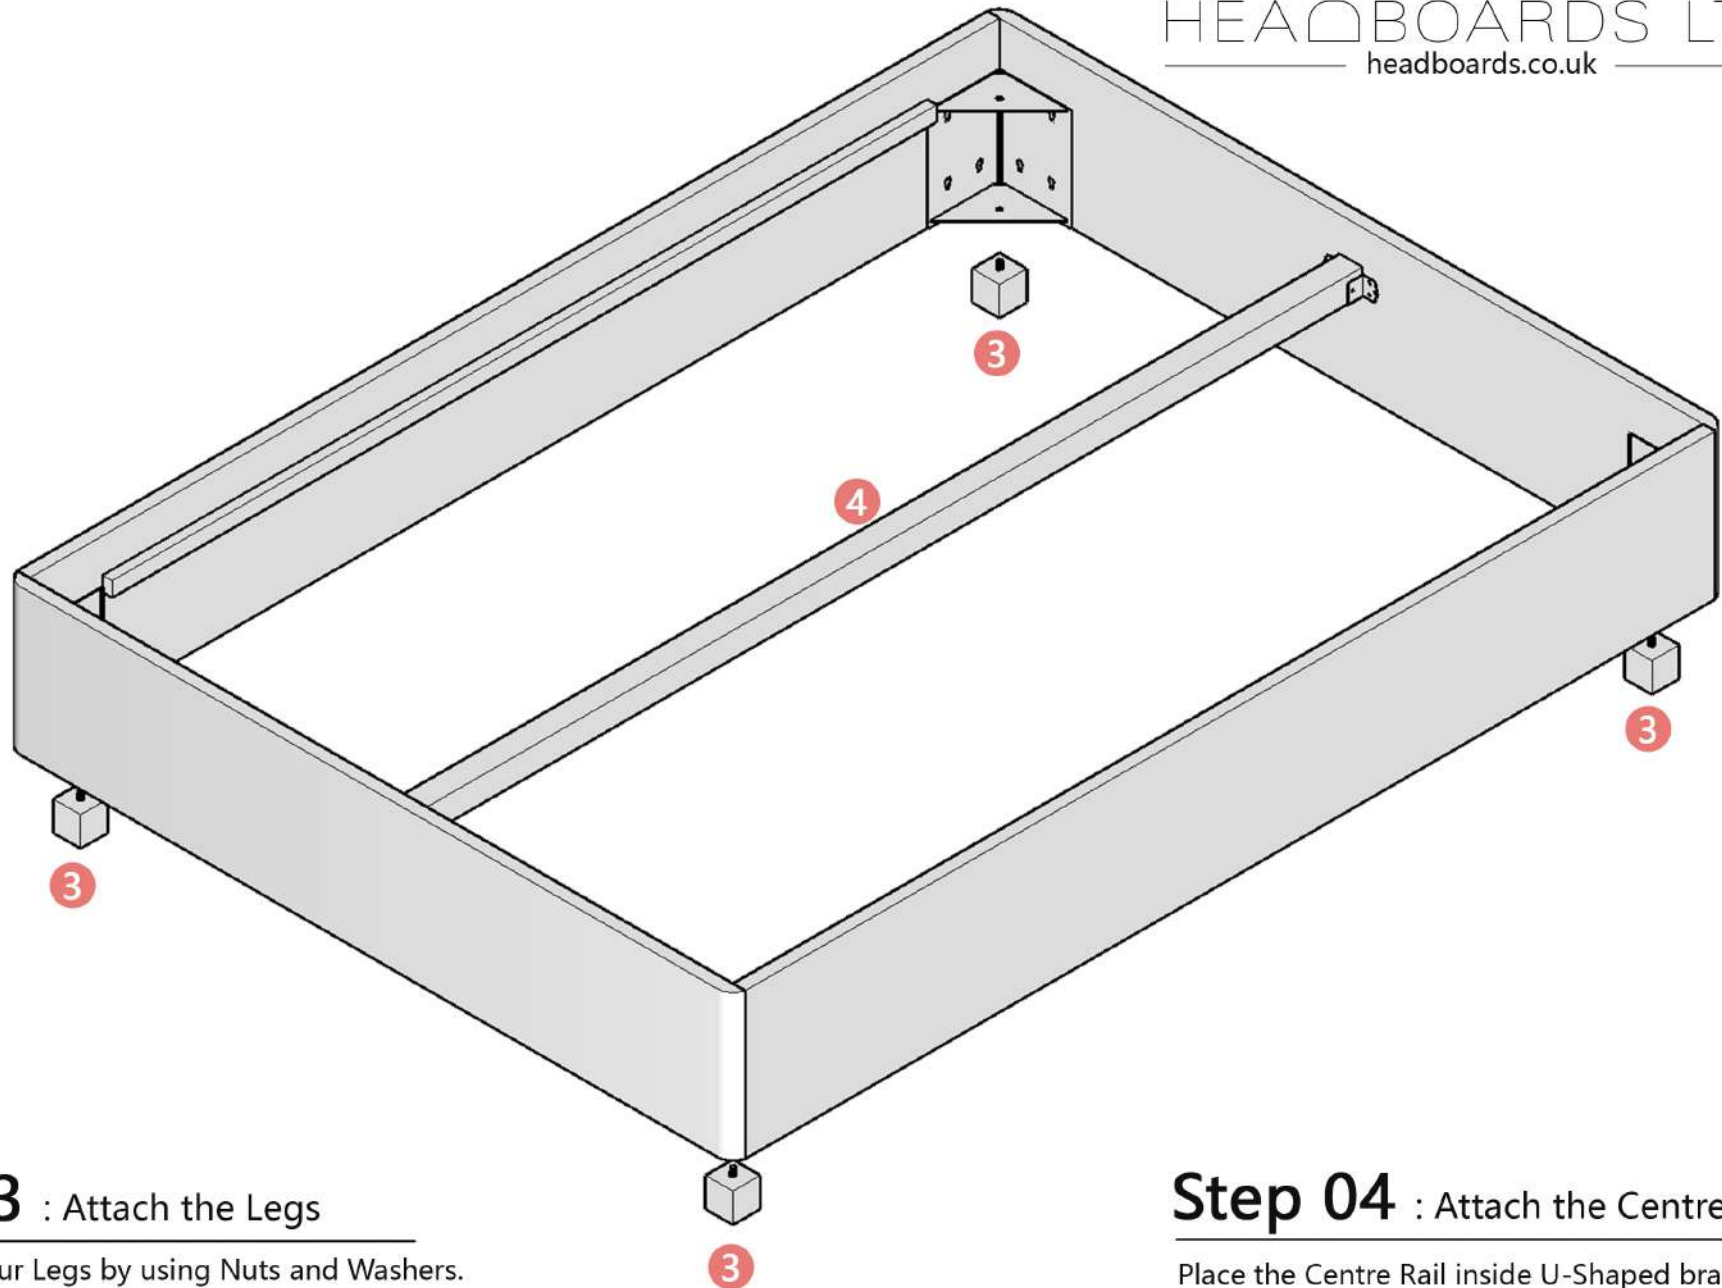


Step 03 : Attach the Legs

a. Attach All four Legs by using Nuts and Washers.

b. Tighten the All Loosely Bolted Fixings of (Step 1 & 2) Corner Brackets with Side Rails and Cross Rails as frame is settled now in gravitational force.

Step 04 : Attach the Centre Rail

Place the Centre Rail inside U-Shaped brackets.

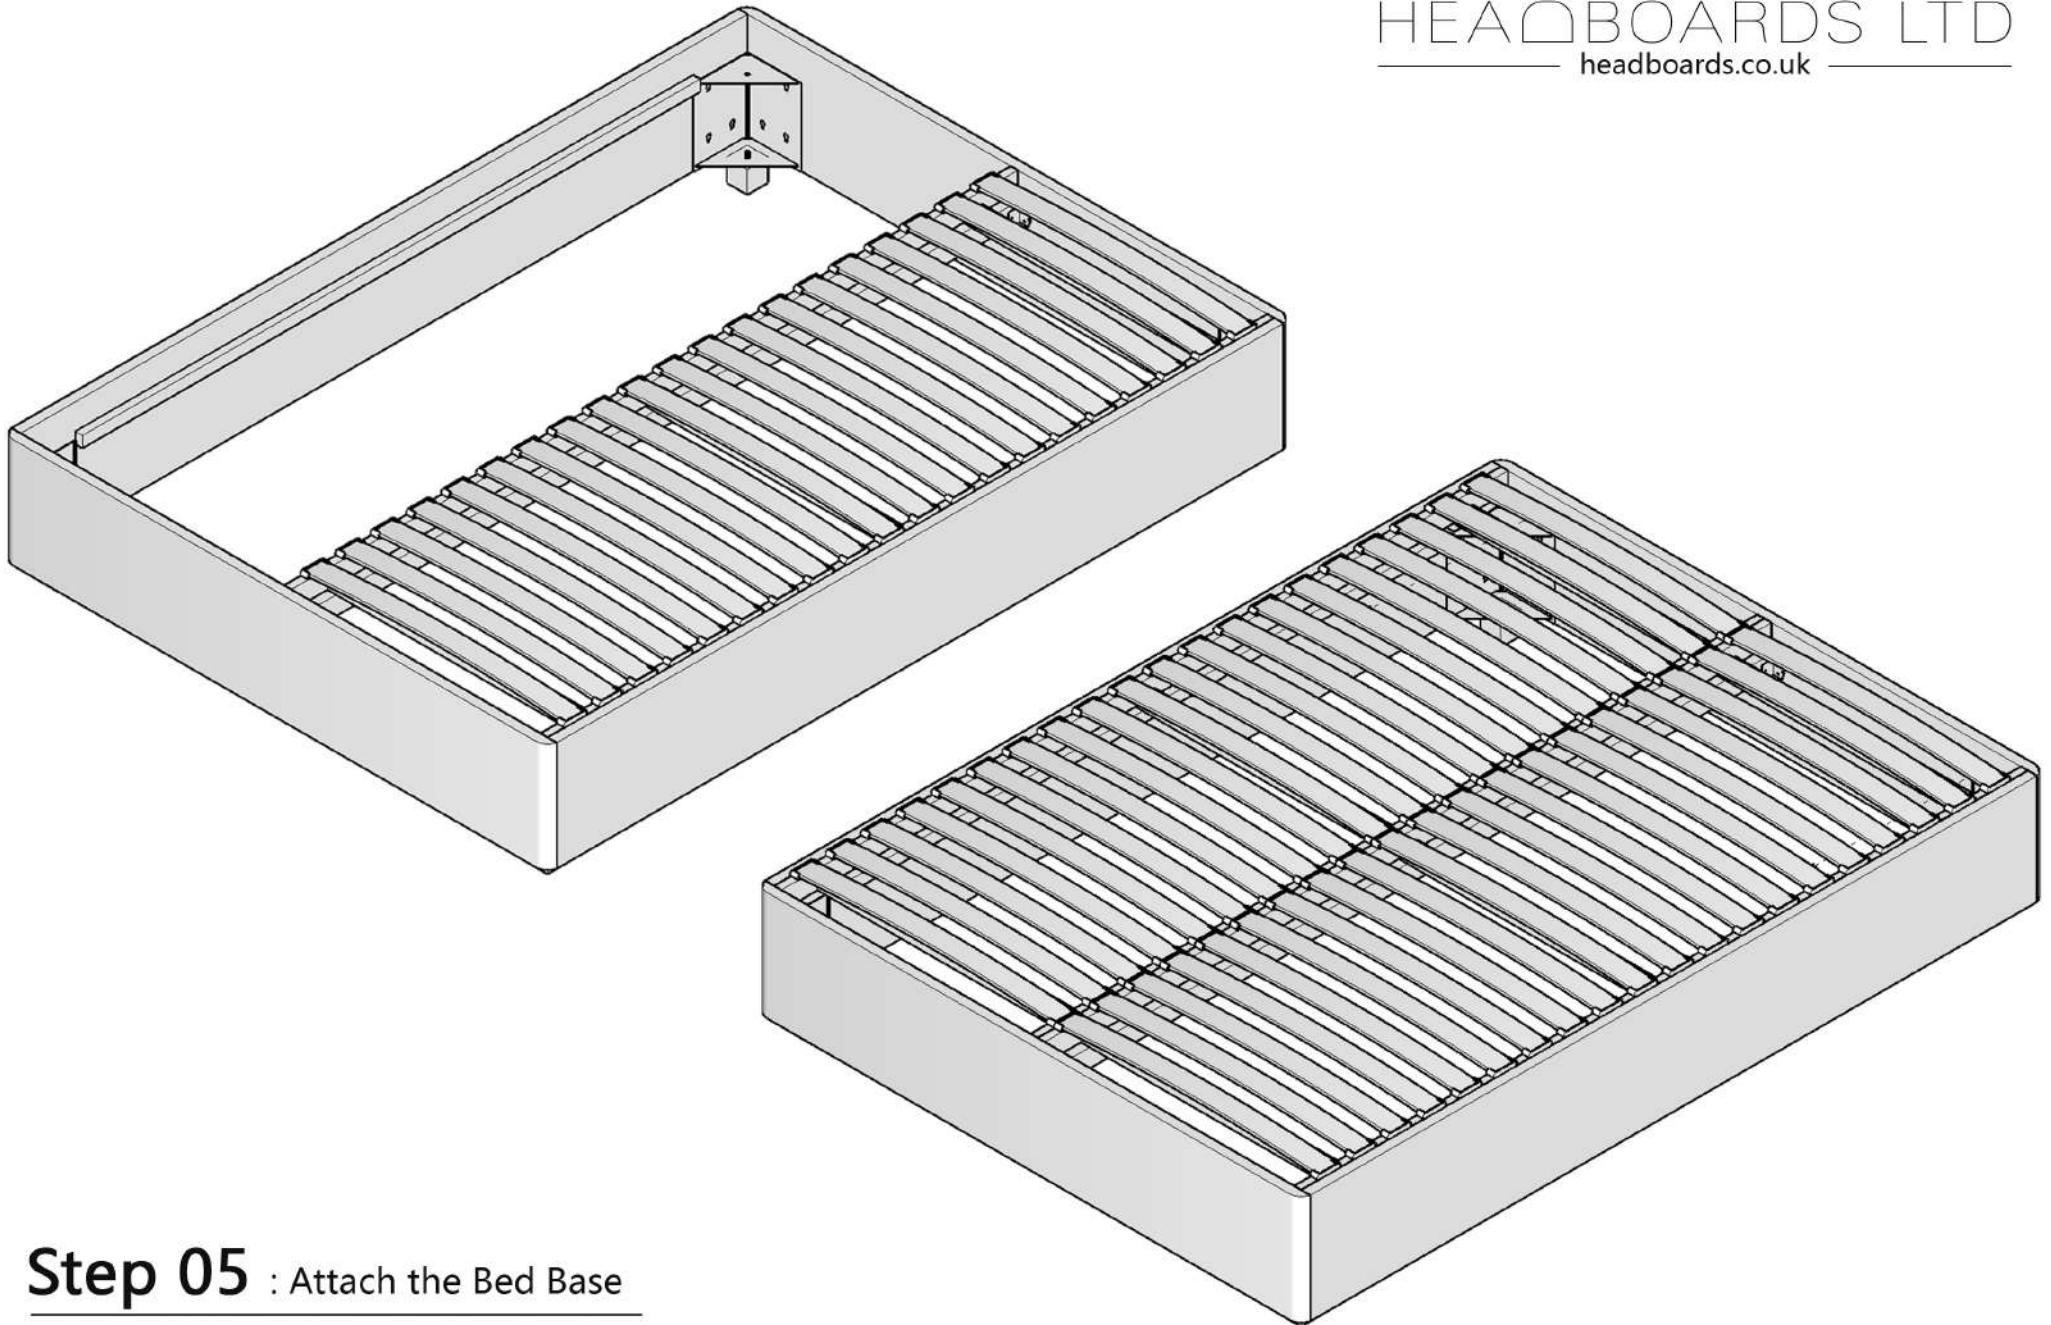

Step 05 : Attach the Bed Base

Drop-in your pre-assembled Slatted Bed Base one by one and use the connecting bolts provided to attach them to one another.