


# Instructions

## Single Row Fleming Bed

### Step 01 : Attach Corner Brackets

Attach 4 Corner Brackets, two on each of the side rails. Use 16 ( M6 x 30mm ) Bolts & Washers.


Note : Please do not tighten fully , Keep All Loosely Bolted. You will tighten these fully in Step 3.

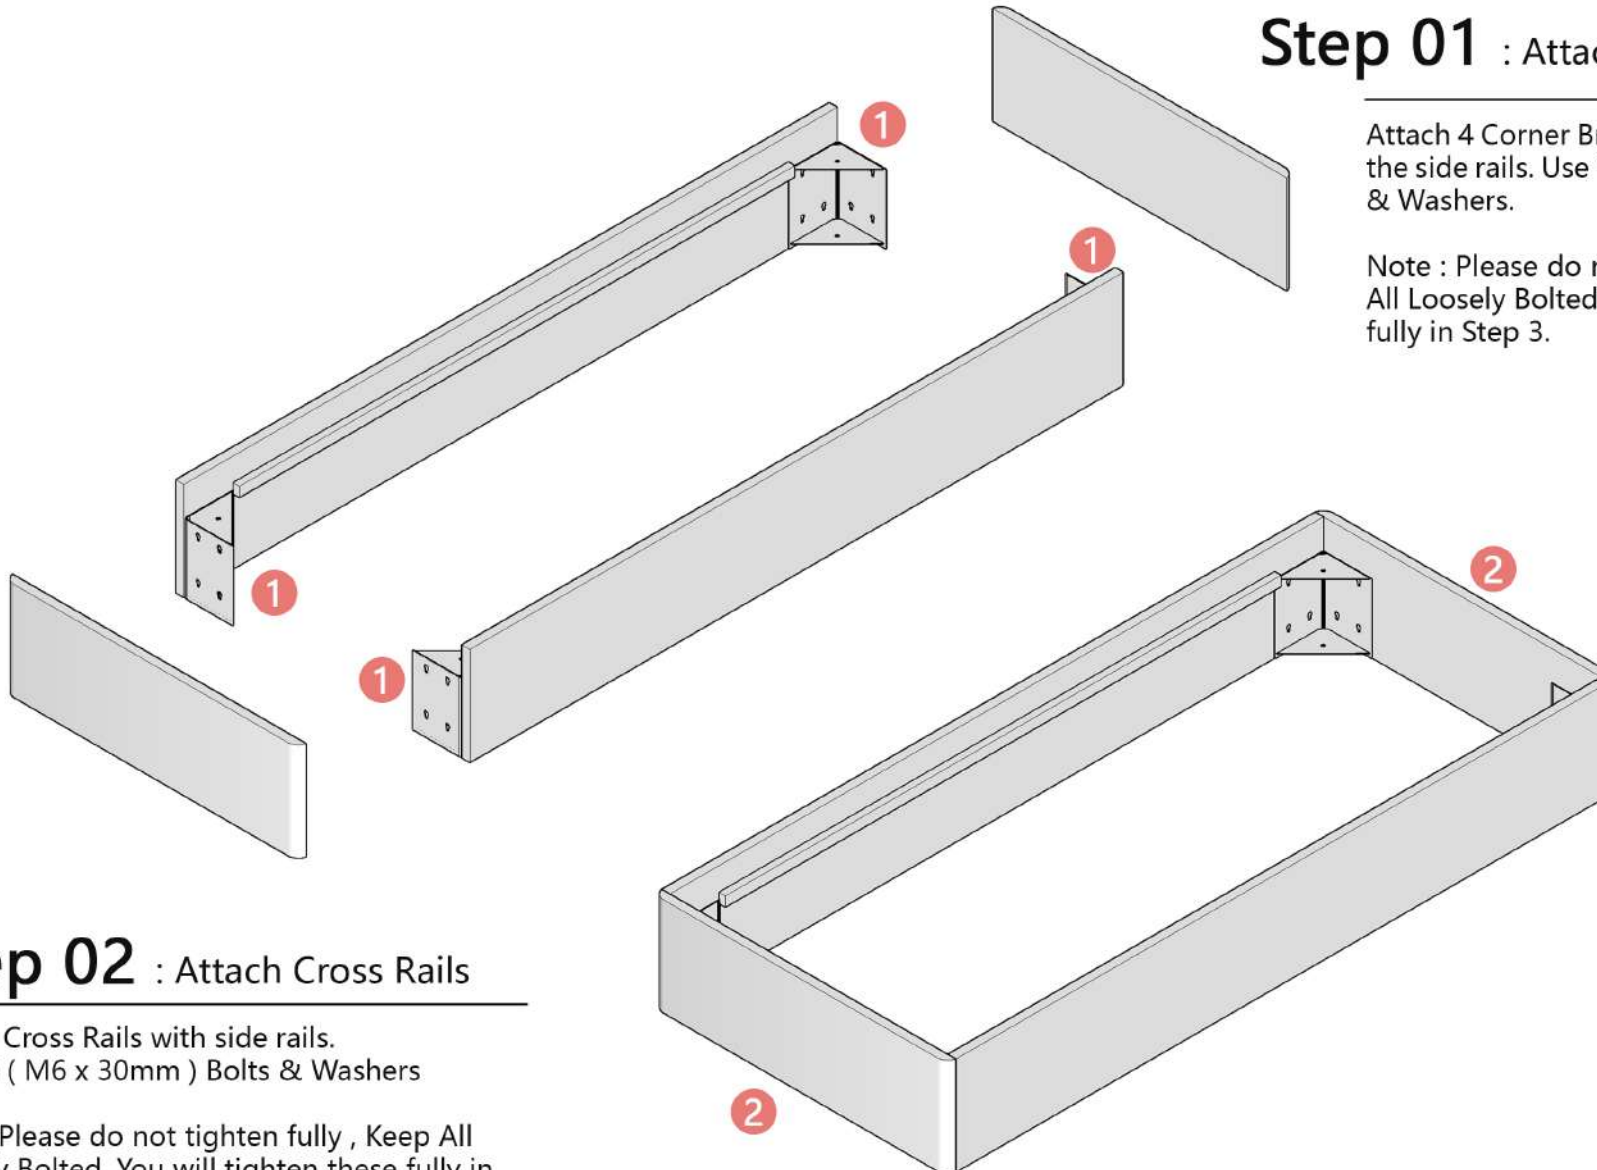

### Step 02 : Attach Cross Rails

Attach Cross Rails with side rails.  
Use 16 ( M6 x 30mm ) Bolts & Washers

Note : Please do not tighten fully , Keep All Loosely Bolted. You will tighten these fully in Step 3.

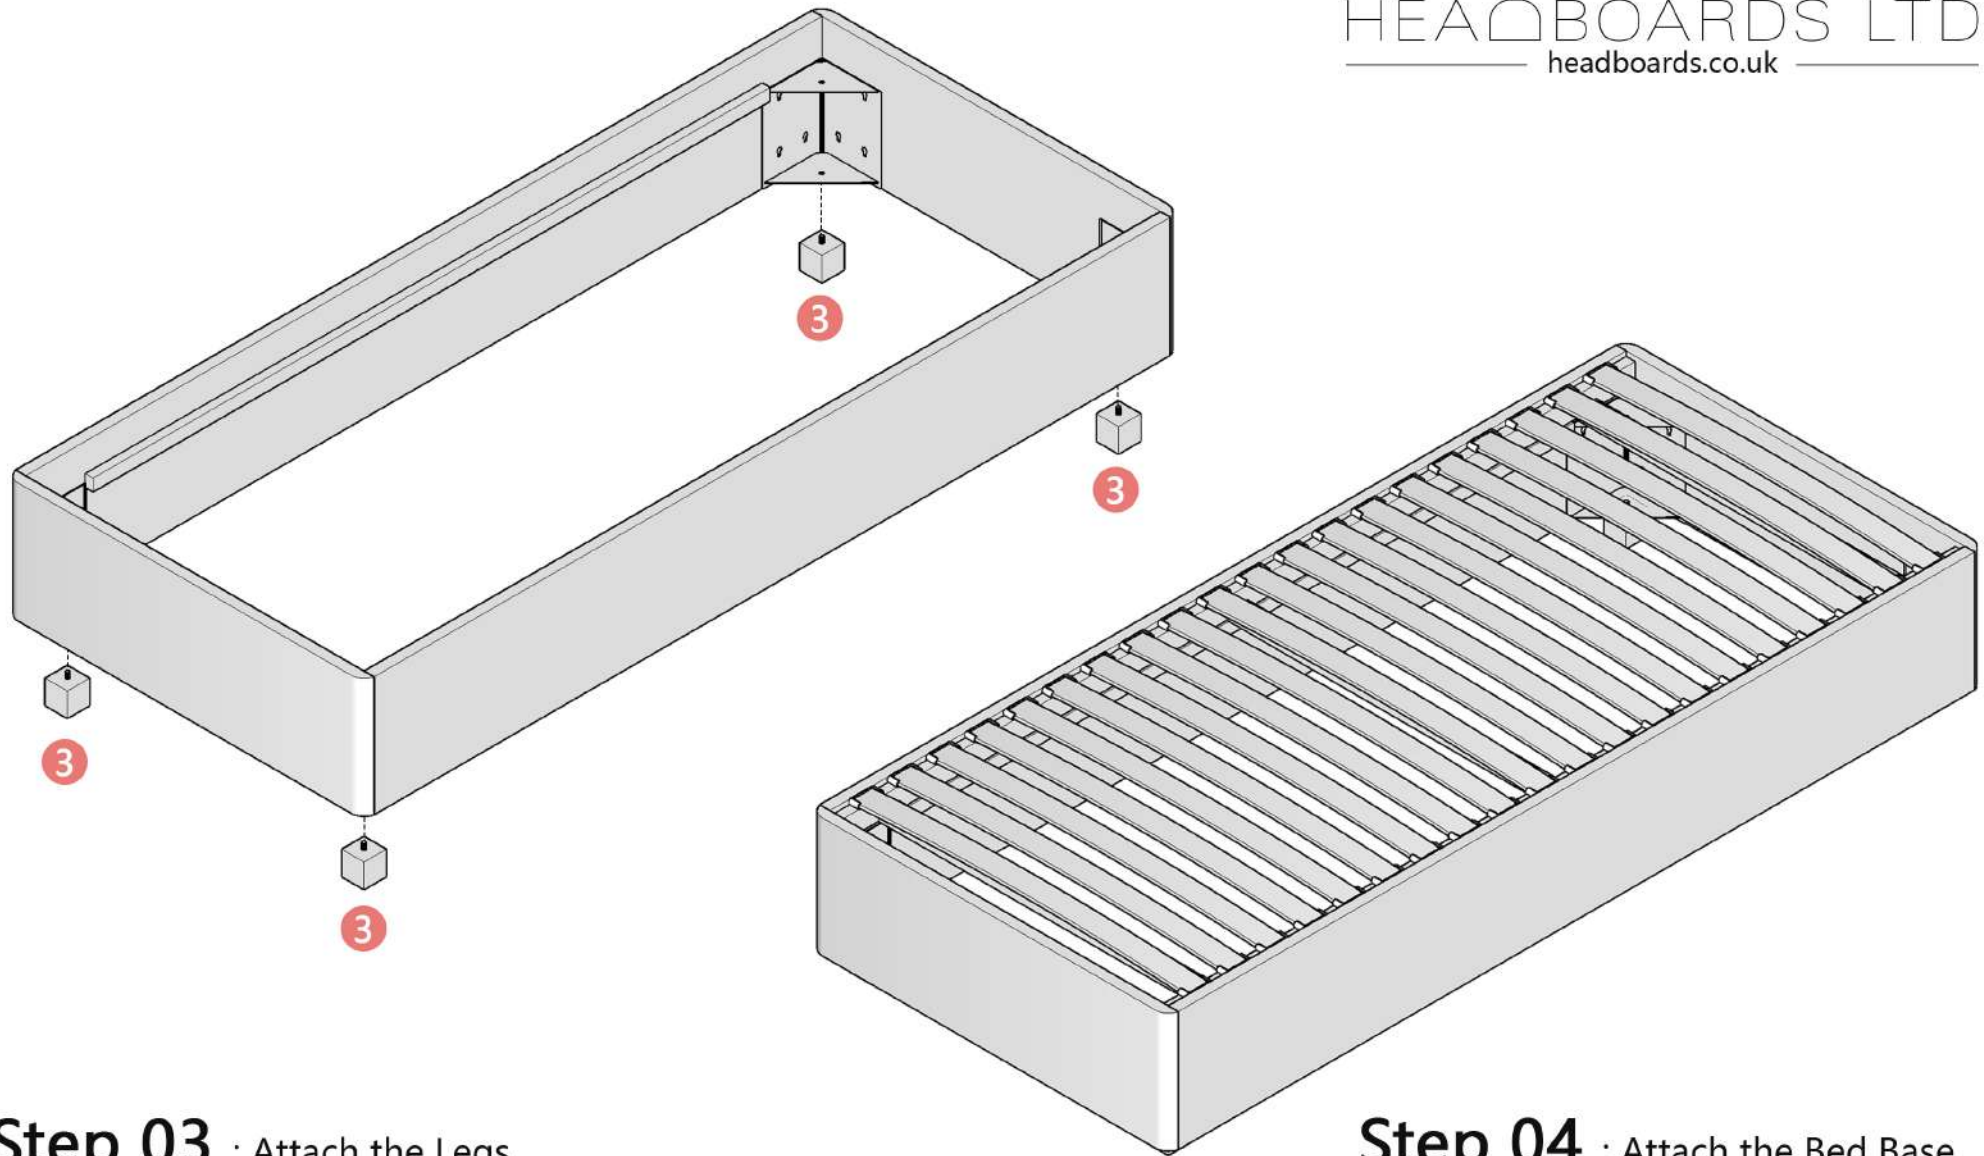

## Step 03 : Attach the Legs

- Attach All four Legs by using Nuts and Washers.
- Tighten the All Loosely Bolted Fixings of ( Step 1 & 2 ) Corner Brackets with Side Rails and Cross Rails as frame is settled now in gravitational force.

## Step 04 : Attach the Bed Base

Drop-in your pre-assembled Slatted Bed Base one by one and use the connecting bolts provided to attach them to one another.