


Instructions

Wall Mounted Headboard - With Pillow Stop

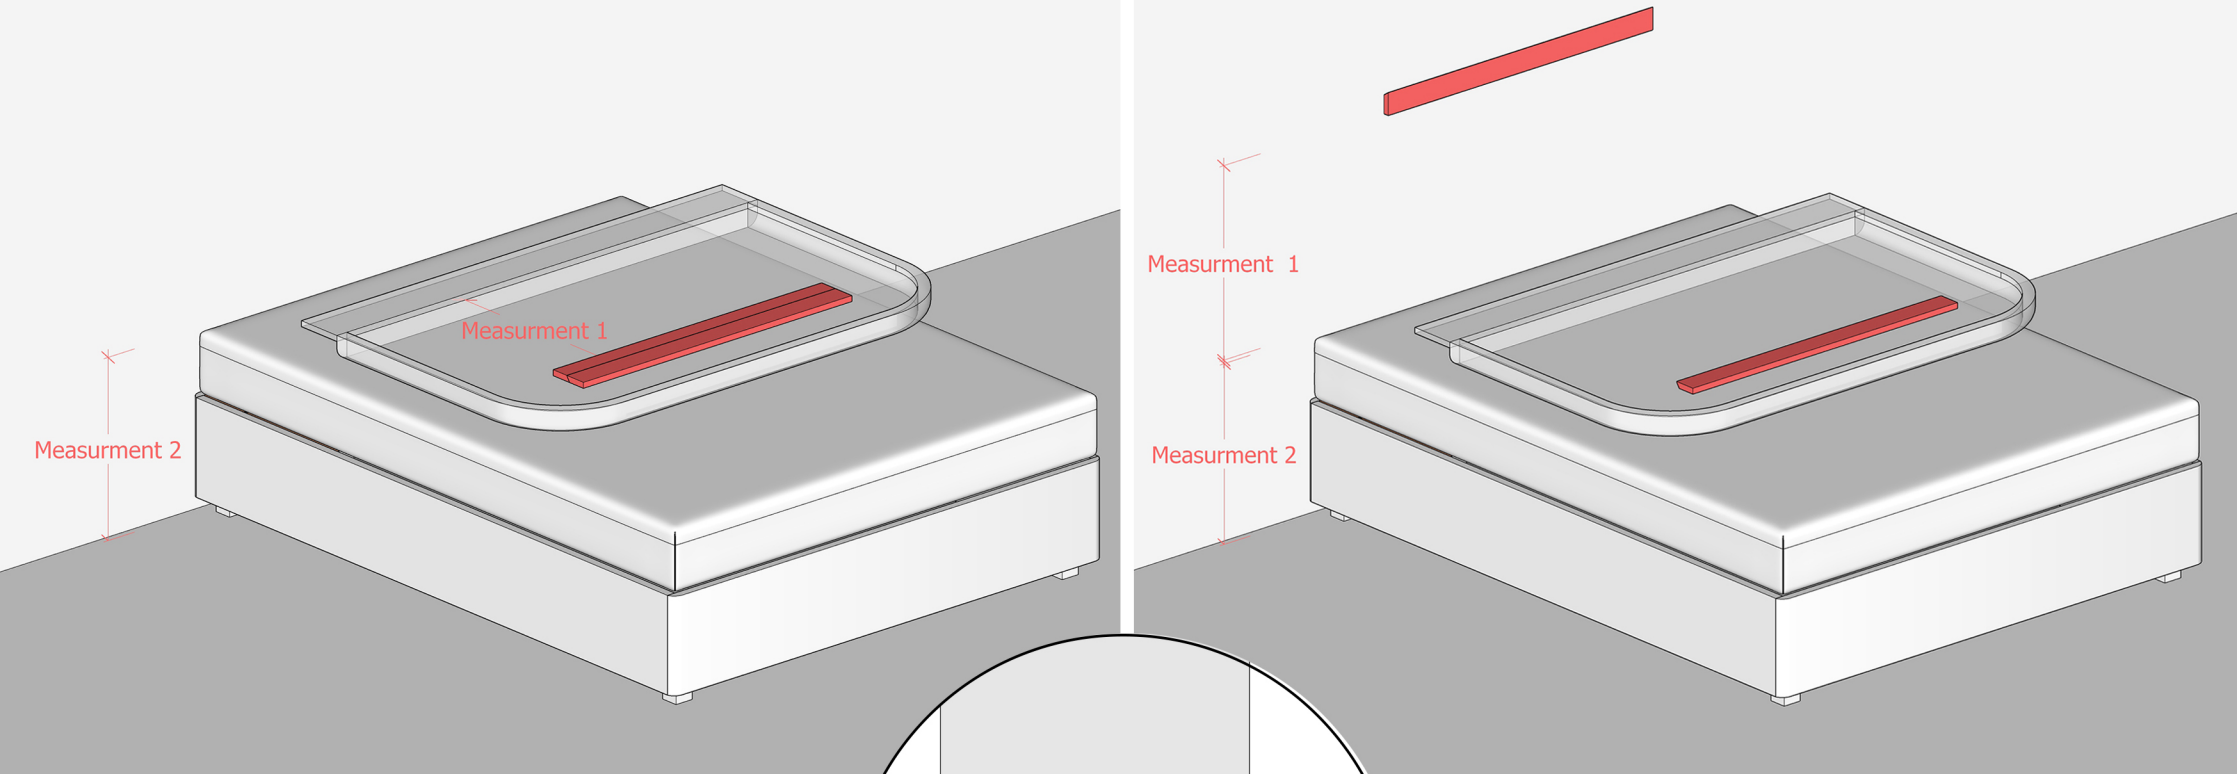

Step 01 : Measure Distance

Measurement 01 : Bottom of the headboard to the bottom of the 45° wall-mounted baton.



Note : Do not include the Pillow Stop

Measurement 02 : Floor to the top of the mattress.

Step 02: Attach Wall-mounted Baton

Mark the measurement 01 on the wall and attach the 45° wall-mounted baton by using provided fixing attachment.

Keep the angle direction shown as in the picture.

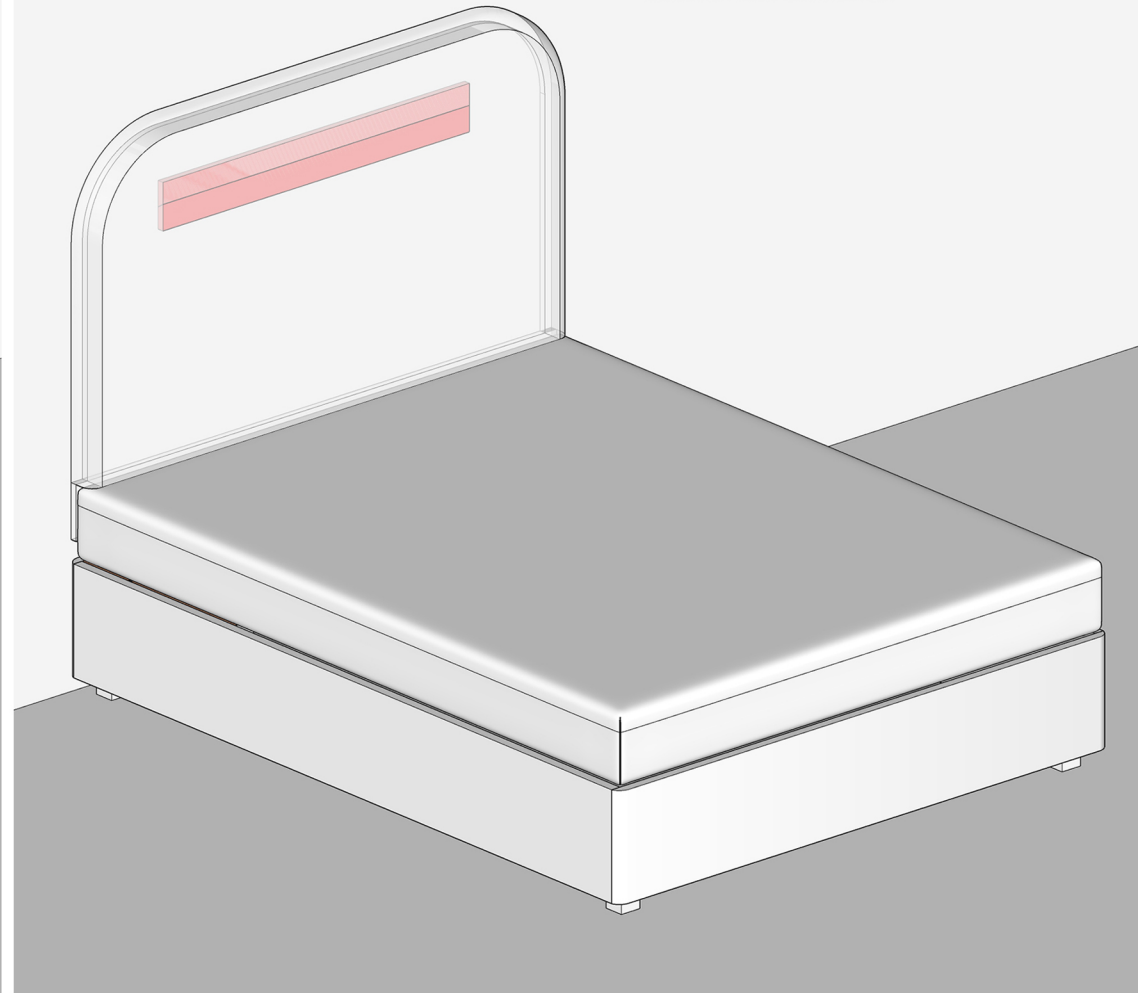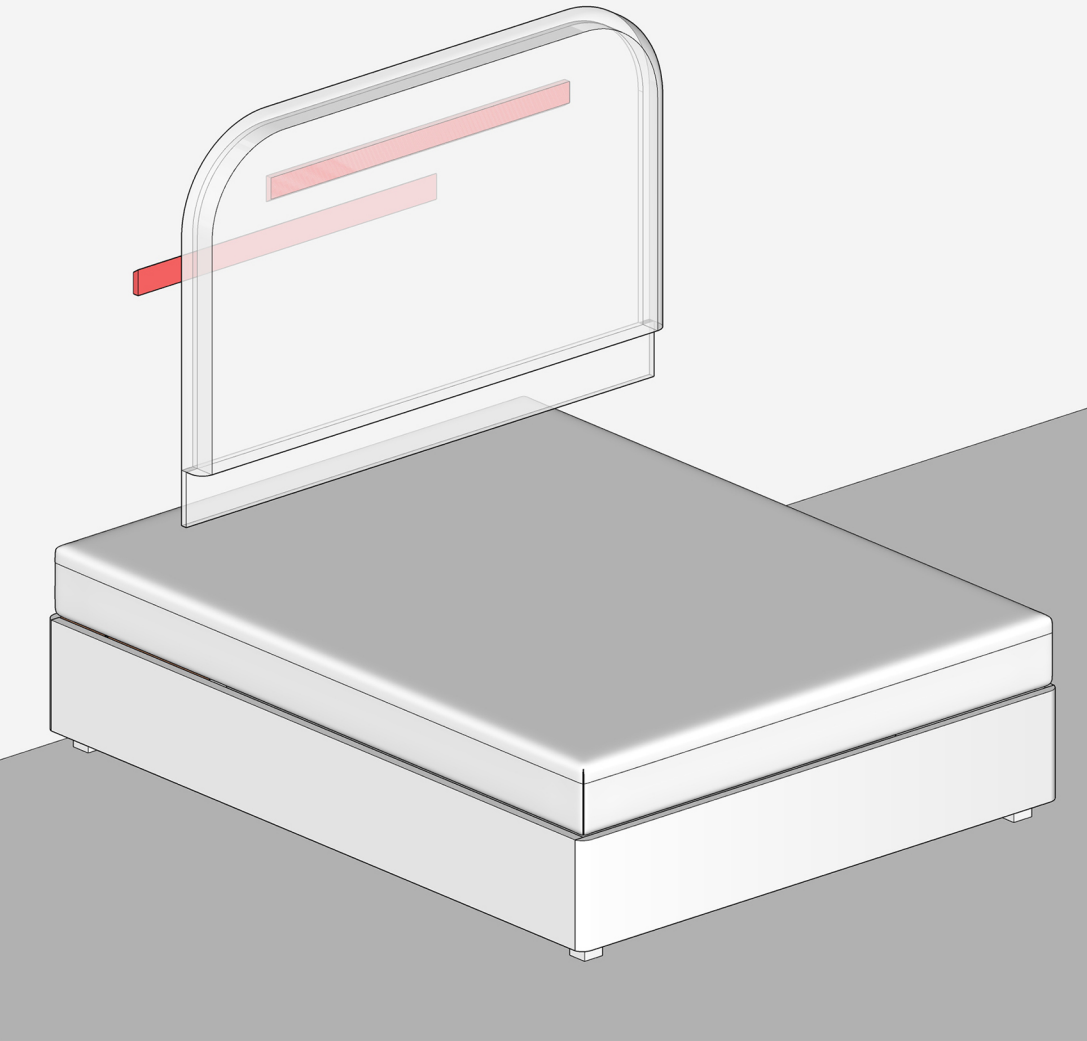

Step 03: Attach Headboard

Attach the headboard over the wall mounted Baton.

You can slide your headboard little bit over the baton in order to align Headboard and Bed.