
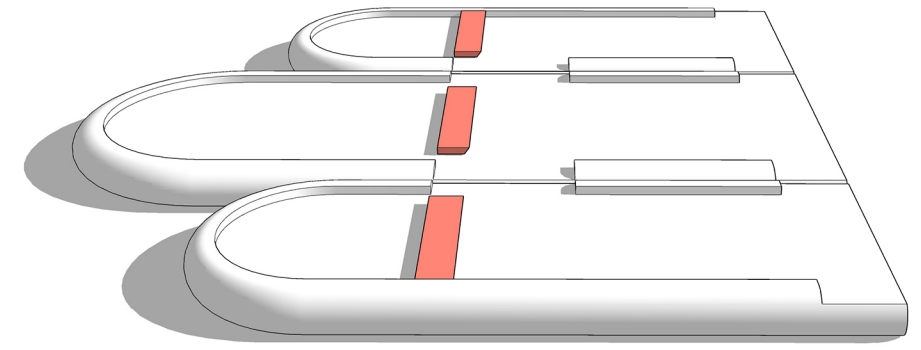
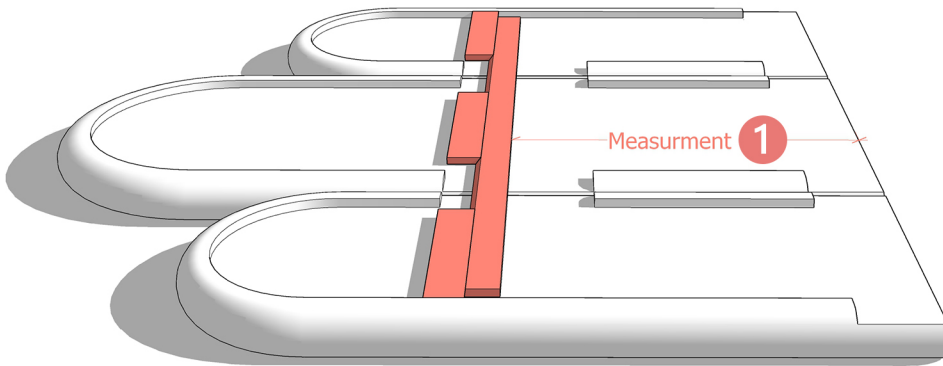
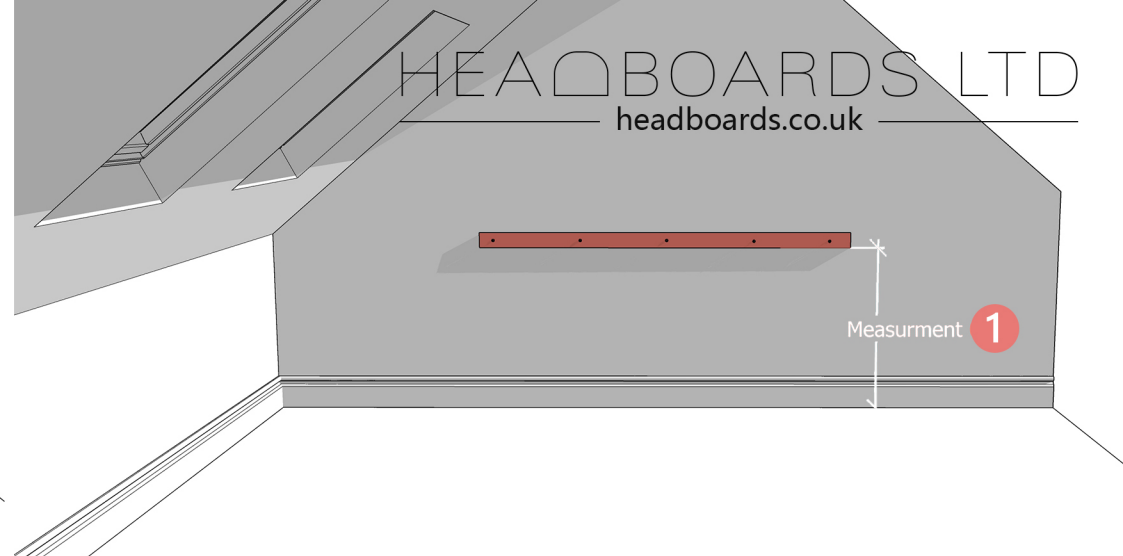




Instructions

Wall Mounted Sectioned Headboard

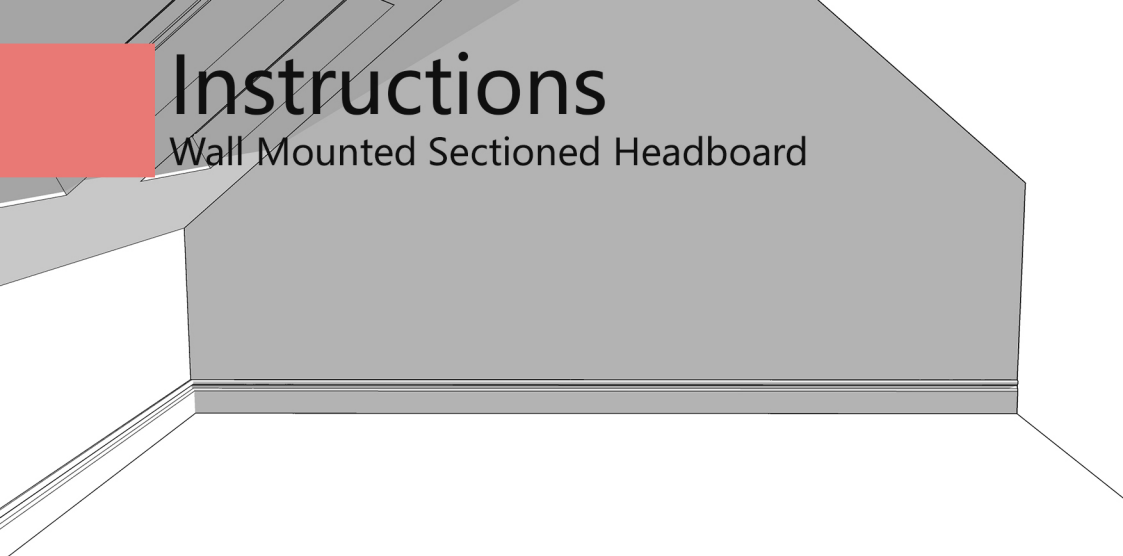

Step 01 : Measure Distance

Measurement 01 : Bottom of the headboard to the bottom of the 45° wall-mounted baton.

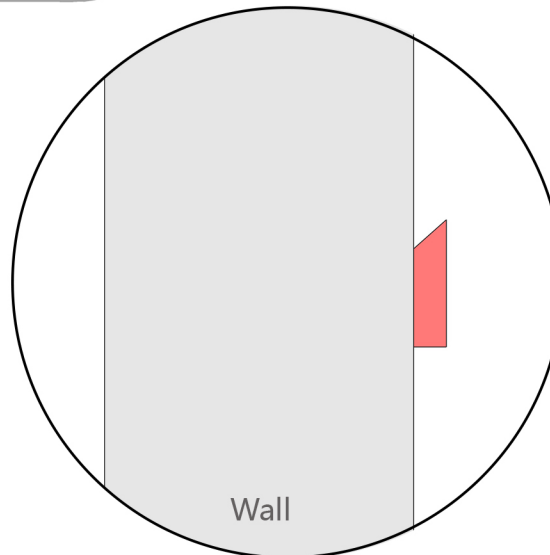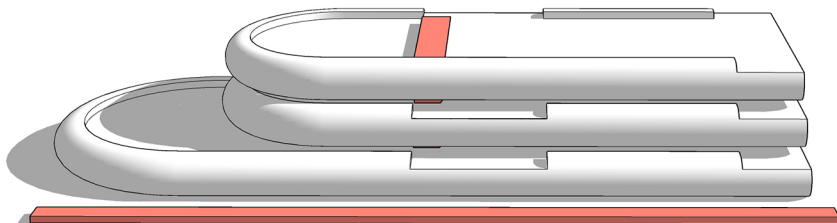


Step 02: Attach Wall-mounted Baton

Mark the measurement 01 on the wall and attach the 45° wall-mounted baton by using provided fixing attachment.

• Keep the angle direction shown as in the picture.

Note : 3cm must be allowed between the top of the headboard and the ceiling (or window ledge) to enable the split batons to interlock.

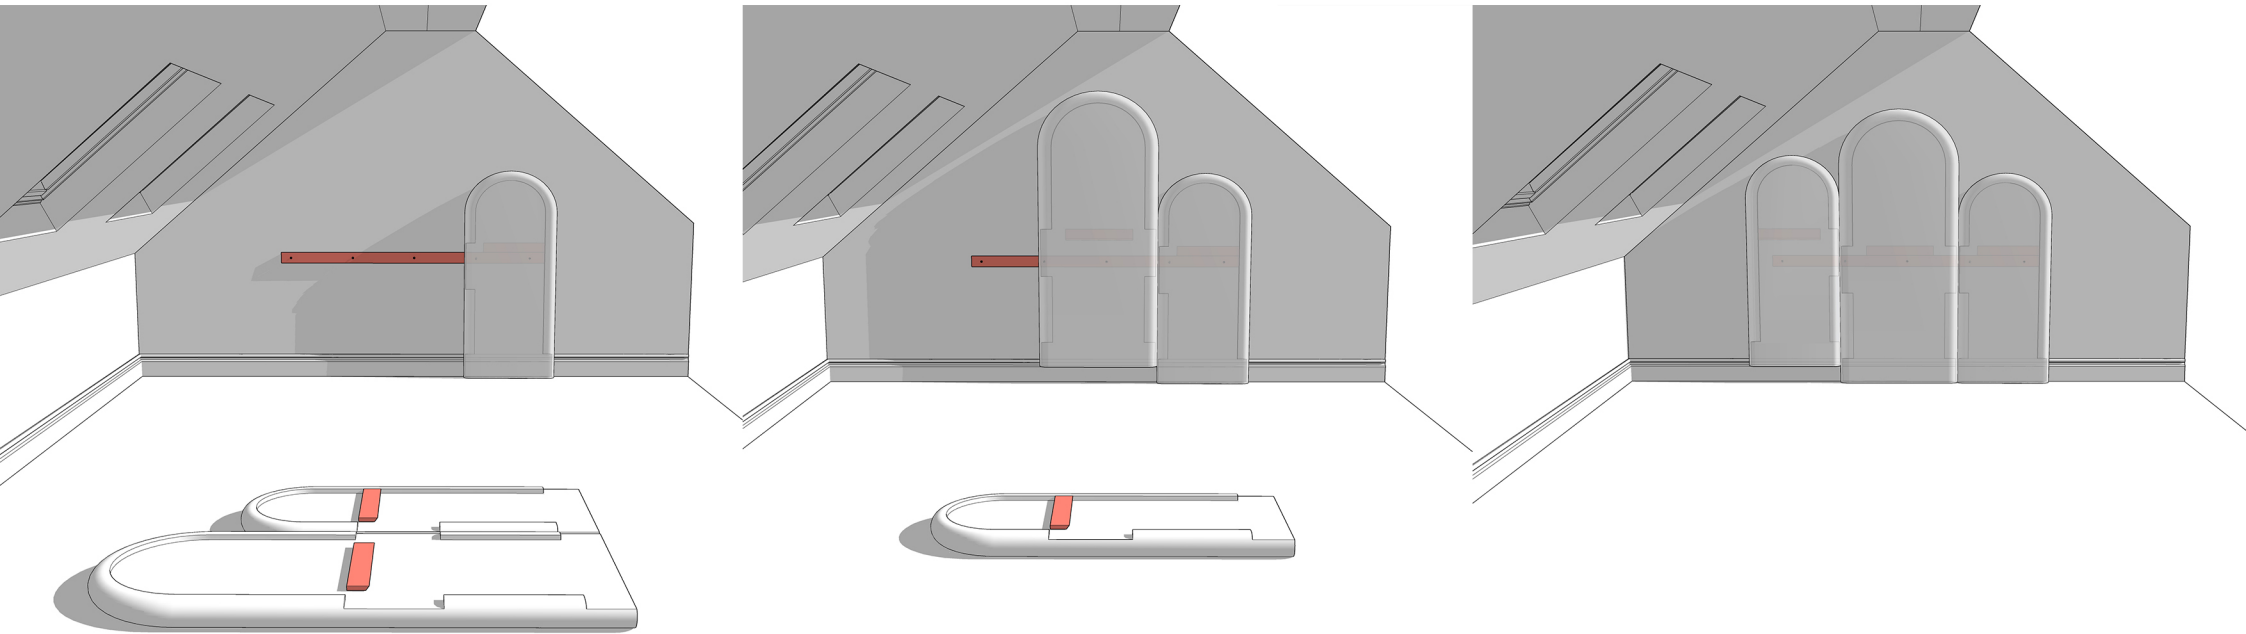

Step 03: Attach Headboard

Attach the All headboard sections from right to left or left to right direction over the wall mounted Baton.

You can slide your headboard over the baton in order to align Headboard and Bed in both setup.