


Instructions

Dual Row Langham Bed

BEDSLATS.co.uk

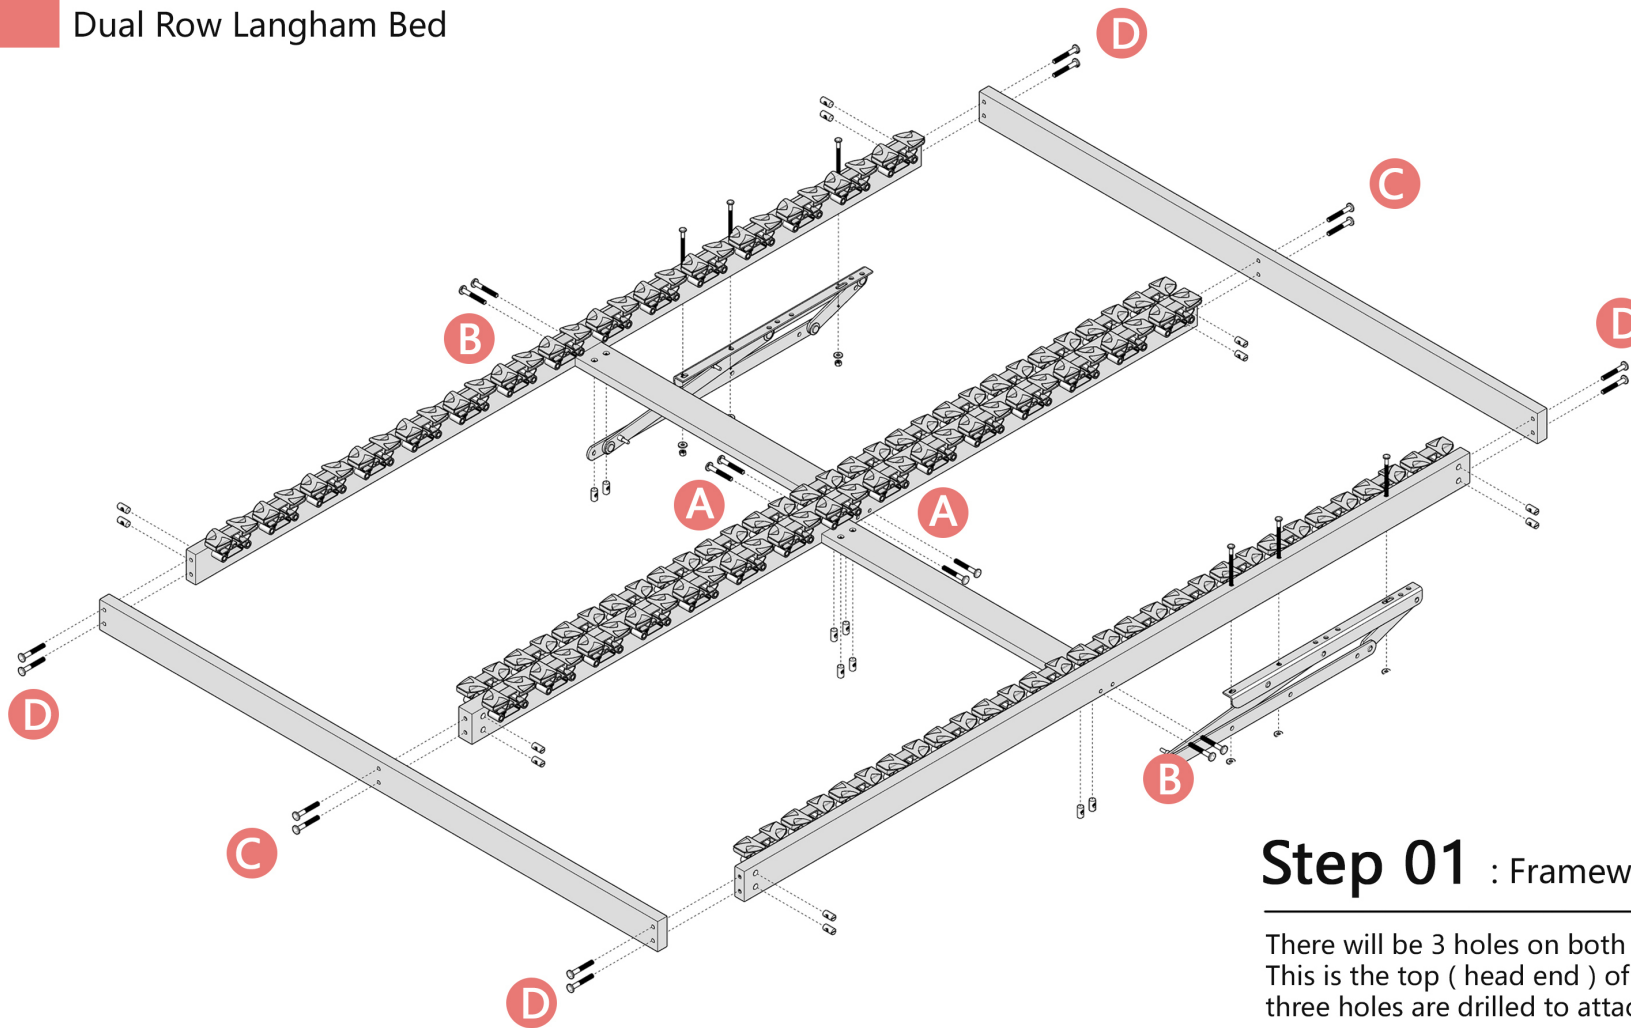

Step I : Join A

Step II : Join B

Step 01 : Framework Assembly

There will be 3 holes on both long side rails. This is the top (head end) of the bed base. The three holes are drilled to attach the bed hinges.


Step III : Join C & D

A 20mm Cross Dowels & 70mm Furniture Connector Bolts

B 20mm Cross Dowels & 60mm Furniture Connector Bolts

C 30mm Cross Dowels & 60mm Furniture Connector Bolts

D 25mm Cross Dowels & 60mm Furniture Connector Bolts

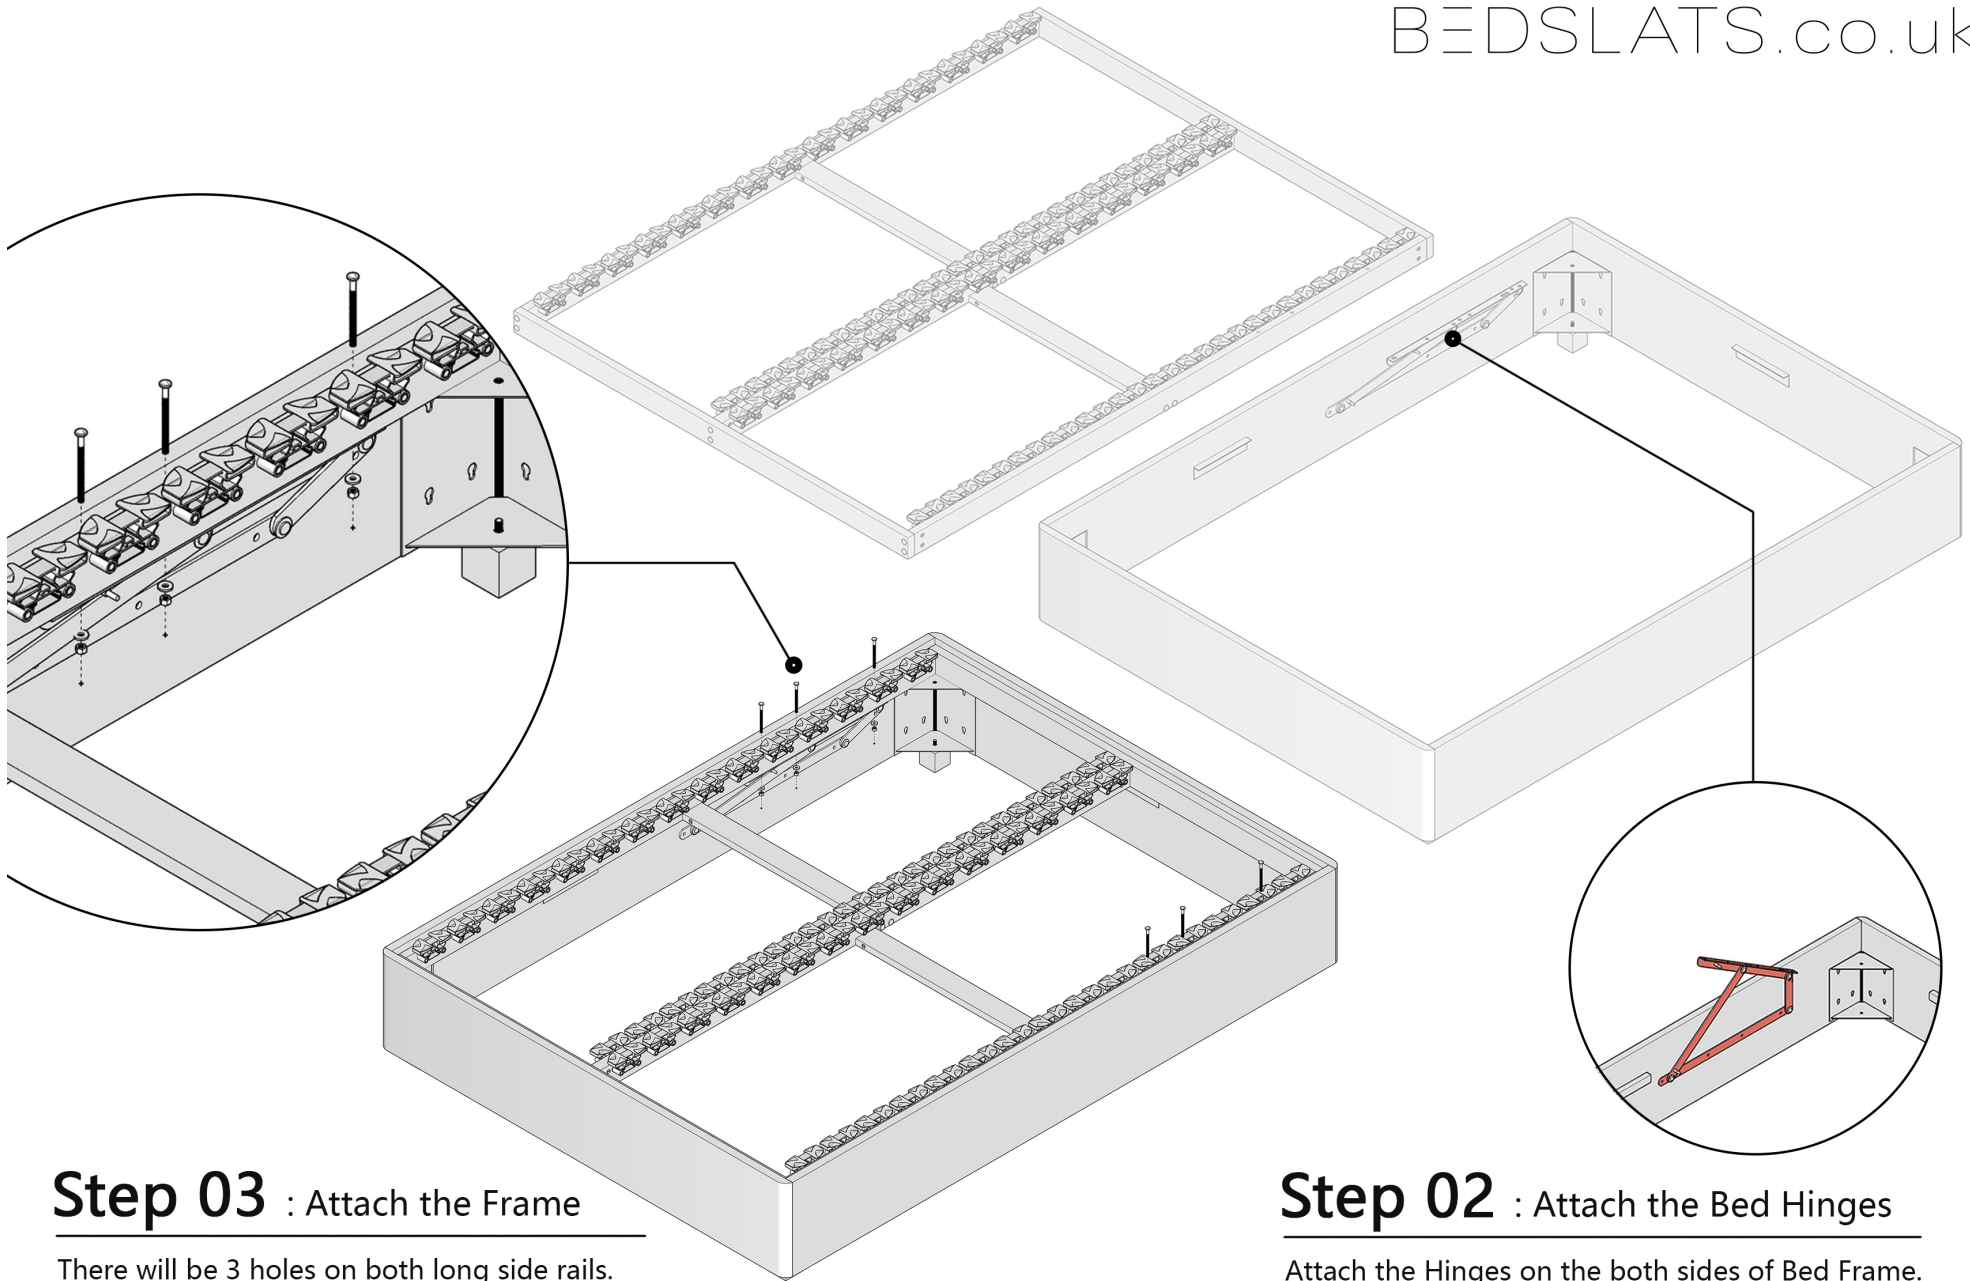

Step 03 : Attach the Frame

There will be 3 holes on both long side rails.
Attach the frame with help of M6 x 30mm
Bolts, Washer & Nuts.

Step 02 : Attach the Bed Hinges


Attach the Hinges on the both sides of Bed Frame.

Step 04 : Attach the Slats


Feed the Sprung Bed Slats into holders. The Holders have one angle top edge, these are designed to help feed the sprung slats into place.

Step 05 : Attach the Mattress Stopper

Attach Mattress Stops have four grey components, you need to feed two sprung Slats into these compartments. These two will be attached on slat 1 and 3 from the TOP of the Slatted Bed Base.

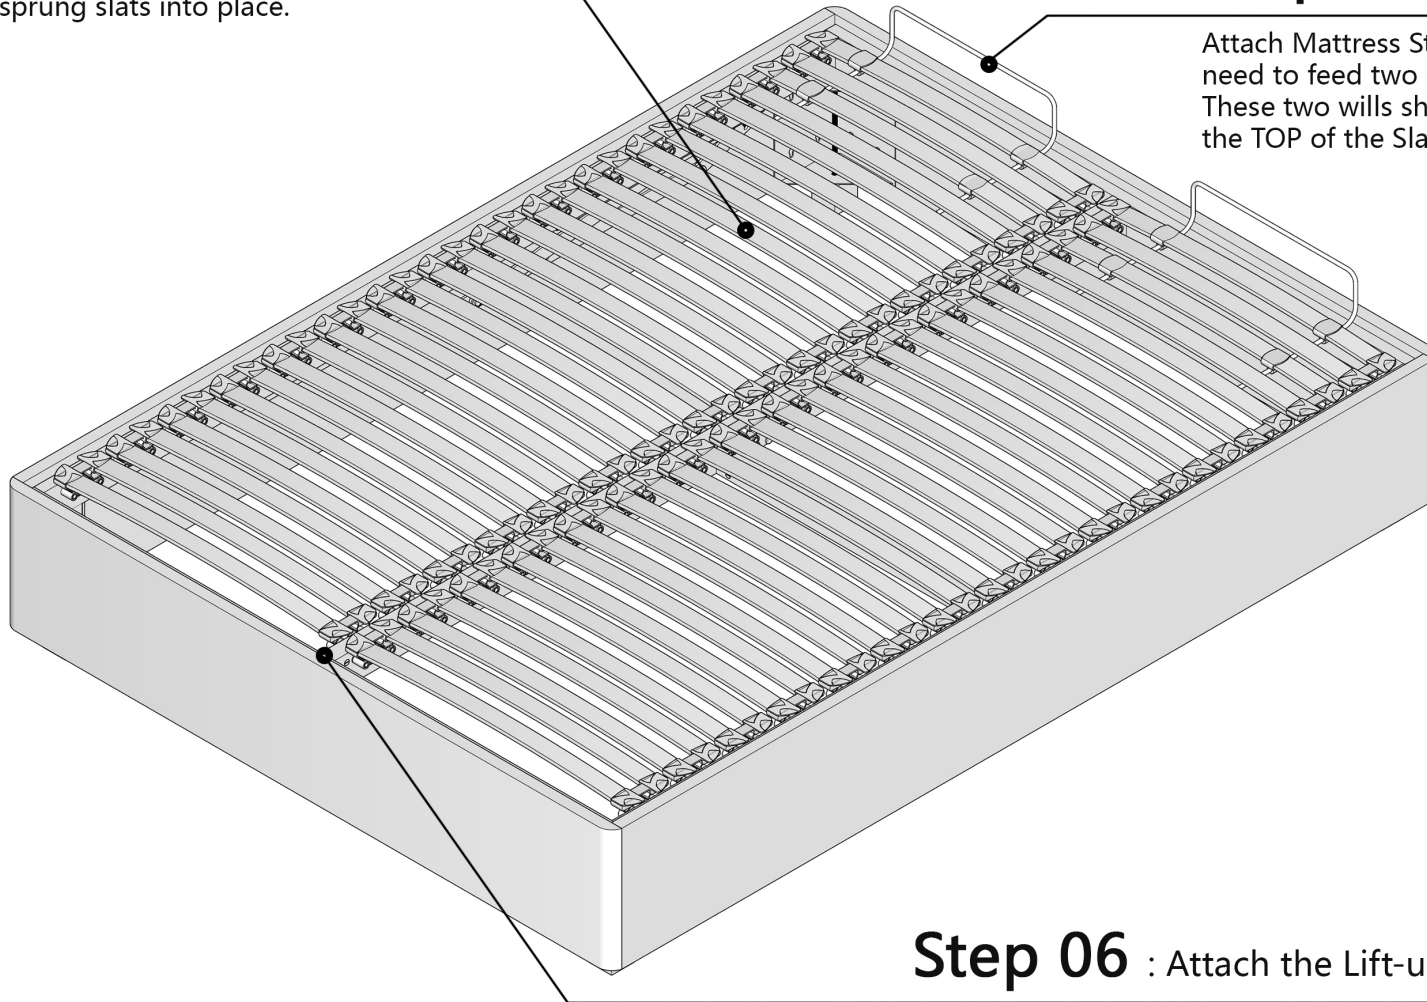

Step 06 : Attach the Lift-up Handle

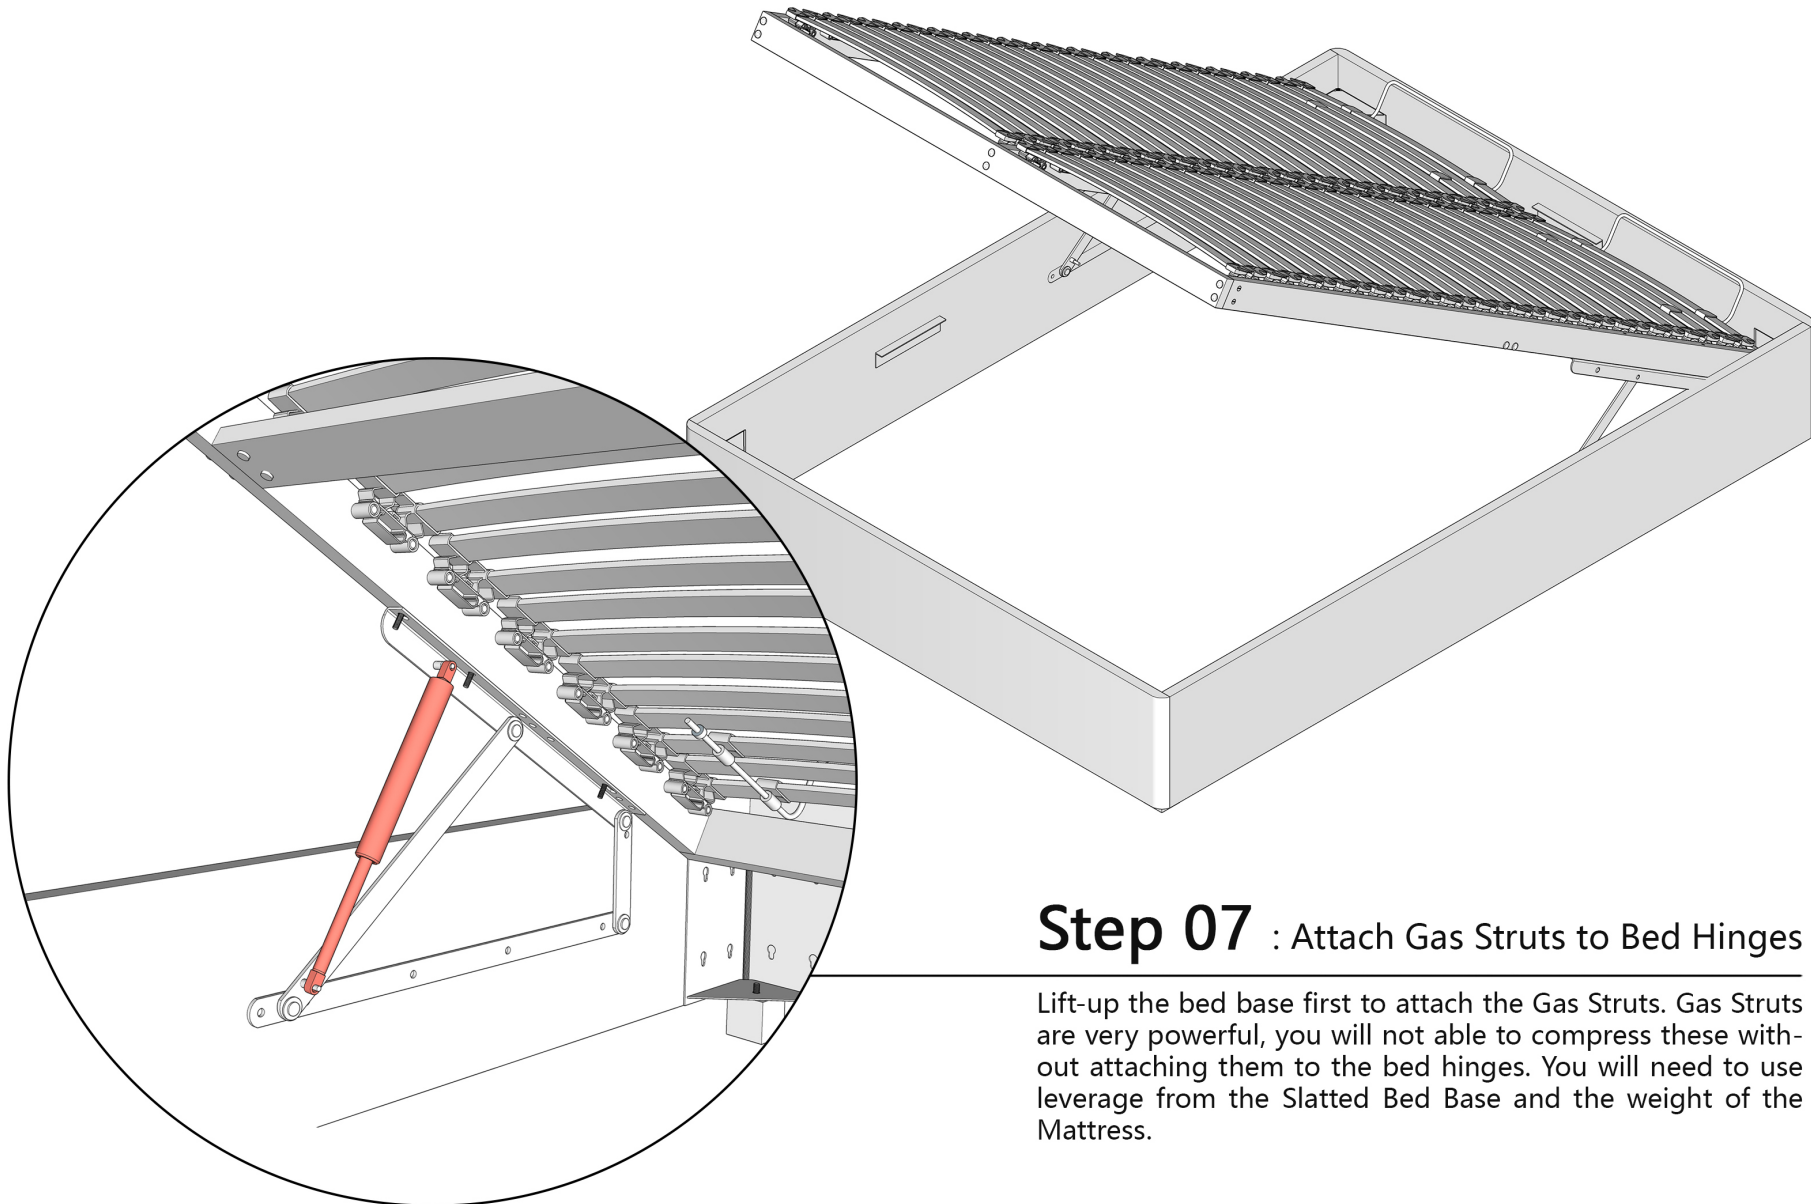

Step 07 : Attach Gas Struts to Bed Hinges

Lift-up the bed base first to attach the Gas Struts. Gas Struts are very powerful, you will not be able to compress these without attaching them to the bed hinges. You will need to use leverage from the Slatted Bed Base and the weight of the Mattress.