HOW TO INSTALL PRE-PASTED WALLPAPER

This wallpaper is pre-pasted — requiring only water to activate the glue— and is designed for easy application and clean removal. There's no need to handle separate glues or adhesives, and no glue waste to deal with. You get strong adhesion, yet with this strippable wallpaper, removal is easy and clean. Pre-pasted paper removes in one piece with no wall damage! This material is GreenGuard Gold certified.

Prepare the wall

The wall surface should be clean, dry, structurally sound and free of mildew, grease, or other stains, and free of irregularities in order to achieve the best hanging performance and complete removal when redecorating.

To apply on drywall. For best results, apply to a wall surface that has been painted with one coat of builder's primer and one coat of latex paint (note: this is typical of new construction; a wall surface that has been painted with a single coat of primer or a coat of satin or gloss paint is acceptable). The wall surface should be clean, smooth, and free of debris or contaminants.

To apply over paint. Painted walls should be primed, smooth, and free from debris. Check the wall surface to determine the condition of the paint adhesion. If the paint is old, damaged, or flaking, priming is highly recommended.

To apply to a wall previously covered with wallpaper. Any old wall paper remaining should be removed as well as the old adhesive (remove by sanding or using adhesive remover). Primer should be applied to the wall surface that is clean, smooth, and free of the old adhesive.

To apply over paneling. Any grooves should be filled to achieve a smooth surface, then covered with an adhesion-promoting primer.

To apply to a wall currently covered with wallpaper. Not recommended.

Apply the wallpaper

Follow these step-by-step instructions

- Loosely roll the printed wallpaper with the printed side facing in.
- Completely submerge the rolled wallpaper in water (in a wallpaper tray) for 10 to 15 seconds to activate the adhesive.
- Remove the roll by pulling the leading edge out of the tray slowly, glue-side up.
- "Book" the wallpaper by laying it on the floor glue-side up, then folding the glue side against itself for approximately 1 minute (avoid creasing the paper when booking).

Note: this product expands slightly in water; for best results, soak and book each panel the same amount of time.


- Unfold the top half of the wallpaper, leaving the bottom half of the wallpaper booked, and position the glue-exposed portion of the top of the wallpaper on the wall.
- Once satisfied with the initial positioning, unfold the wallpaper exposing the remaining glue surface.
- Using a damp sponge, smooth downward and outward.

Tip: Do not over smooth-bubbles smaller than the size of a U.S. Quarter (about 24 mm in diameter) will dissipate as the wall covering sets.

TIPS

If you are hanging this product around sockets or switches, switch off main power, unscrew fixtures & clean out all dust prior to starting.

Please **contact us** if you have any questions about wallpaper installation or any other questions.

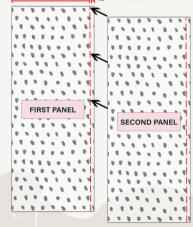

www.coloritto.co

EMAIL colorittoshop@gmail.com

24 INCHES

3/4 INCH

∠OVERLAP