


M


A-13000 No Overflow

C A C

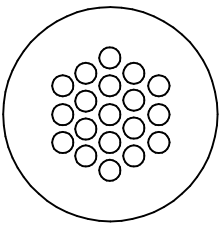



Apply plumbers putty to top side of overflow jacket

Solid brass drain body

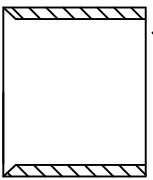


Overflow jacket, PVC


Chrome plated brass tube tail

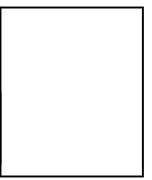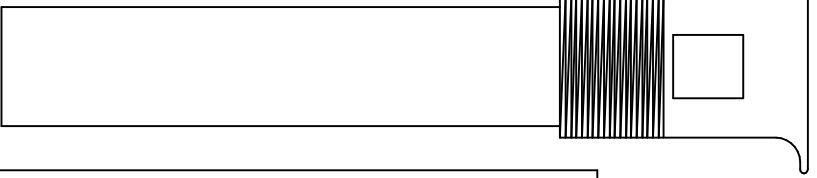

1 1/2" rubber Mack Gasket



Thrust washer




Brass jam nut

C U N A R F S

M


A-13000 No Overflow

C A C

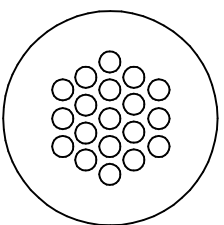



Apply plumbers putty to top side of overflow jacket

Solid brass drain body

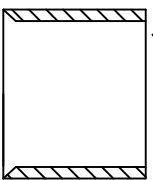


Overflow jacket, PVC


Chrome plated brass tube tail

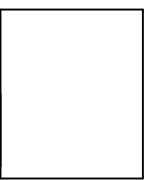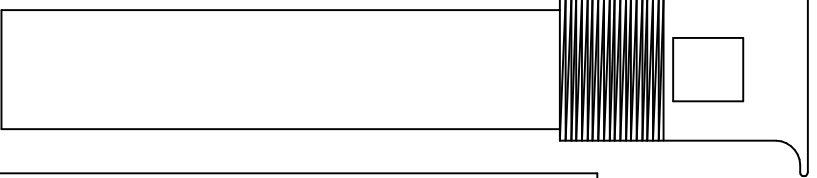

1 1/2" rubber Mack Gasket



Thrust washer



Brass jam nut

C U N A R F S