




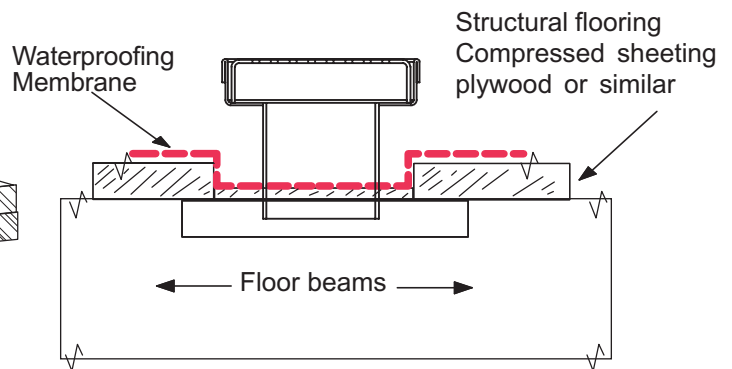

Standard installation for timber floor shower drains/tile insert floor

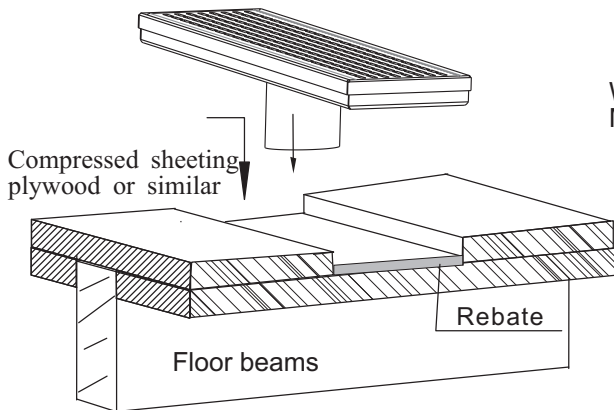

Installation Site:

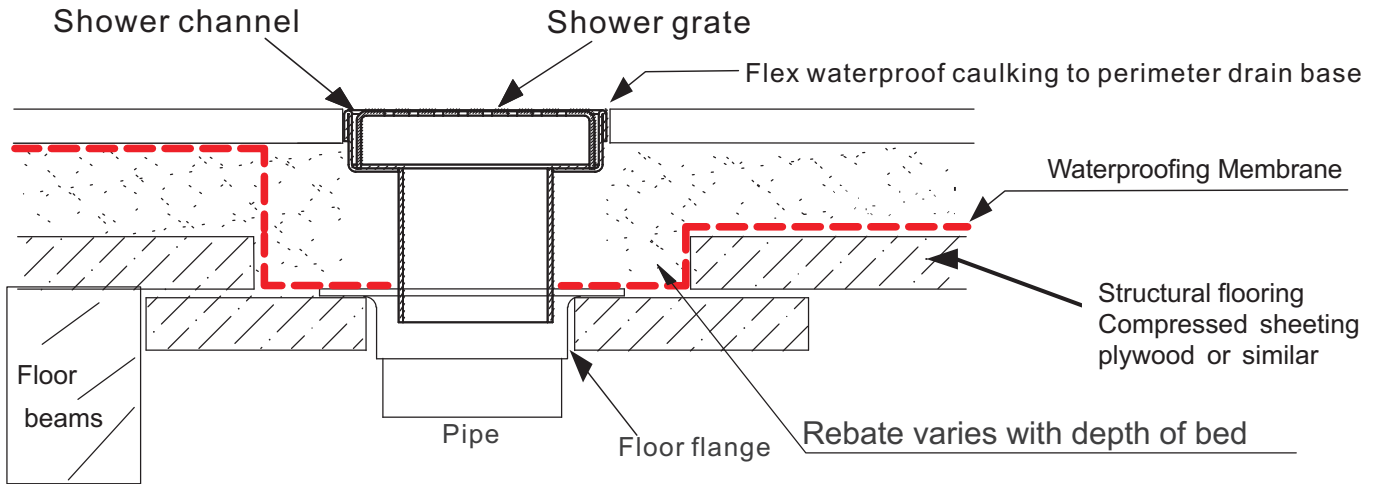