


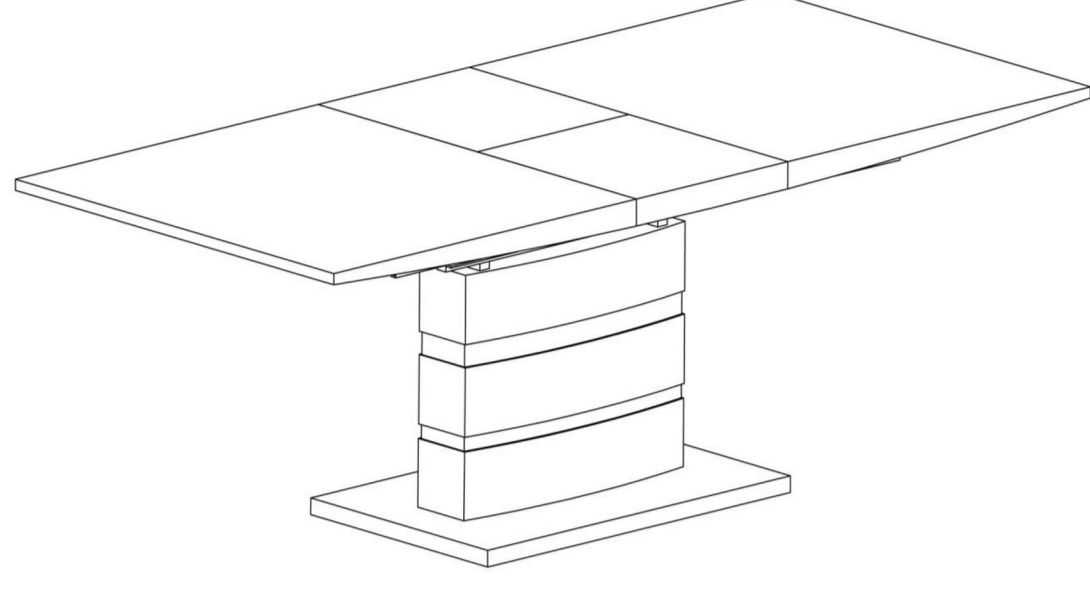
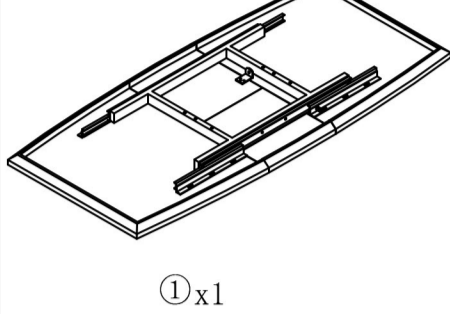




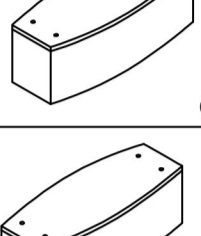


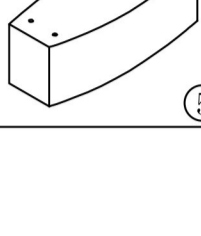

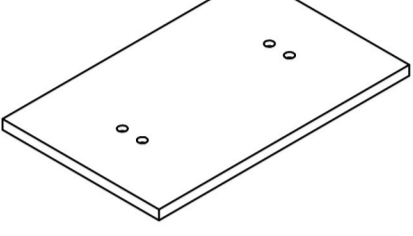


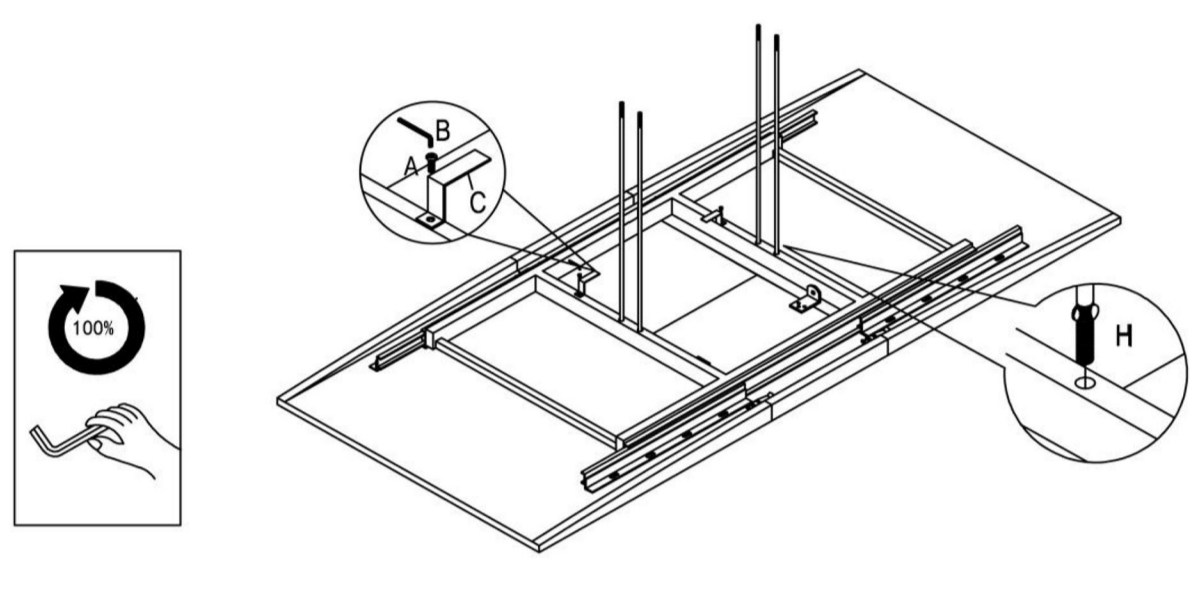
ASSEMBLY INSTRUCTION

ZTOZZ




 ① x1	 ② x2	 ④ x2	 ⑤ x2		
 ⑥ x1	A (M6x13)x2 	B (M4)x1 	C x2 	D (M8)x4 	E (φ22x1.5mm)x4 
	F (M8)x4 	G (M8)x1 	H (M8x700)x4 	I x6 	1/4

STEP1




STEP2

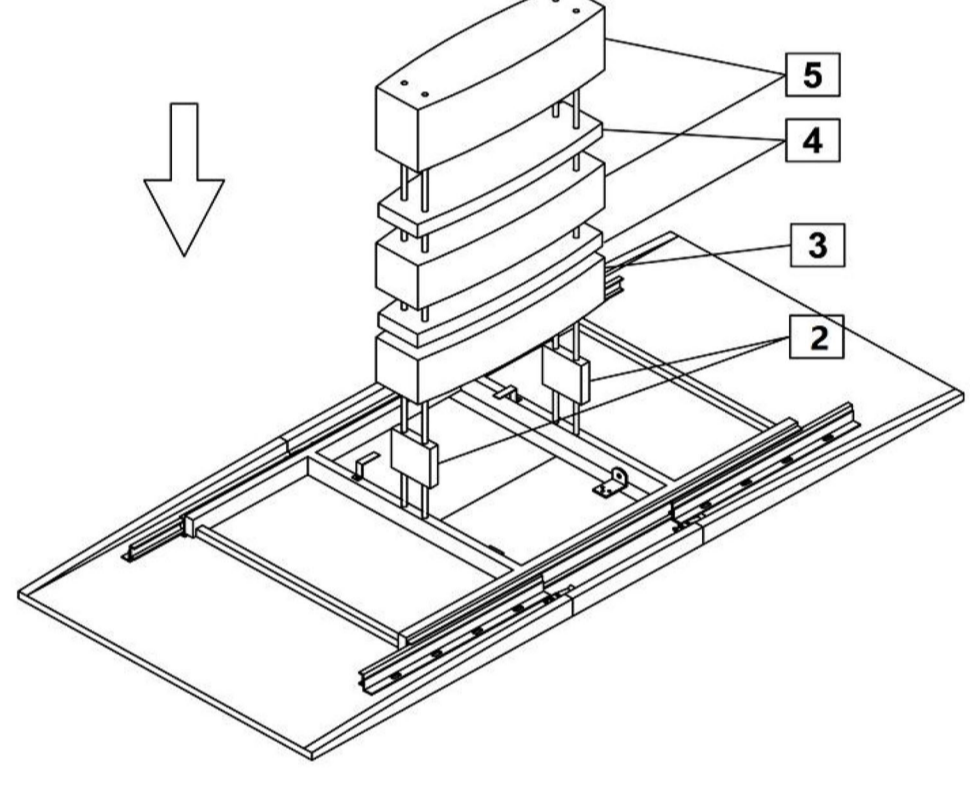


2/4

STEP3

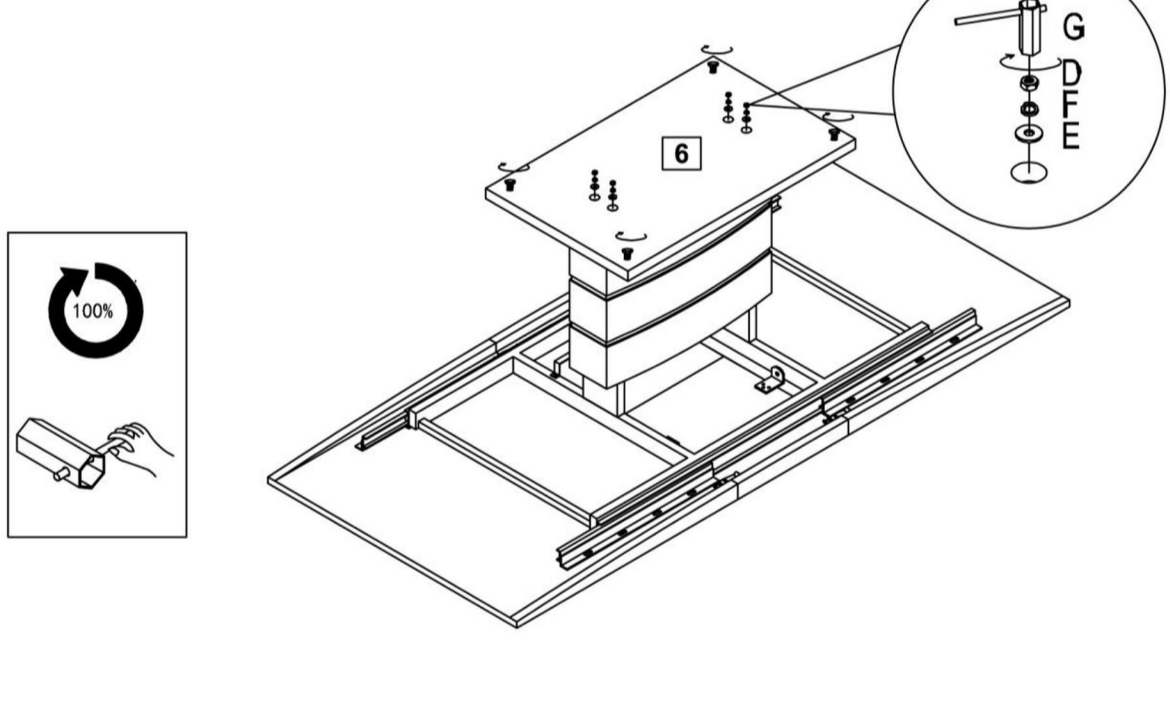


STEP4


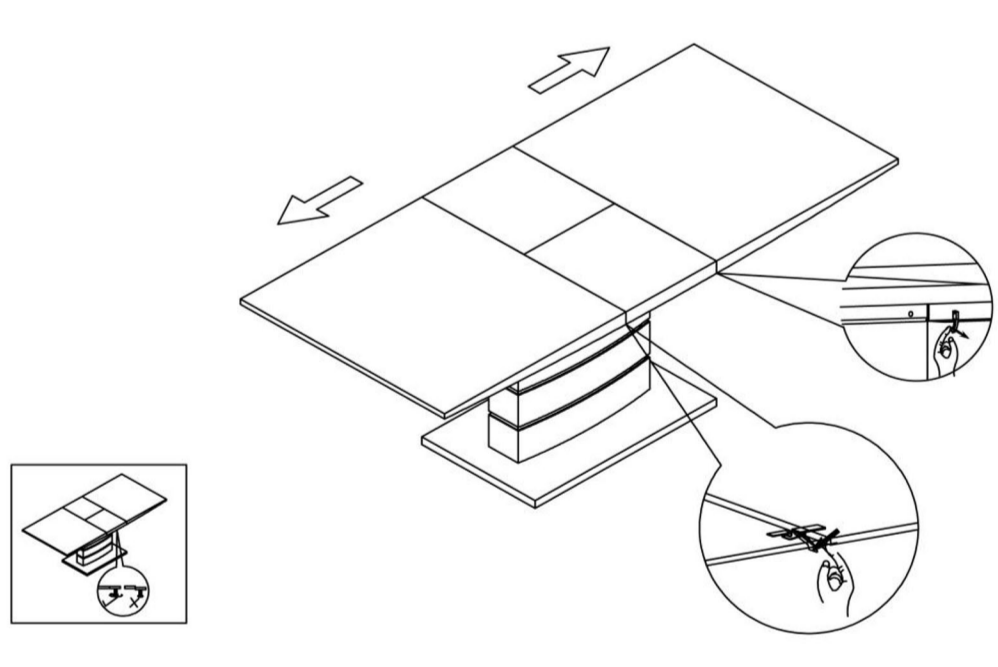


3/4

STEP5

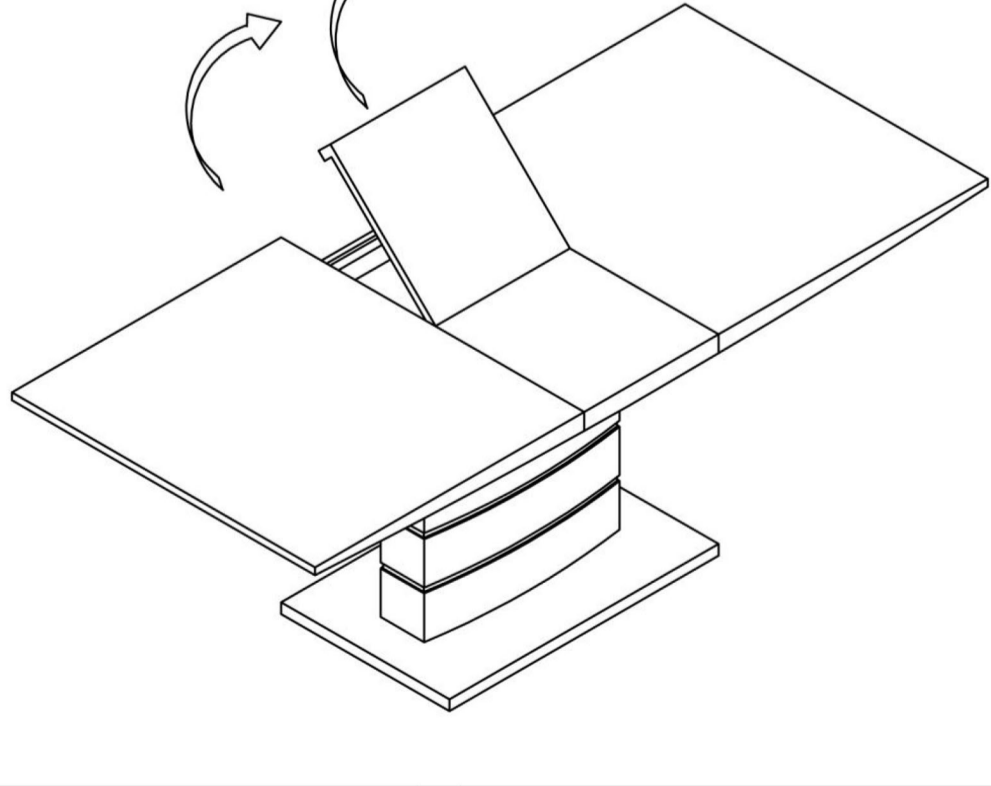

STEP6

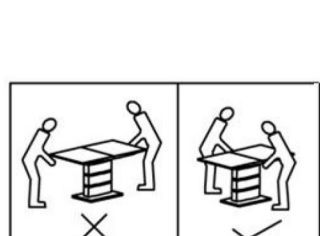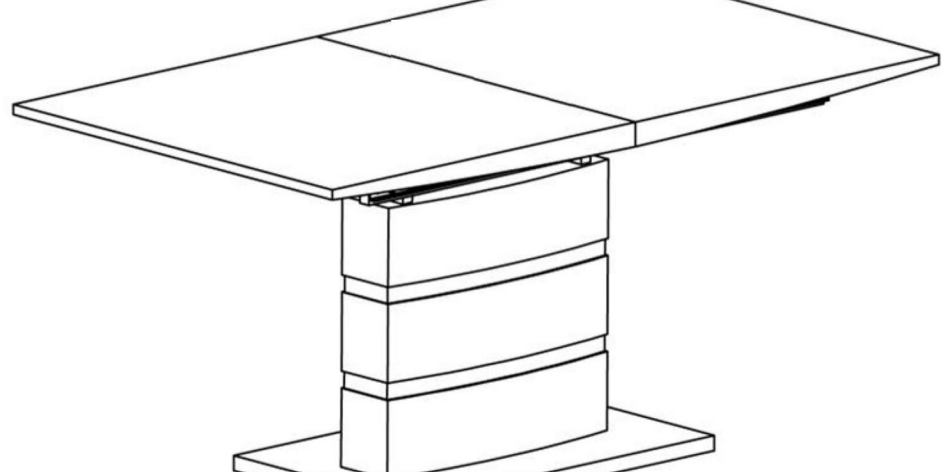

4/4