

How to Install

GRAPHIC DECALS



BEFORE YOU GET STARTED

You'll need to have: scissors, masking tape, a level and a squeegee (or an old credit card).


Grab a friend! Larger pieces are easier to apply when you have a helping hand.

For freshly painted walls please wait 3-4 weeks before applying your decals to allow the new paint to cure.

Decals work best on eggshell, matte, semi gloss or satin finish paints.

We do not recommend installing on highly textured surfaces such as stucco, concrete or drywall primer finishes.

LAYERS THAT MAKE UP YOUR DECAL

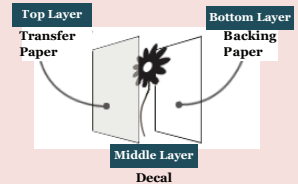

Transfer Paper: The translucent top layer
Decal: Your beautiful vinyl decal.
Backing Paper: The stiff white paper.

STEP 1 - LET'S GET READY

- **Choose the perfect spot.**
- **Clean the surface** with a damp cloth to remove any dust or grease which may cause the vinyl not to adhere properly.
- **Cut out your decals** no need to cut them out perfectly, just be careful not to cut the decals.

STEP 2 - LET'S GET CREATIVE

- **Position your design** on the wall. Decals are one time use so plan out your design carefully. Tape along the top of the design using the masking tape. Make sure it's secure on the wall with the masking tape so it won't fall down mid install.
- **Take a step back** and look at it again to make sure it is placed where you want it.

STEP 3 - LET'S GET STICKING

- **Peel the Backing Paper away** from the Transfer Paper, starting closest to the masking tape at the top of the decal. The decal should stick to the Transfer paper.
- **Smooth down the decal** with your free hand on the front as you slowly pull the backing paper away on the back side.
- **Use your squeegee** to firmly rub over the decal to give good adherence to the wall. Use a sweeping motion from the centre to the sides. Ensure all air bubbles have been removed.

STEP 4 - THE BIG REVEAL

- **Gently peel back the Transfer Paper** and fold it back 180 degrees flat against the wall - sticky side is now facing you. You can tear the transfer paper and work in small sections to ensure the decal does not come away from the wall.
- **Slide the Transfer Tape**, sticky side facing you, down the wall. Work slowly so that your decal doesn't pull away creating air pockets. Use your squeegee to gently smooth out air bubbles.
- **Admire your amazing new decals!**