

How to Install

VINYL LETTERING



BEFORE YOU GET STARTED

You'll need to have: scissors, masking tape, a level and a squeegee (or an old credit card).


Grab a friend! Larger pieces are easier to apply when you have a helping hand.

For freshly painted walls please wait 3-4 weeks before applying your decals to allow the new paint to cure.

Decals work best on eggshell, matte, semi gloss or satin finish paints.

We do not recommend installing on highly textured surfaces such as stucco, concrete or drywall primer finishes.

LAYERS THAT MAKE UP YOUR DECAL

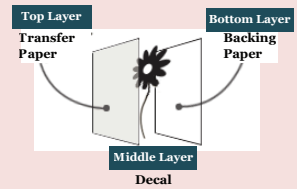

Transfer Paper: The translucent top layer
Decal: Your beautiful vinyl decal.
Backing Paper: The stiff white paper.

STEP 1 - LET'S GET READY

- **Choose the perfect spot.**
- **Clean the surface** with a damp cloth to remove any dust or grease which may cause the vinyl not to adhere properly.

STEP 2 - LET'S GET CREATIVE

- **Position your design** on the wall. Tape along the top of the design using the masking tape. Make sure it's secure on the wall with the masking tape so it won't fall down mid install.
- **Using the level** ensure your decal is properly aligned on the wall.
- **Take a step back** and look at it again to make sure it is placed where you want it and that it is level. It's especially important to have your lettering level at this stage.
NOTE: For large lettering designs it may be necessary to cut the decal into easier to handle sections. Make sure you cut in between the different elements, and not the vinyl itself.

STEP 3 - LET'S GET STICKING

- **Peel the Backing Paper away** from the Transfer Paper, starting closest to the masking tape at the top of the decal. The decal should stick to the Transfer paper.
- **Smooth down the decal** with your free hand on the front as you slowly pull the backing paper away on the back side.
- **Use your squeegee** to firmly rub over the decal to give good adherence to the wall. Use a sweeping motion from the centre to the sides. Ensure all air bubbles have been removed.

STEP 4 - THE BIG REVEAL

- **Gently peel back the Transfer Paper** and fold it back 180 degrees flat against the wall - sticky side is now facing you. You can tear the transfer paper and work in small sections to ensure the decal does not come away from the wall.
- **Slide the Transfer Tape**, sticky side facing you, down the wall. Work slowly so that your decal doesn't pull away creating air pockets. Use your squeegee to gently smooth out air bubbles.
- **Admire your amazing new decals!**