


UNDERSTRUCTURE ASSEMBLY

MOUNTING CPU SHELF TO LEGS

HARDWARE REQUIRED:



3 tap bolts
3/8" long




3 lag bolts
3/8" long



6 washers



3 hex nuts

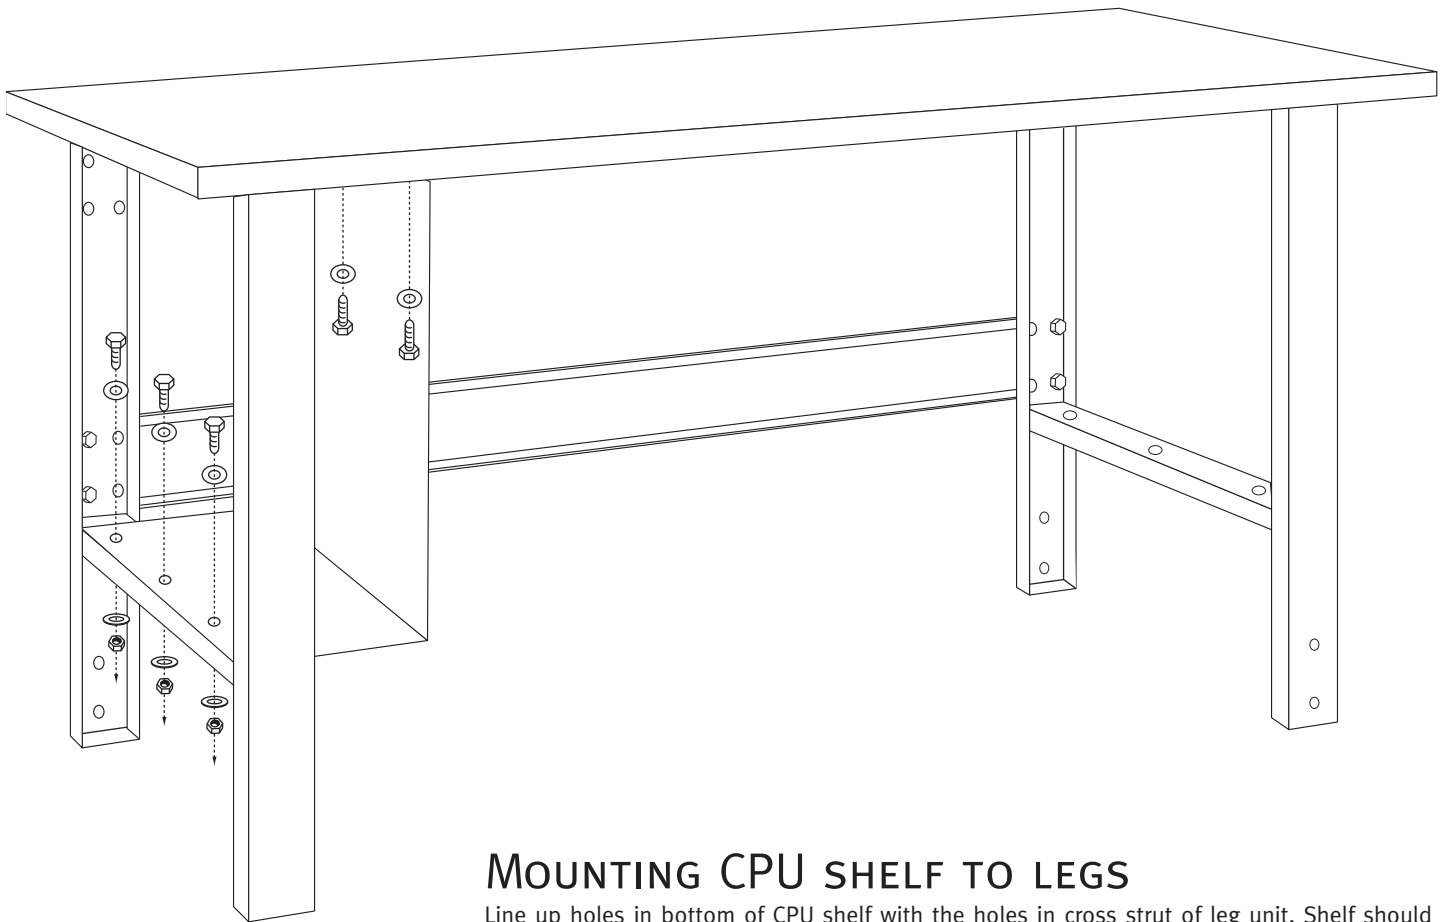

MOUNTING CPU SHELF TO LEGS

Line up holes in bottom of CPU shelf with the holes in cross strut of leg unit. Shelf should be at center of strut front to back. Attach shelf to leg using tap bolts, washers and hex nuts. Position shelf so that it is parallel to leg unit, straight up and down. Mark holes from top of shelf to underside of worksurface. Drill 1/4" pilot holes, then use lagscrews and washers to fasten cpu shelf to worksurface.