


OVERHEAD STRUCTURE ASSEMBLY

MOUNTING CARTON SHELVES TO OVERHEAD

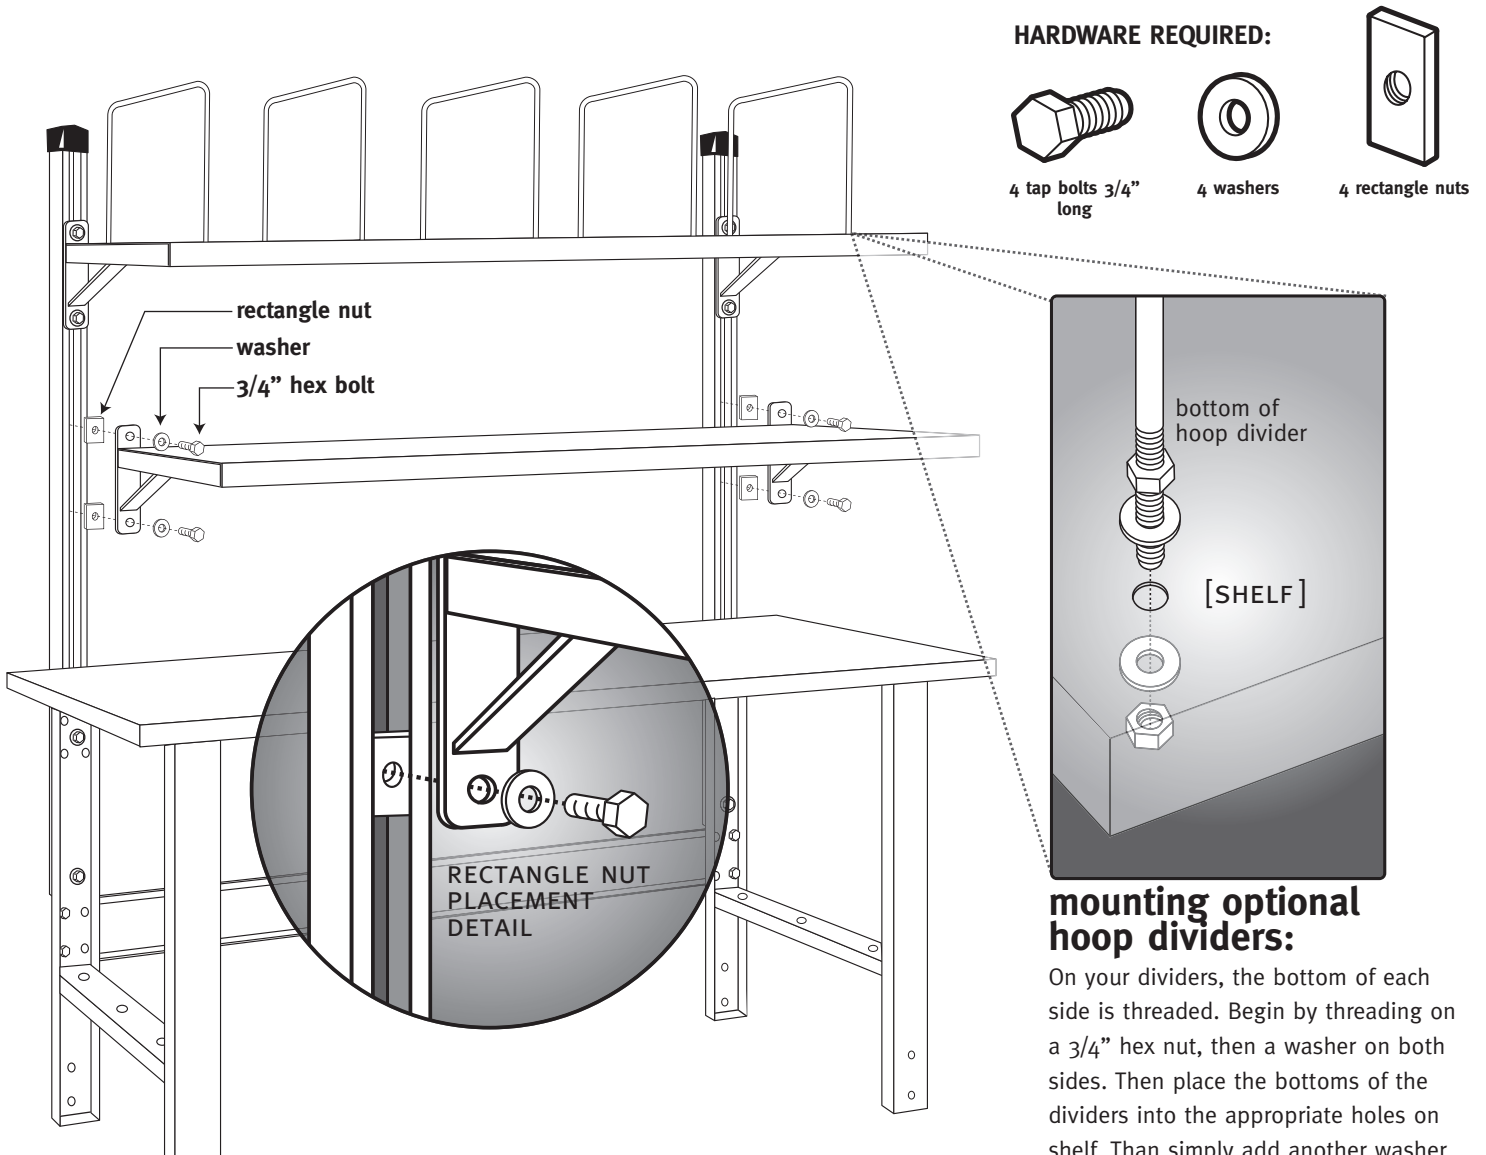

mounting optional hoop dividers:

On your dividers, the bottom of each side is threaded. Begin by threading on a 3/4" hex nut, then a washer on both sides. Then place the bottoms of the dividers into the appropriate holes on shelf. Then simply add another washer and nut at bottom and tighten.

ATTACHING SHELVES

step 1: Assembly of Carton Shelf should be done once the overhead uprights are in place and fastened to bench legs. Begin by assembling hardware supplied for the shelf (shown above) which consists of four 3/4" hex bolts, four washers and four rectangle nuts per shelf.

step 2: Place hex bolt and washer through mounting hole in shelf support and loosely thread bolt to rectangle nut. If you have uprights that are straight, simply slide the the rectangle nuts into the channel at the top, position, then tighten. If you have an angled upright or 90 degree upright you will have to keep the square nut as loose as possible and angle it into the upright channel. This can be a bit tricky sometimes.

step 3: Slide shelf down to desired position being sure that the shelf is level and tightly fasten the shelf to the overhead uprights. Shelves can be adjusted by simply loosening the hex bolts and moving the shelf to desired height.