


est. 1931



UNDERSTRUCTURE ASSEMBLY

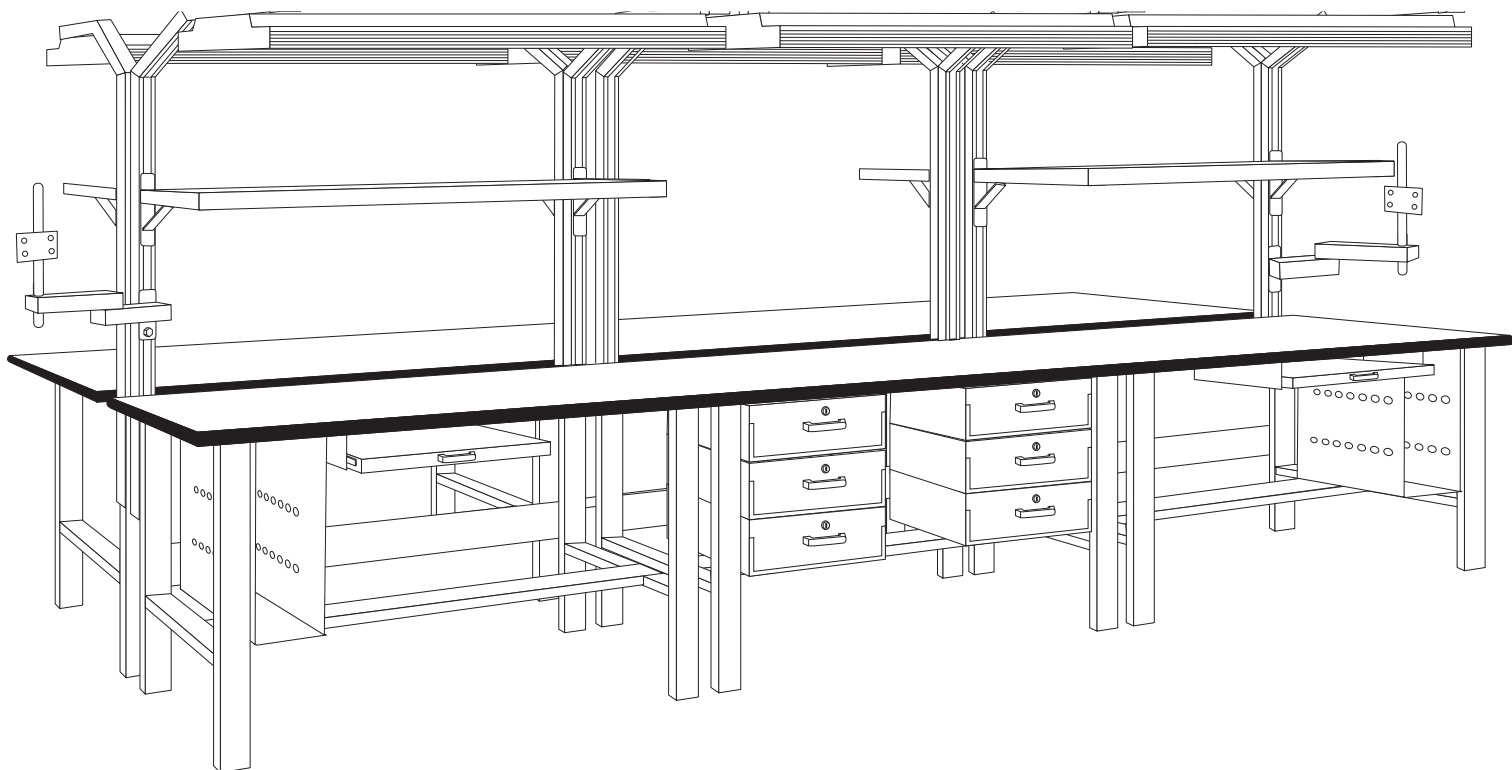

BEFORE YOU BEGIN ASSEMBLY:

Before you begin assembly on your Stackbin workbench please keep in mind that these are industrial grade benches which means they are heavy and require a bit of labor to complete. It may be a good idea to have a second set of hands in this assembly.

Weight capacity: The weight capacities of our workbenches vary depending on series. Please note these capacities in the catalog or website.

Tools: The basic tools required for this assembly include a 9/16" ratchet and 9/16" open end or box end wrench. A drill will be required for drilling pilot holes for attaching legs and accessories to wood tops.