
# **User's Manual**

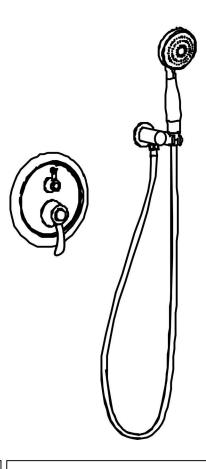

# **INSTALLATION INSTRUCTIONS**

# **Installation Manual**





## IAPMO RESEARCH AND TESTING, INC.













### IAPMO RESEARCH AND TESTING, INC.













### IAPMO RESEARCH AND TESTING, INC.












# **INSTALLATION STEPS**


This product has been inspected and debugged by the factory to the best condition. Please do not disassemble and assemble it yourself.



Before installing the product, please be sure to remove sundries and sludge from the water pipe to prevent sundries from blocking the product.




- 1. Installation dimension diagram. (The picture is for reference only, you can install it according to your own needs.)
- 2. The connection between the valve body and the pipe needs to use the joint for the transfer function, and the joint needs to be sealed with a PTFE tape.

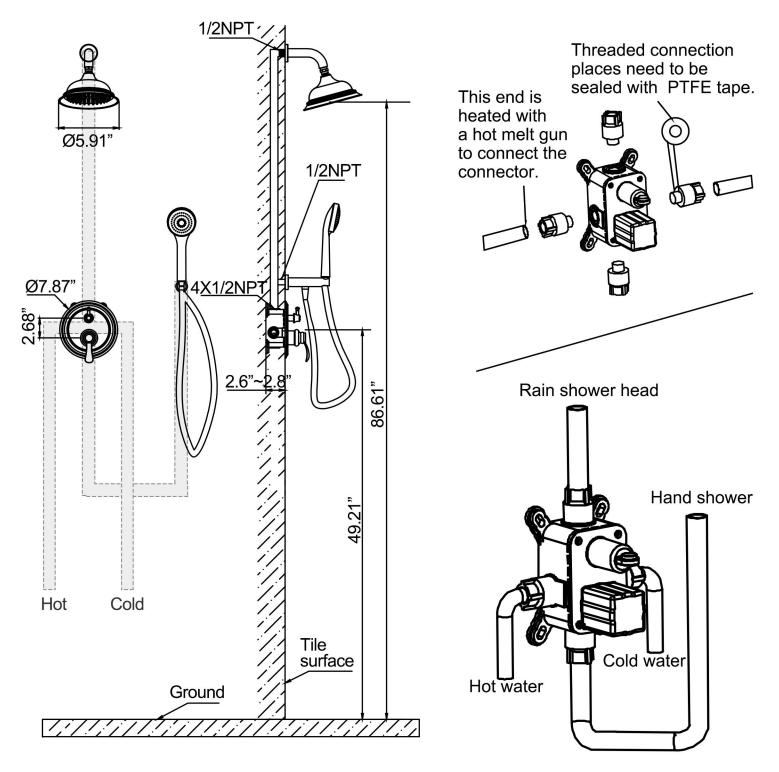


# **INSTALLATION STEPS**


3. Put the valve body connected with the pipe against the wall, draw the outline with a pen and prepare for the slotting.

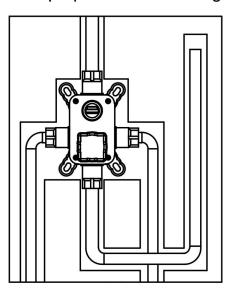


4. The wall is slotted and then drilled.

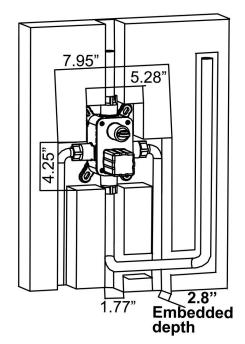


5. Drive the rubber plug into the wall, and fix the main body to the wall with screws.

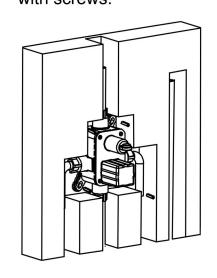


6. After the faucet is connected to the water pipe, test the water normally, keep the pressure for one minute, and check whether there is any water leakage.

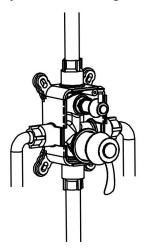


7. There is no problem with the water test, remove the handle and replace the protective cover.

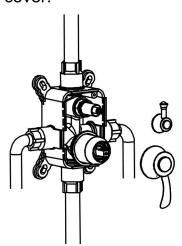

8. Remember to put the protective cover back on before tiling the tiles, and tighten the screws to prevent the surface of the valve body from being damaged.

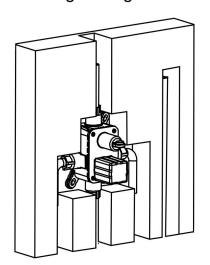


9. After the tile is applied, remove the protective cover, cover the decorative panel, and install the handle and handwheel.

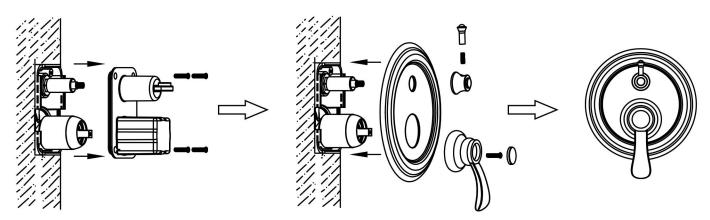


# **INSTALLATION STEPS**

10. Apply PTFE tape to the threaded end, the fix the cover plate onto the shower arm and screw the shower arm into the shower head outlet, and install the rain shower head.


11. Apply PTFE tape to the threaded end, the fix the cover plate onto the hand shower bracket and screw the hand shower bracket into the hand shower outlet.

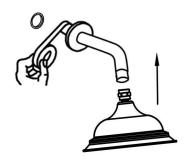

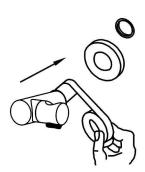

12. Finally, install the hand shower hose on the hand shower and the handshower

bracket respectively.



### **CLEANING CARE**

In order to keep the appearance of product clean, bright and good performance, please take care of the product as follows;

- 1. Rinse with water only and dry with soff cotton cloth;
- 2.Use mild liquid and colorless glass cleaner to remove surface dirt and scale film, or use polish without abrasive effect;
- 3.Do not use abrasive deterfgent, polish, emery cloth, paper towel or scraper, etc;
- 4.Do not use acid cleaner, or cleaner and soap with insoluble gran etc;
- 5.In the process of use, mud my accumulate in the bubbler and make the water flow show,

The bubbler can be unscrewed, rinsed with water, and then installed back in place.





