TRIM CLIP CHART

WITH OEM REPLACEMENT REFERENCES

ACTUAL SIZE IMAGES







PANEL CLIP TO SUIT FORD

MOULDING CLIP TO SUIT TOYOTA

MOULDING CLIP TO SUIT PSA

Replacement OE: CITROEN OE 856543. PEUGEOT OE 856543

HYUNDAI OE 877562E000

MOULDING CLIP TO SUIT HYUNDA

MOULDING CLIP TO SUIT HYUND

MOULDING CLIP TO SUIT HYUNDA

Replacement OE: HYUNDAI OE 877583L000

AUDI OE 5J0867276. SEAT OE 5J0867276 SKODA OE 5J0867276. VW OE 5J0867276

MOULDING CLIP TO SUIT FORD

Head: 13.85mm, Length: 10.78mm.

25

Fits hole size: 8.0mm

Replacement OE: FORD OE MB25556143, Honda

Part No.

975744

Part No.

975528

25

25

25

Part No. 975743 FORD OE 6998849. MERCEDES BENZ

Part No.

25

Part No.

975742

Part No.

Part No.

25

Part No.

975461

25

975740





PANEL CLIP TO SUIT AUDI, SEAT,

RENAULT & VOLVO

Pack of

25

975788

Part No.

975525

PANEL CLIP TO SUIT

BMW & RENAULT

Head: 18.0mm, Length: 14.45mm

PANEL CLIP TO SUIT

CITROEN OE 85654

CITROEN OE 69905

PANEL CLIP TO SUIT

PSA & RENAULT

Head: 20mm, Length: 9.76mn

PANEL CLIP TO SUIT VAG

Pack of

25

975522

Part No.

975460

25

Part No.

Head: 18.32mm, Length: 11.59mm,

PANEL CLIP TO SUIT BMW

PANEL CLIP TO SUIT MERCEDES

AUDI 0E 893867290. SEAT 0E 893867290

TOYOTA OE 904671016

Pack of

25

25

975524

25

Part No.

975506

975785

25

975786

Part No.

975477

PANEL CLIP TO SUIT BMW

Head: 17.88mm, Length: 11.82mm, Fits Hole Size: 7.5mm

BMW 0E 51411870718. BMW 0E 51541885961

PANEL CLIP TO SUIT RENAULT

Head: 21.42mm, Length: 12.40mm, Fits Hole Size: 5.42mm

PANEL CLIP TO SUIT RENAULT. OPEL

PANEL CLIP TO SUIT CHRYSLER

Head: 17.95mm, Length: 16.0mm

PANEL CLIP TO SUIT VAG

Pack of

Part No.

975789

Part No.

975526

975500

Part No.

975471

25

Pack of



















975480

















975794



25

975508











Part No.

25

975436


25




Part No.

Part No.



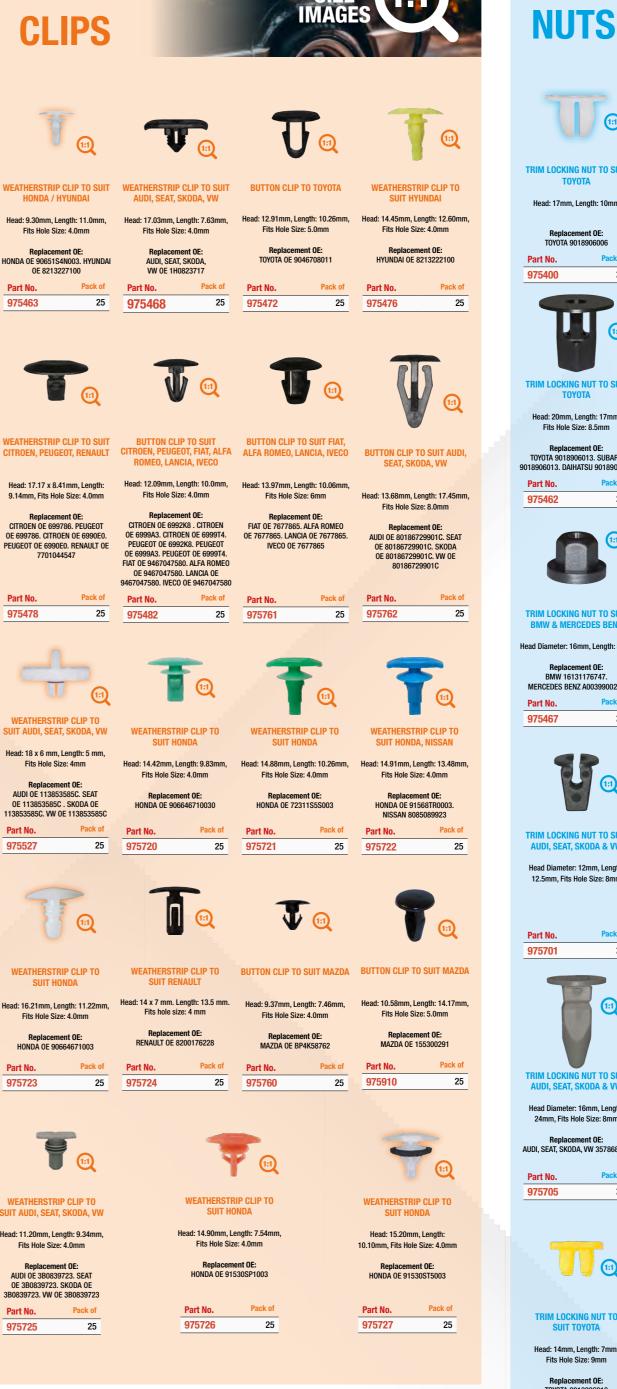

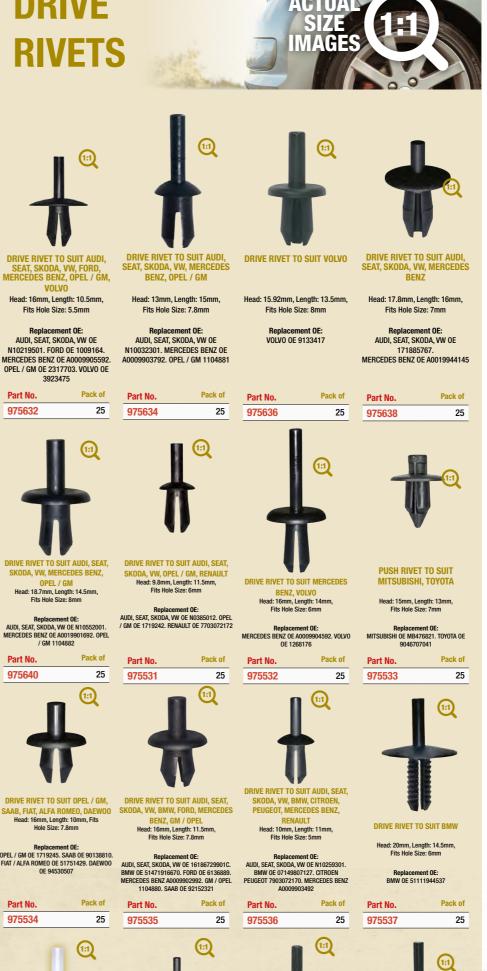

DRIVE RIVET TO SUIT CITROEN

OPEL, RENAULT, VOLVO

Head: 10mm, Length: 7mm,

Replacement 0E: CITROEN PEUGEOT 0E 7903072116. MERCEDES BENZ 0E A0009900392. OPEL GM 0E 16793S. RENAULT 0E 7703072173 VOLVO 0E 947098

975627

25

DRIVE RIVET TO SUIT RENAULT

Fits Hole Size: 5mm

DRIVE RIVET TO AUDI, SEAT, SKODA. DRIVE RIVET TO SUIT CITROEN.

25

Replacement 0E: CITROEN PEUGEOT 0E 9608351380. MERCEDES BENZ 0E A0019902492. RENAULT 0E 7703072224

25

975622

VW, MERCEDES BENZ (NATURAL)

Head: 10mm, Length: 11mm,

975539





MORE RIVETS, CLIPS & FASTENERS AVAILABLE FROM OUR MAIN **CATALOGUE**




TRIM CLIP CHART WITH OEM REPLACEMENT REFERENCES










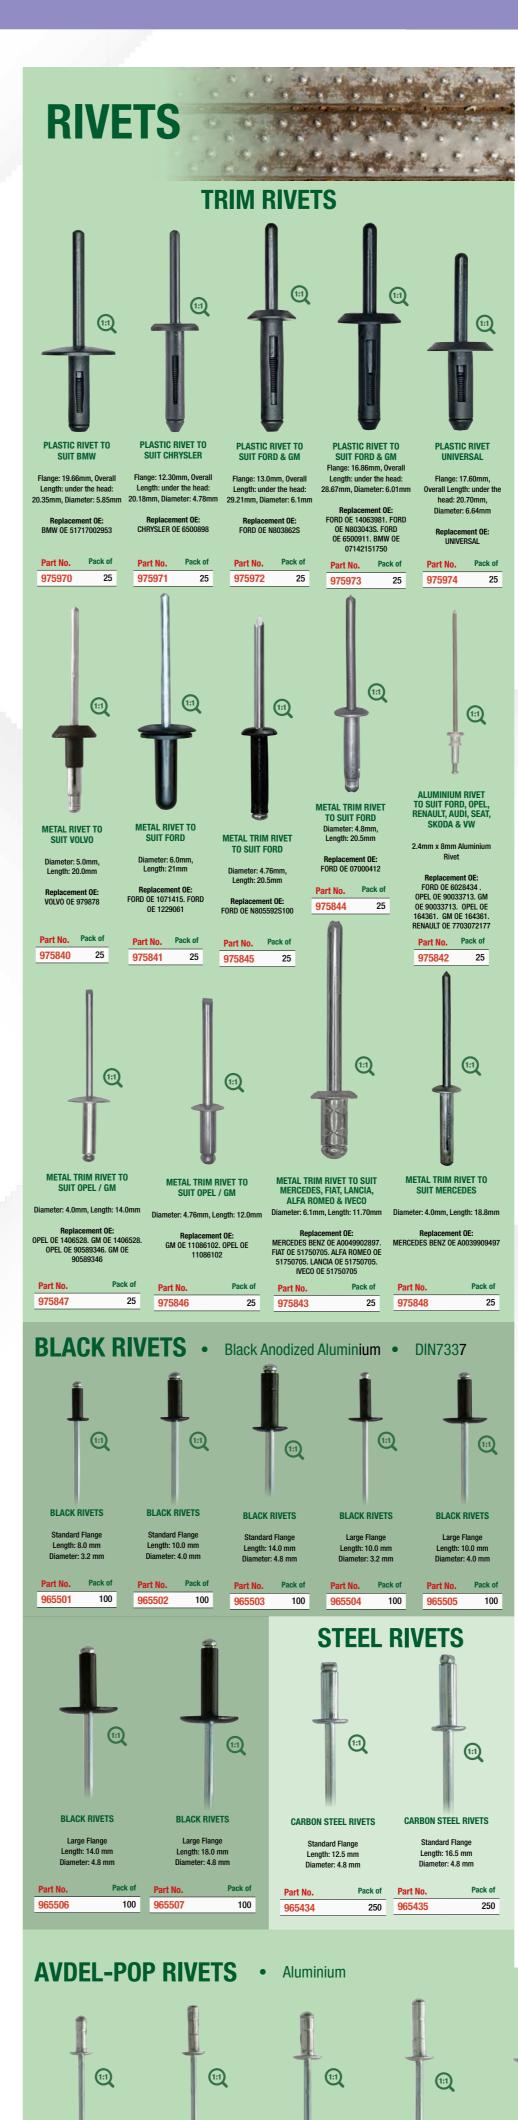



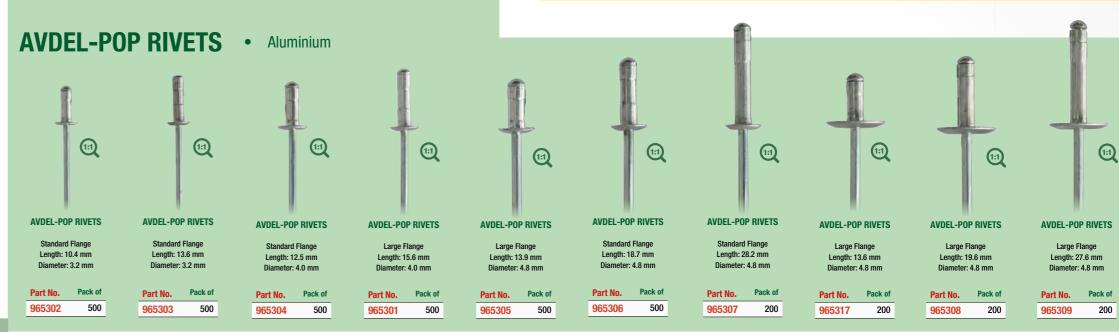





250

1:1

PEEL RIVETS

Standard Flange

Length: 13.0 mm

Diameter: 4.8 mm

Part No.

111

PEEL RIVETS

Length: 19.0 mm

Diameter: 4.8 mm

Part No.



955101

1:1

Length: 23.0 mm

Diameter: 6.4 mm



1:1

MONOBOLTS

Length: 32.0 mm

Diameter: 6.4 mm

955102



MORE RIVETS, CLIPS & FASTENERS AVAILABLE FROM OUR **MAIN CATALOGUE**