
# **VINdustry Wine Pegs & Panel Kits**

3' Rectangular panel installation

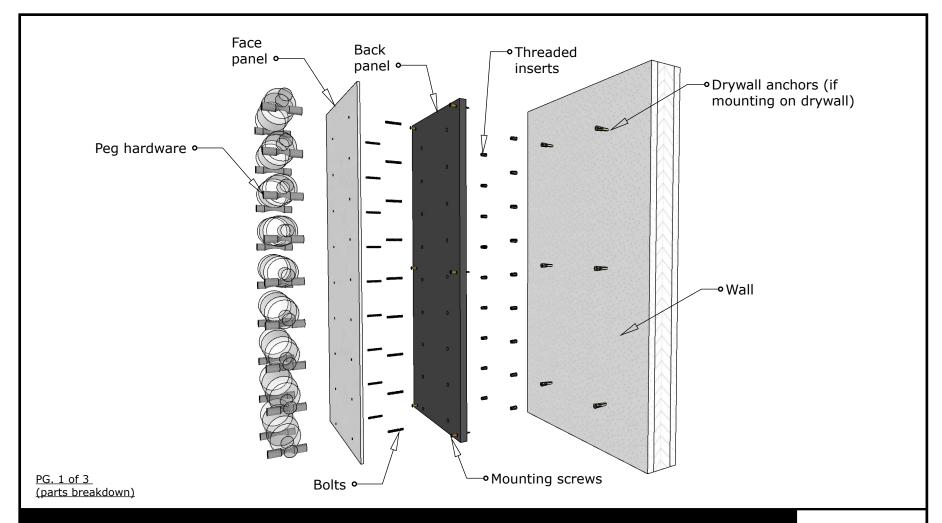


### **Blue Grouse Wine Cellars**


604.929.3180 1.888.400.CORK(2675)



# **VINdustry Wine Pegs & Panel Kits**

3' Rectangular panel installation

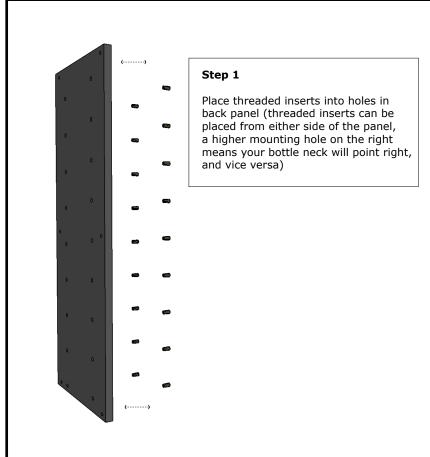

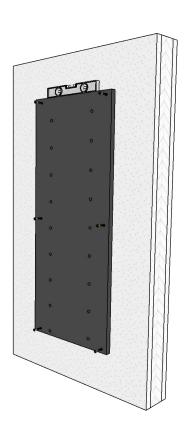

#### Step 2

Mount the back panel using predrilled mounting holes, use a level to ensure level installation (make sure the side of the panel you placed the threaded inserts into is facing the wall)

If using drywall anchors, install them first on the wall in locations corresponding with predrilled mounting holes on the panel

PG. 2 of 3 (installation)


**Blue Grouse Wine Cellars** 

604.929.3180 1.888.400.CORK(2675)



# **VINdustry Wine Pegs & Panel Kits**

3' Rectangular panel installation

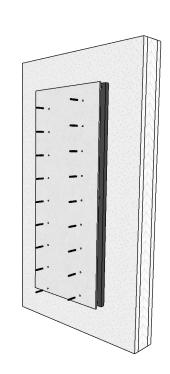


#### Step 3

Screw bolts into threaded inserts at the top of the panel and fit face panel over (make sure the bolts screw fully into inserts)

### Step 4

Screw remaining bolts trough face panel into threaded inserts

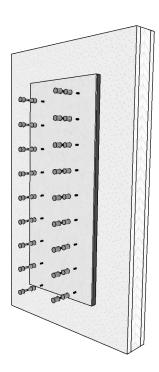

#### Step 5

Screw pegs onto bolts (screw pegs fully onto bolts for a tight fit and strong hold, make sure the peg supporting the neck of the bottle is installed higher than the peg supporting the body of the bottle)

PG. 3 of 3 (installation)

**Blue Grouse Wine Cellars** 

604.929.3180 1.888.400.CORK(2675)

