

Assembly instructions for 6ft IB-Tasting Module. Fasteners. IBTasting-6.1

Tools needed:

- (1) Hammer
- (1) Power drill
- (1) Level
- *Suggested 18 guage Brad Gun with 11/4" brad nails will make install easier.

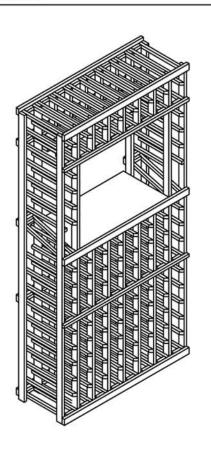


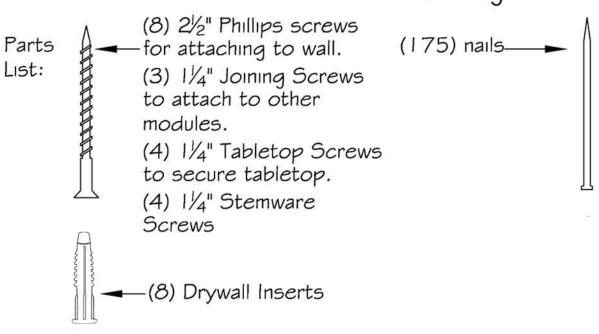


It is helpful if you have two people to assemble this modular rack.



Assembly instructions for 6ft IB-Tasting Module. Racking. IB-Tasting-6. I

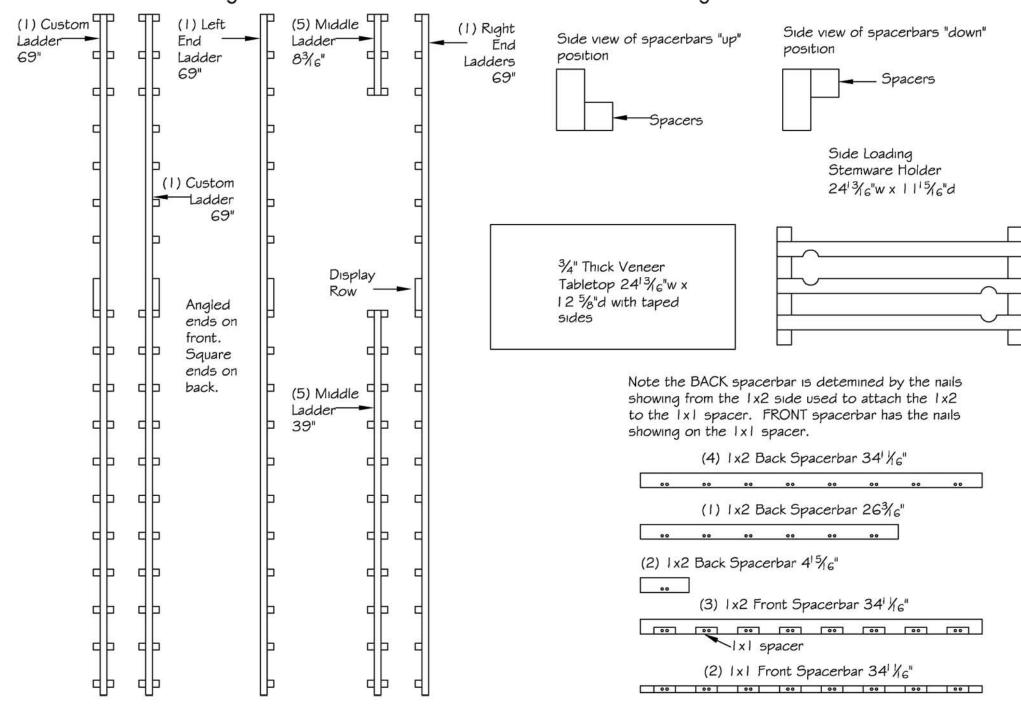


step

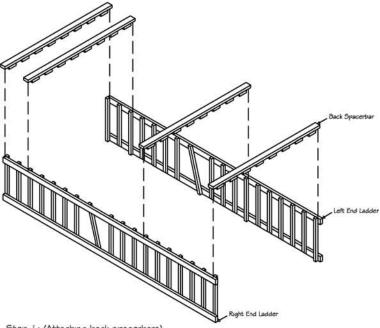


Step 1: (Attaching back spacerbars)
Place the right and left end ladders on the floor, making sure the angled rails are facing the floor. On the 1st, 7th, 16th and 18th rungs, nail the end ladders to a 1x2 BACK spacerbar.

step 3

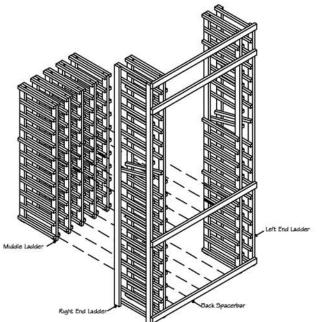


Step 3: (Attaching the 39" tall middle ladders) Insert the five 39" tall middle ladders into the slots of the spacerbar as shown. Nail each middle ladder onto the spacerbars as shown with the nails provided.

step 2

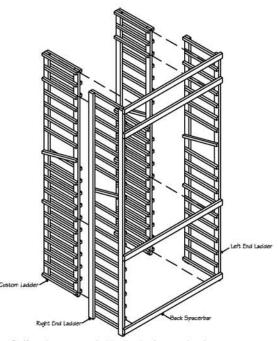

Step 2: (Attaching custom ladders to back spacerbars)
Stand up the rack. Insert the two custom ladders into the slots of the spacerbar as shown. Nail each custom ladder onto the spacerbars as shown


step 4

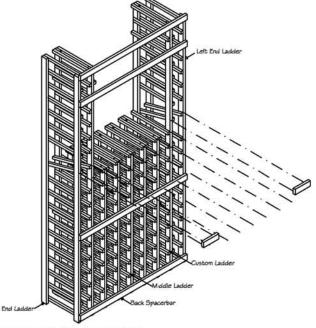

with the nails provided.


Step 4: (Attaching remaining I x2 back spacerbars) Take the $4^{\rm I}\Re_6^{\rm w}$ long spacerbars and attach them behind the angled rungs.

step 5

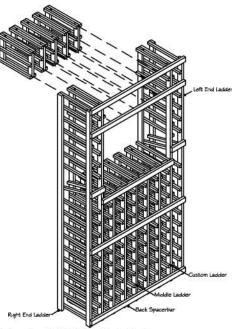


Step 5: (Attaching the 8 3/16" tall middle ladders) Insert the five 8 3/16" tall middle ladders into the slots of the spacerbar as shown. Nail each middle ladder onto the spacerbars as shown with the nails provided.

step 7

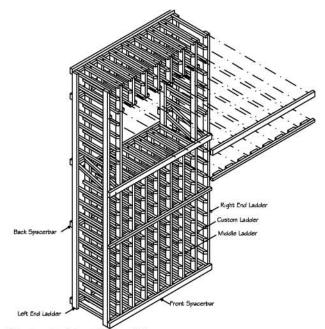


Step 7: (Attaching front spacerbars cont.)
Place a | |x| | spacerbar on the | | |Gth rung and a | |x| | | |spacerbar at the | |Sth rung. Nail into each ladder. The 1x2 spacerbars need to be up so that the spacer is towards the bottom.

step 6

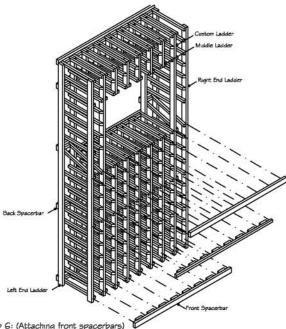


Step 6: (Attaching front spacerbars)
Starting from the bottom, place a 1x2 spacerbar on the 1st rung and a 1x1 spacerbar at the 7th rung. Then another 1x2 at the 11th rung. Nail into each ladder. All 1x2 spacerbars, except the bottom spacerbar, is "up" so that the spacer is towards the bottom. The bottom 1x2 spacerbar is "down" so the spacer is toward the top.

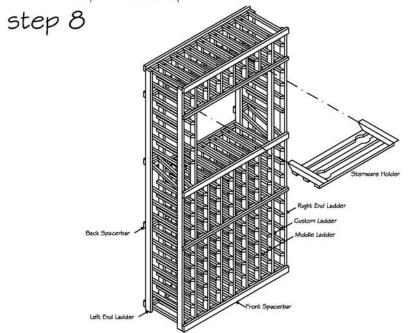

into place. Screw the stemware holder in each of the four corner through the custom ladders.


step 9

step 10 Finish

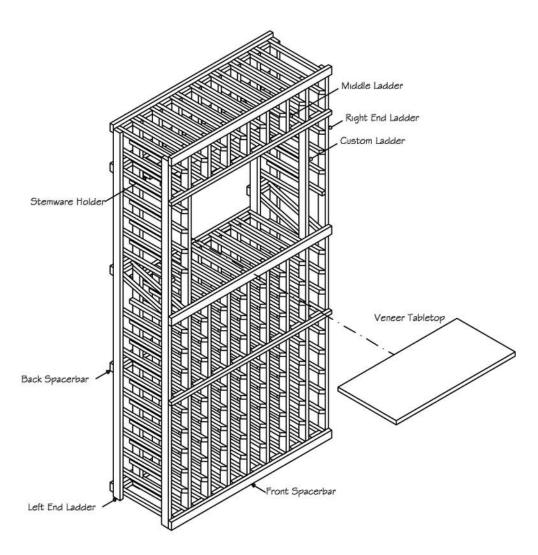

Step 9: (Placing tabletop)

Place the tabletop onto the base of the picture opening. Inspect the tabletop. There will be a good side and bad looking side. The good side faces up. It will fit inside the front spacerbar to hide the edge of the tabletop. Fasten the tabletop from the bottom if desired.

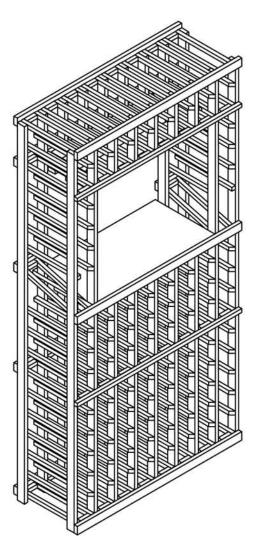

Step 10: (Finish)

Fasten to the wall through the back spacerbars using the 2½" screws and using a level to make sure the rack is mounted square on the wall.

