



RECON TRUCK INSTALLATION GUIDE FOR PART 264231 FENDER LIGHTS




STEP ONE: REMOVE THE (2) STAR HEAD SCREWS ON THE FENDER APRON TO GAIN ACCESS TO THE INSIDE OF THE FENDER AREA.

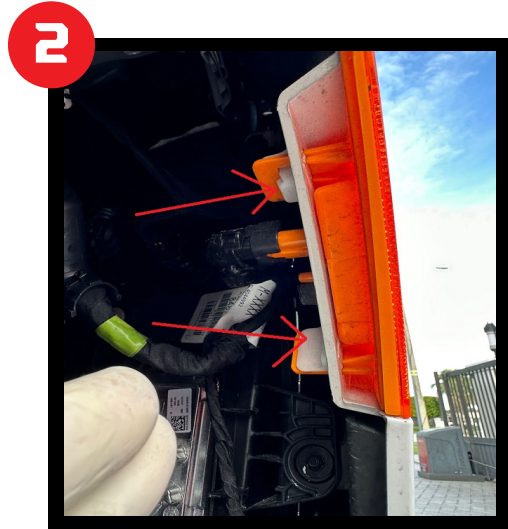

STEP TWO: PUSH THE TWO WHITE RETENTION TABS BACK THROUGH THE HOLDING CLIPS ON THE OEM FENDER LIGHT.

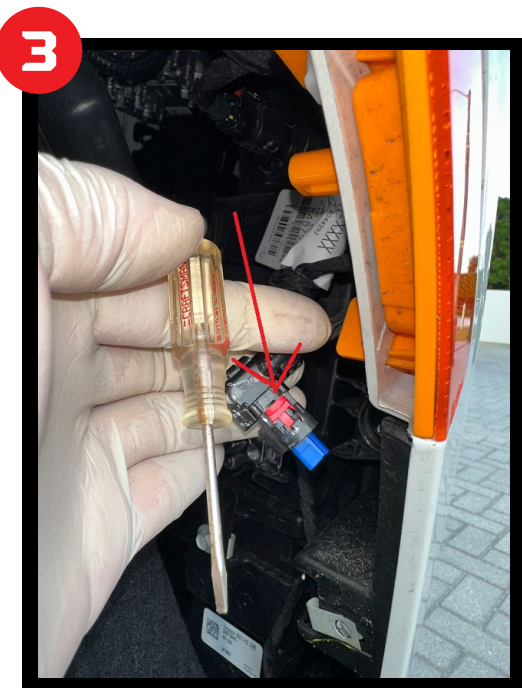

STEP THREE: RELEASE THE WIRE HARNESS FROM THE OEM FENDER LIGHT BY DEPRESSING THE RED LOCKING TAB AND PULLING THE HARNESS AWAY FROM THE LIGHT.

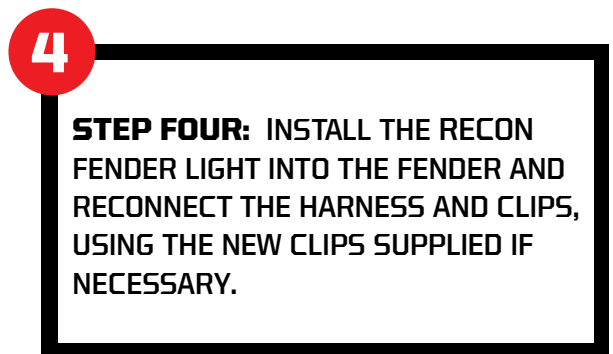

STEP FOUR: INSTALL THE RECON FENDER LIGHT INTO THE FENDER AND RECONNECT THE HARNESS AND CLIPS, USING THE NEW CLIPS SUPPLIED IF NECESSARY.



THANK YOU FOR PURCHASING FROM
GORECON.COM
AND ENJOY YOUR NEW FENDER LIGHTS!