

MOTOR DISABLE AND STARLINK INSTALL INTO STAR-MOUNT

STEP 1:


Line up the Template in the Right-hand corner
with the Starlink Pole facing you.

*****Make sure you have “STOWED” your Starlink
through the Starlink App before starting this
process! This will bring the Starlink Leg down as
flat as it goes*****



STEP 2:

Use a Pen or Pencil to mark on your Starlink Dish through
the hole on the template.

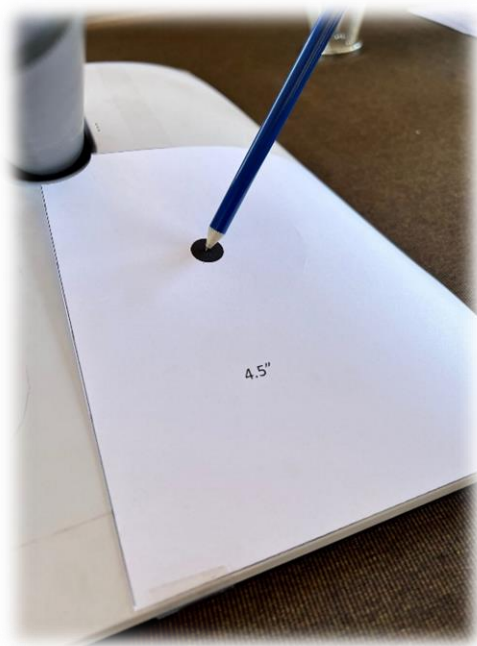

STAR-MOUNT
SYSTEMS

STEP 3:

Line the Hole-Saw bit supplied in your shipment with the hole mark you made from the template.



STEP 4:

Slowly Drill into the Dish. Go slow. This is the step is crucial and should be taken slow. Take your time! Drill until you are completely through all the way around. The Black Tape on the Hole-Saw should prevent you from drilling too deep and hitting the circuit board. Be Cautious though.



STEP 5:

Once you have drilled the hole, remove the Hole-Saw bit from the Dish. You are done using the hole-saw and drill now.



STAR-MOUNT
SYSTEMS



STEP 6:

You will have this piece either in the hole of your Starlink or in your hole-saw bit. Remove and discard.

STEP 7:

You will also now see the wire to the motor that you will soon be disconnecting. Clean up and plastic edges in the inside of the cut you made. This will help for a better seal with the rubber plug supplied in your kit.



STEP 8:

Reach in with your fingers and disconnect the plug for the motor. There is a little clip so you will have to press that as your pull. Don't force it and be gentle! After it is disconnected, let it lay in place.



**STAR-MOUNT
SYSTEMS**

STEP 9:

Get the Rubber Plug that was supplied in your kit and install in in the hole you drilled



YOU ARE DONE WITH THE MOTOR DISCONNECT!

You will see a alert on your Starlink App that read “MOTORS STUCK”. You did this right! You see this because we have disconnected the motors! All is good!

IN THE EVENT YOU WANT TO RE-CONNECT THE MOTORS, ALL YOU HAVE TO DO IS REMOVE THE PLUG, PLUG THE WIRE BACK INTO THE CIRCUIT BOARD, PUT THE RUBBER PLUG BACK ON AND YOU’RE ALL SET AND YOUR STARLINK WILL ROTATE ON YOUR TRIPOD AS BEFORE!

**STAR-MOUNT
SYSTEMS**

STAR-MOUNT INSTALL PROCESS


STEP 1:

Once the Motor Disable is complete and you have your rubber plug on, take the Lid (the top part of the STAR-MOUNT) and lay it face down on your table. Take your Starlink and place it face down into the Lid of the STAR-MOUNT.



STEP 2:

Install the other half of your STAR-MOUNT as shown in the picture below. Take 7 of the bolts and lock washers that you took off and place them in the slots shown in the picture below. Tighten those bolts down slowly and evenly around the lid. It is suggested that you finger tight them and then use a tool after that.

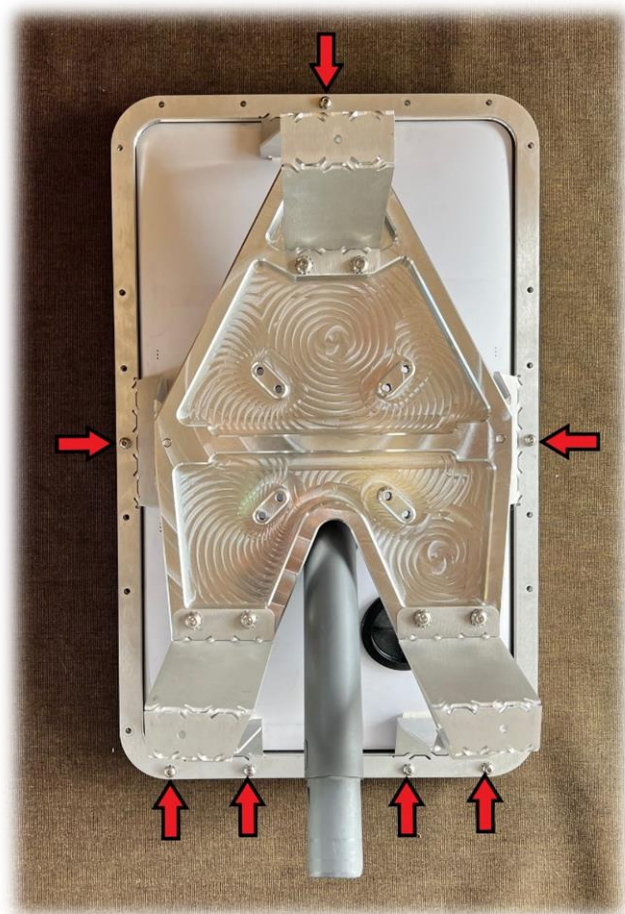

STAR-MOUNT
SYSTEMS

STEP 3:

Once you have the first set of bolts shown in the last step, place the remaining bolts into the case. It is suggested that you finger tight them and then use a tool after that.



STEP 4:

Your STAR-MOUNT was shipped without the legs attached. The screws that hold the legs down are already screwed into their respective spots on the bottom on the STAR-MOUNT so you will need to remove them and then use those to install the legs.

STEP 5:

If you purchased Magnet Ends, you now install those using the Magnets and bolts supplied in your kit.

YOU ARE DONE!



Further Questions? Please E-mail: starmounts@yahoo.com