

ALMOST HEAVEN  
SAUNAS **Tower Shower Assembly Instructions**

Your Tower Shower comes to you completely assembled and ready to go. All you need to do is attach the shower stem and fixtures. Below are the steps you need to follow to complete your shower assembly; it shouldn't take you more than 20 minutes!


### Operation

Once assembled you can "plumb" your shower in two ways, either using a garden hose from a nearby faucet or plumbing with hot and cold water as with fixtures in your home.

- To use a garden hose, run a garden hose from a faucet and attach to the inlet on the back of your shower. Once the water is turned on you can operate your shower with the control on the inside of the shower. Because you are only plumbing to one of the inlets, the shower will only operate in either the left or right position, depending on which inlet is being used.
- To use hot and cold water you can either run another garden hose to the second inlet or consult a plumber for the best way to bring water to the shower.
- If you find any drips or leaks in any of the fittings, simply locate the source and tighten the fitting with a wrench. Be sure to check that the rubber seal is properly in place and thread tape is used before re-tightening any fittings.

### In the Months and Years Ahead...

- We use red cedar for your shower because red cedar is naturally resistant to the effects of weather and moisture. Over time you will see the red cedar turn a silvery-gray as a result of UV exposure. This in no way hurts the lumber, and the natural weathering of the wood adds charm to the shower over time. If you wish to retain the original color of the wood and minimize the effects of UV, you can stain the lumber with a UV-inhibited stain of your choice.
- To clean the wood or bring back the original color you can use a pressure washer in the same way you would clean a wooden deck. Be sure to use a wide pattern and keep a distance from the wood as it is easy to damage the soft cedar with too much pressure.
- Fully drain the shower and remove wand, hose and showhead fixture in freezing temperatures.

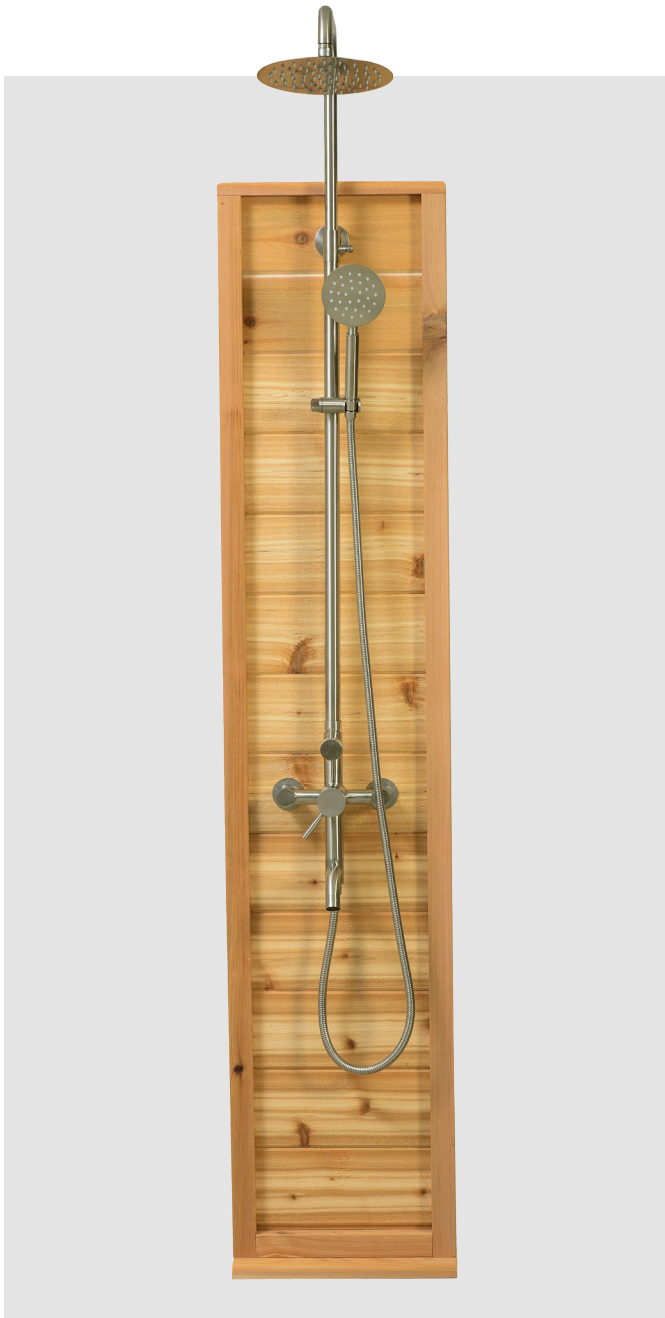

### Tower Shower Assembly Instructions



1. Lay your shower section on a flat surface.



2. Check to be sure the rubber gasket is inside the end of the shower stem.



3. Hand tighten the shower stem onto the valve assembly (hand tighten only).



4. Slip the mounting post into the wall bracket.

*continued on reverse side*





5. Using provided hex wrench, tighten the set screw to the shower stem.



6. Using a pliers, tighten the nut that secures the shower stem to valve assembly.



7. Twist the overhead shower head onto the stem assembly.



8. Twist the hand wand on to the hose and the hose to the base of the valve assembly.



9. Lift the shower upright so it appears as shown.



10. For cold water only attach the garden hose to one of the inlets on the back of the shower section and cap the other side with the included cap.



11. For hot/cold water, have your plumber use braided supply hoses to connect to water sources.



12. You can screw the shower section to the deck or to a wall, whichever is preferred. If using the optional floor section, place the floor at the desired location.



13. Screw the shower section to the floor section to stabilize the unit.



14. Your completed shower!