

350 Kick Down Cable Installation

1. Assemble cable adjuster bracket (as shown).
2. Mount cable adjuster bracket onto rear carb stud or manifold bolt using hold down bracket.
3. Temporarily install aluminum slider tube into transmission.
4. Install cable housing between slider tube (at trans) and cable adjuster (at carb). Allow at least one inch extra housing length for adjustment. (Do not strip back vinyl covering on cable housing.)
5. Lube and install throttle cable per throttle cable instructions (add throttle cable clamp and feed through bellcrank arm before installing into housing).



NOTE: Make sure attachment point of swivel end is the same distance from the throttle shaft as the stock set-up to insure sufficient or else kick-down pull may be inadequate.


6. After throttle is adjusted, lube and install kick-down cable into the bottom end of the slider tube (as shown) and hook up to bent wire at transmission kick-down hole.
7. Install O-ring, lube and install slider tube.

NOTE: The bent wire in the transmission operates with a very light pull, so when the slack is taken up on the kick-down cable, that's usually all there is!

8. After determining how much pull is required to fully engage the kick-down, hook up cable at clevis on bellcrank. (Leave the cable a little on the long side - it's much easier to shorten something then to add!)
9. Position the throttle cable clamp so that full throttle occurs just before the kick-down bottoms out.
10. Check to make sure that the gas pedal bottoms just before reaching full throttle at the carb.

IMPORTANT

USE A FACTORY TYPE THROTTLE RETURN SPRING or GENNIE SHIFTER THROTTLE SPRING KIT # 3021. CHECK FOR BINDING OR OVERCENTER CONDITION BEFORE STARTING ENGINE.

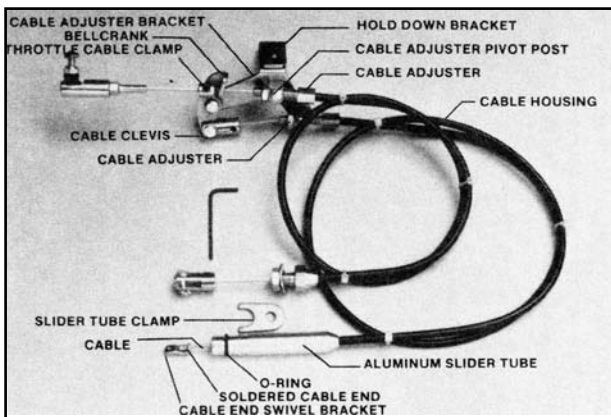

READ THIS NOTICE

This product will be replaced if defective in manufacture or packaging. Except for such replacement, the sale or any subsequent handling of this product is without warranty or liability even though defect, damage, or loss is caused by negligence or other fault.

GENNIE

SHIFTER™



GENNIESHIFTER.COM

INST10003



STILL THE BEST!

DENVER, COLORADO

1-866-623-1963

GENNIESHIFTER.COM

INST10003