


FAT-FENDERED CABLE INSTALLATION

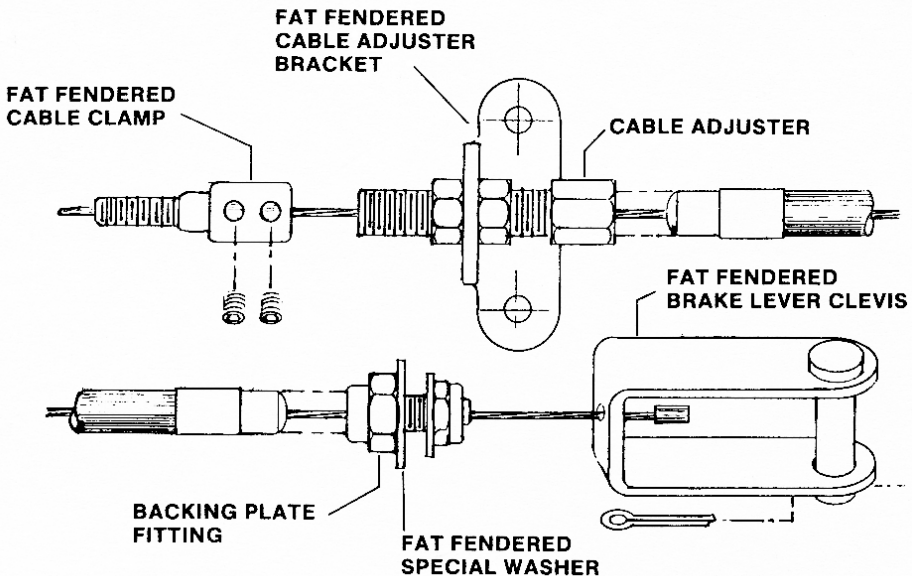

1. Backing plate fitting with special washer and brake lever clevis attach to stock Ford dash-mounted hand brake lever.
2. The fat fendered cable clamp screws into the cable junction block (from UN-2 kit) to connect the fat fendered cable to the UN-2 cables.
3. Follow the illustrations and instructions (from UN-2 kit) to complete installation.




READ THIS NOTICE

This product will be replaced if defective in manufacture or packaging. Except for such replacement, the sale or any subsequent handling of this product is without warranty or liability even though defect, damage, or loss is caused by negligence or other fault.

GENNIE

SHIFTER™

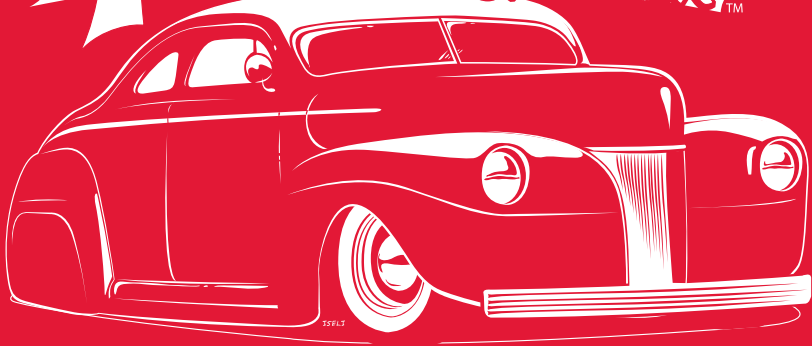

GENNIESHIFTER.COM

INST10022



STILL THE BEST!

DENVER, COLORADO

1-866-623-1963

GENNIESHIFTER.COM

INST10022