



## Replacement Screens for Vanagon Westfalia


Left: 253-847-749  
Right: 253-847-750




This screen will fit Vanagon Westfalia sliding side windows only. It is designed to replace the original plastic screens that are no longer available. The photo above shows a Westfalia driver side window with the latch in the middle of the sliding glass. If your latch is located near the front of the window frame, this screen will not fit your window.

Screens are labeled VW7 for the left (driver's side) screen, and VW2 for the right (passenger side). To install the screen, loosen tension clip screws. Turn the clips sideways and tighten them slightly so that they clear the bottom of the window frame during installation. Next, from inside your van, open your sliding window all the way, insert the top pins into the top inside window channel and push the bottom over the window frame. Note: You may have to bang on the bottom edge of the screen with the heel of your palm to get it over the lip. Push the screen forward to seal the front edge.

Now from the outside, loosen the tension clip screws and turn so that clips catch the bottom of the window frame. Retighten screws securely. Back inside your van, check the screws on the retaining clips and tighten if needed.

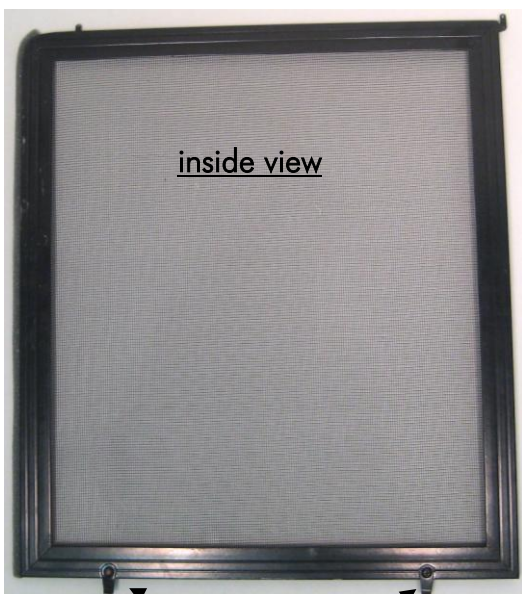

retaining  
clips

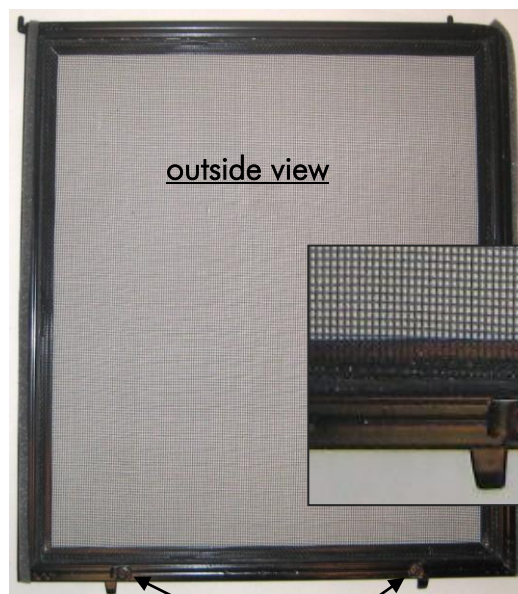

tension clip

tension  
clips