



These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.

## 7P-ABS-LF

### ABS Plastic Driver's Side Front Panel for 7-Passenger Vanagon

---

*The 7P-ABS-LF for Vanagon is CNC-machined to fit the driver's-side front panel in 7-Passenger models. Made from nearly-indestructible, 3mm thick, ABS plastic, this panel can be run as-is (they look awesome), painted with a high-quality plastic paint, or upholstered.*

Each panel features recessed a cutout for locating the original ash tray insert. The cutout is scribed onto the back side of the panel with easy-to-follow lines and is an optional feature that can be removed if desired. Use the appropriately sized hole-saw, rotary tool or saw to cut the sections for your door accessory options. Each cutout may then need to be filed slightly for clearance. See the diagram on the back of this page for more details.

#### **Panel Installation:**

1. Place the panel over the door, aligning the mounting hole cutouts.
2. Screw in each Panel Fastener snugly using a Phillips-head screwdriver. Slight inward pressure can be used, but forcing the clips all the way in will make the clip hard to remove.

Be careful not to over-tighten and do not push the clips in without turning them.

GoWesty Camper Products • 1119 Los Olivos Ave, Los Osos, CA 93402 • 888-469-3789 • [www.gowesty.com](http://www.gowesty.com)



These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.

## 7P-ABS-LF

### ABS Plastic Driver's Side Front Panel for 7-Passenger Vanagon

---

*The 7P-ABS-LF for Vanagon is CNC-machined to fit the driver's-side front panel in 7-Passenger models. Made from nearly-indestructible, 3mm thick, ABS plastic, this panel can be run as-is (they look awesome), painted with a high-quality plastic paint, or upholstered.*

Each panel features recessed a cutout for locating the original ash tray insert. The cutout is scribed onto the back side of the panel with easy-to-follow lines and is an optional feature that can be removed if desired. Use the appropriately sized hole-saw, rotary tool or saw to cut the sections for your door accessory options. Each cutout may then need to be filed slightly for clearance. See the diagram on the back of this page for more details.

#### **Panel Installation:**

1. Place the panel over the door, aligning the mounting hole cutouts.
2. Screw in each Panel Fastener snugly using a Phillips-head screwdriver. Slight inward pressure can be used, but forcing the clips all the way in will make the clip hard to remove.

Be careful not to over-tighten and do not push the clips in without turning them.


GoWesty Camper Products • 1119 Los Olivos Ave, Los Osos, CA 93402 • 888-469-3789 • [www.gowesty.com](http://www.gowesty.com)



These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.

### 7P-ABS-LF

## ABS Plastic Driver's Side Front Panel for 7-Passenger Vanagon

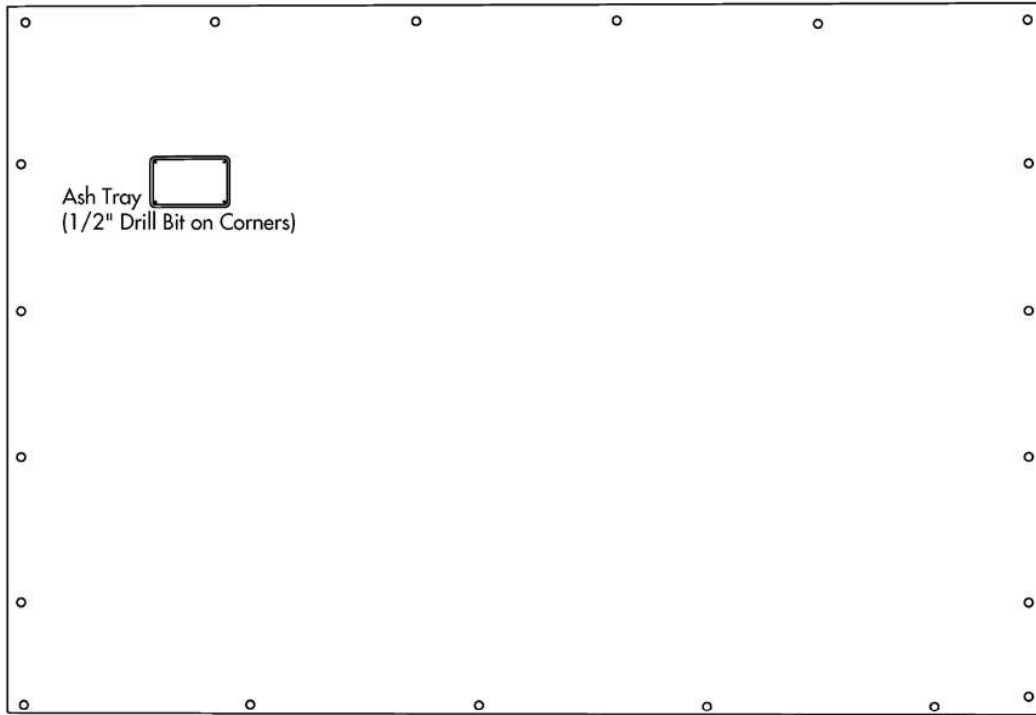


GoWesty Camper Products • 1119 Los Olivos Ave, Los Osos, CA 93402 • 888-469-3789 • [www.gowesty.com](http://www.gowesty.com)



These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.

### 7P-ABS-LF

## ABS Plastic Driver's Side Front Panel for 7-Passenger Vanagon

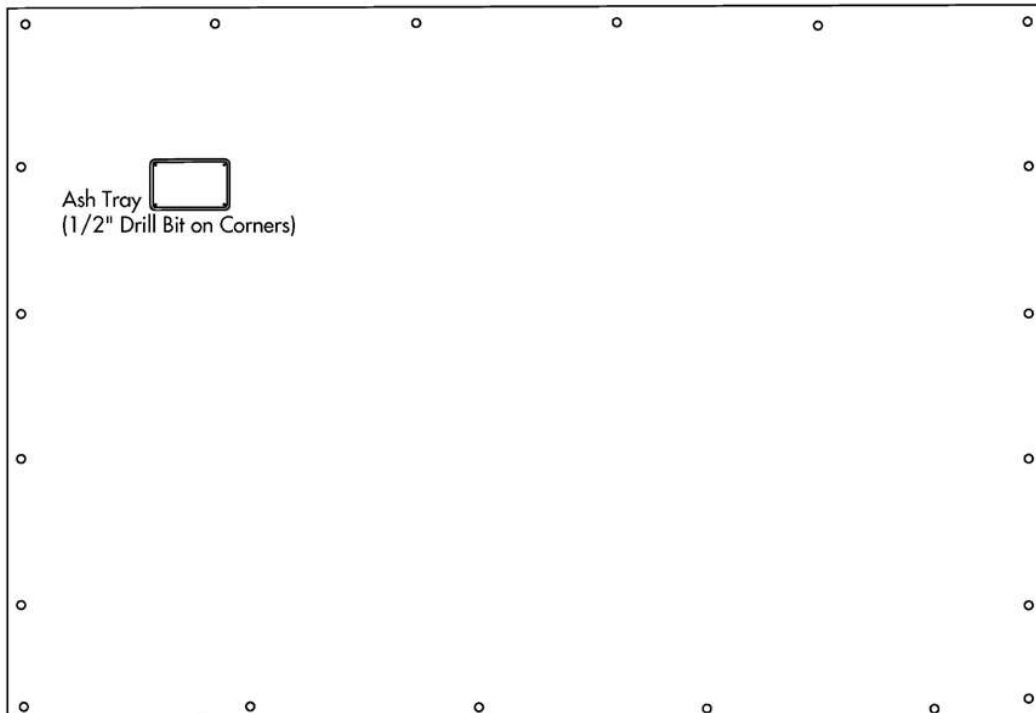

GoWesty Camper Products • 1119 Los Olivos Ave, Los Osos, CA 93402 • 888-469-3789 • [www.gowesty.com](http://www.gowesty.com)