




These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.

ALT-100

Lazy Battery Light Fix for Vanagon

The Lazy Battery Light Fix Kit is designed to install in the black box on the fire wall in the left side of the engine compartment.

Start by finding the solid **Blue** (alternator) wire and the solid **Black** (circuit15) wire in this box. Unplug the yellow connector in the middle of each of these wires. The Lazy Battery Light harness will plug between the two yellow connectors on each wire. Be sure to match the colors from the vehicle's wiring to the Lazy Battery Light Harness wiring. **Blue to Blue** and **Black to Black**. Tuck the assembly neatly back in the box and refasten the lid. You're done. No, seriously, that's it. Go drive your van!

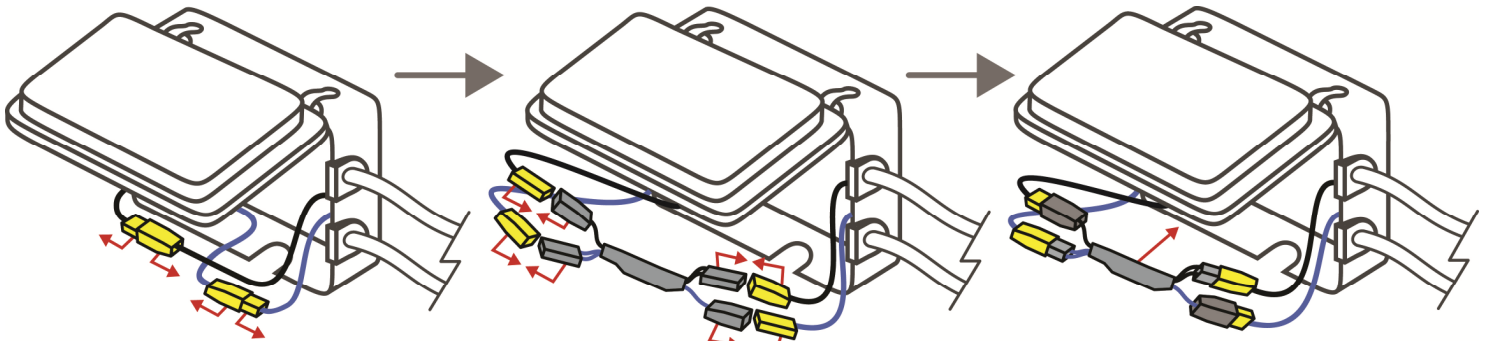

GoWesty Camper Products • 1119 Los Olivos Ave, Los Osos, CA 93402 • 888-469-3789 • www.gowesty.com




These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.

ALT-100

Lazy Battery Light Fix for Vanagon

The Lazy Battery Light Fix Kit is designed to install in the black box on the fire wall in the left side of the engine compartment.

Start by finding the solid **Blue** (alternator) wire and the solid **Black** (circuit15) wire in this box. Unplug the yellow connector in the middle of each of these wires. The Lazy Battery Light harness will plug between the two yellow connectors on each wire. Be sure to match the colors from the vehicle's wiring to the Lazy Battery Light Harness wiring. **Blue to Blue** and **Black to Black**. Tuck the assembly neatly back in the box and refasten the lid. You're done. No, seriously, that's it. Go drive your van!

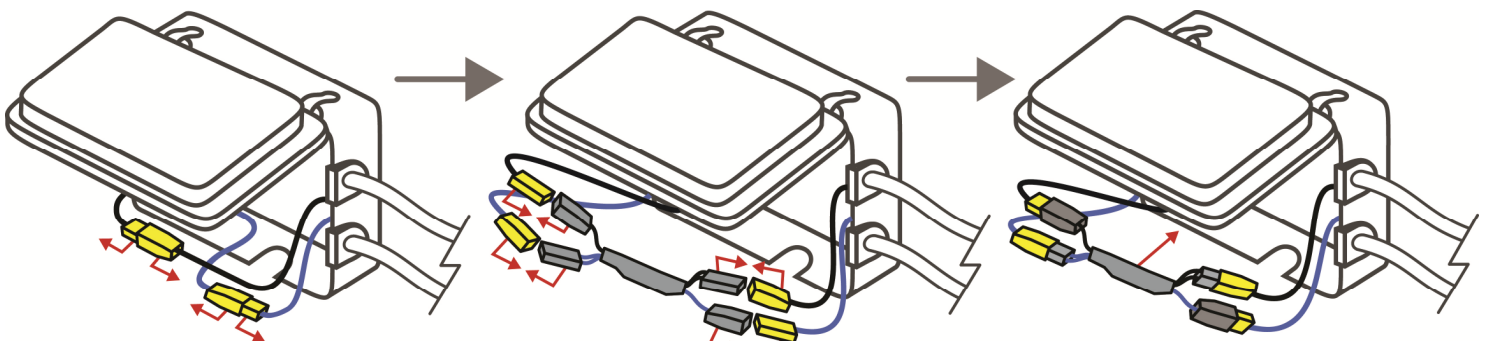

GoWesty Camper Products • 1119 Los Olivos Ave, Los Osos, CA 93402 • 888-469-3789 • www.gowesty.com