



These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.


## EV-RODENT-SHIELD

### Rodent Ingress Prevention Device [Eurovan]

1. Remove the bumper and bumper cover to expose the vents. There are two large 12mm bolts (19mm wrench size) on either frame rail holding the bumper to the vehicle and several small screws holding the edges of the cover to the body at the wheel wells and along the top and bottom of the cover.



2. Lay the pre-cut screens over the vent and fold down the four long sides to create a nice even seal.

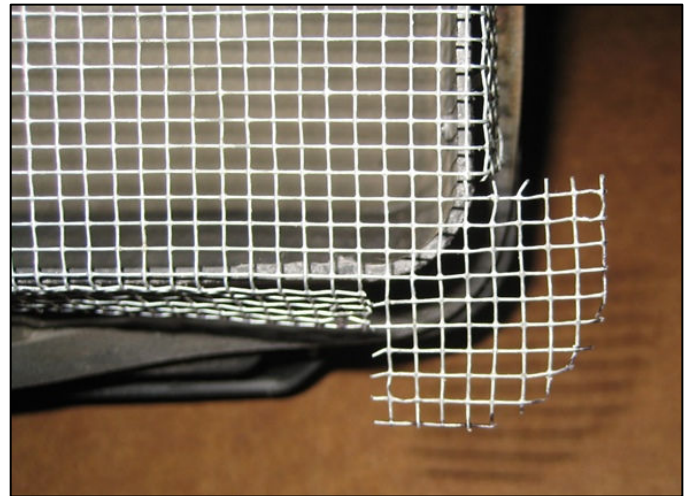

3. Fold the corners down at the "point" of the corner and wrap the "tips" around the sides. The tips should overlap the sides allowing you to secure them down together with one screw through each tip/side flap junction. The screws can just be pushed into and screwed through the plastic (or you can drill small pilot holes, if you wish).



4. Re-install the bumper cover.