


## Westfalia Poptop Seal Kit Installation Guide 1974-91 VW Bus & Vanagon Campers

## **Pop-Top Seal**

With the pop-top open, pull off the stock seal and clean the now exposed edge of the top. New seal installation is as follows.

- Press the U-shaped channel onto the edge of the pop-top, with the bulb facing inboard toward the tent. Use a mallet and block of wood to tap the seal onto the rack if necessary. Trim the seal ½" from the pop-top front edge of both sides.
- Apply glue to both the front edge of the pop-top and inside the rounded groove of the flat seal, and allow glue to become tacky.
- With the glue tacky, press the flat seal on the front edge of the pop-top, and trim the excess on both ends to be even with the U-shaped seal. Allow glue to fully cure for 2 hours before closing top.

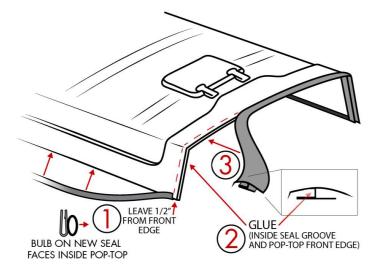

GoWesty Camper Products • 1119 Los Olivos Ave, Los Osos, CA 93402 • 888-469-3789 • www.gowesty.com



These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.

## Westfalia Poptop Seal Kit Installation Guide 1974-91 VW Bus & Vanagon Campers

## **Pop-Top Seal**

With the pop-top open, pull off the stock seal and clean the now exposed edge of the top. New seal installation is as follows.

- Press the U-shaped channel onto the edge of the pop-top, with the bulb facing inboard toward the tent. Use a mallet and block of wood to tap the seal onto the rack if necessary. Trim the seal ½" from the pop-top front edge of both sides.
- 2. Apply glue to both the front edge of the pop-top and inside the rounded groove of the flat seal, and allow glue to become tacky.
- With the glue tacky, press the flat seal on the front edge of the pop-top, and trim the excess on both ends to be even with the U-shaped seal. Allow glue to fully cure for 2 hours before closing top.

