




These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.

GVW-SKIDPLATE-CENTER Center Skidplate for Syncro

Instructions:

- Line the skidplate up under the factory center under-run bars. Using a set of clamps to hold the skidplate in place will help with the install.
- Using a 3/8" drill bit, drill holes in the factory under-run bars through the 10 square holes in the skidplate. These holes will need to be drilled all the way through both sides of the rectangular tubing. Use the supplied 8mm diameter carriage bolts, nuts and washers to mount the skidplate via the 3/8" holes. Make sure to apply the included anti-seize to your hardware

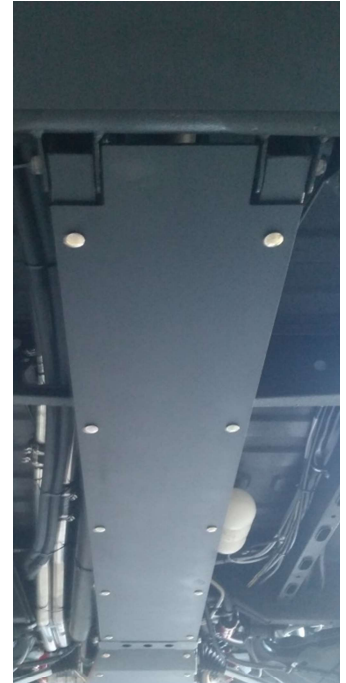

GoWesty Camper Products • 1119 Los Olivos Ave, Los Osos, CA 93402 • 888-469-3789 • www.gowesty.com




These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.

GVW-SKIDPLATE-CENTER Center Skidplate for Syncro

Instructions:

- Line the skidplate up under the factory center under-run bars. Using a set of clamps to hold the skidplate in place will help with the install.
- Using a 3/8" drill bit, drill holes in the factory under-run bars through the 10 square holes in the skidplate. These holes will need to be drilled all the way through both sides of the rectangular tubing. Use the supplied 8mm diameter carriage bolts, nuts and washers to mount the skidplate via the 3/8" holes. Make sure to apply the included anti-seize to your hardware

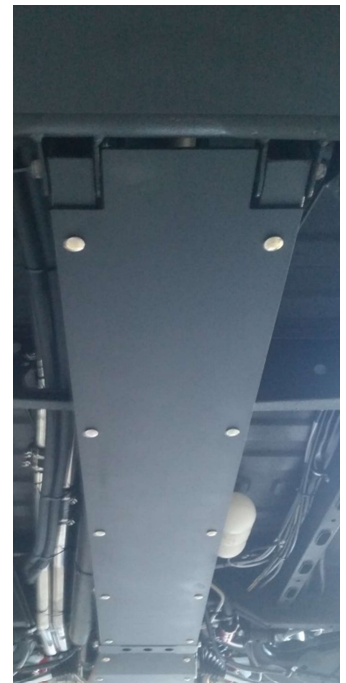

GoWesty Camper Products • 1119 Los Olivos Ave, Los Osos, CA 93402 • 888-469-3789 • www.gowesty.com