



These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.

## GW-V-025-121-058M

Aluminum Coolant Elbow (Left Head to Coolant Surround Pipe)

1986-1991 Vanagon, 2.1L

This kit replaces the coolant hose that connects the left head to the coolant surround pipe with an aluminum elbow reducer fitting. It uses standard-size, available-at-any-auto-parts-store coolant hoses. Kit contains the aluminum fitting, bulk hose, and new clamps. Protect and future-proof your van with this simple installation. Replaces VW part number 025-121-058M.


### Parts Included

(1)	GoWesty Aluminum Coolant Elbow Fitting	(2)	Small Hose Clamp
(20in)	Coolant Hose, 8mm-ID	(2)	Larger Hose Clamp
(2in)	Coolant Hose, 1in-ID		

### **Assembly and Installation Tips**

The GoWesty Aluminum Coolant Elbow Fitting is a direct replacement for the formed hose 025-121-058M. To account for variations across engines, the provided hose sections may be slightly longer than required. Install in the order recommended below and trim hoses as/if needed for a clean fit.

- 1)** Install both provided hoses onto each end of the GoWesty Coolant Elbow fitting and tighten each clamp.
- 2)** Install the 1" ID hose to the cylinder head.
  - a. Measure the length of the fitting on your cylinder head.
  - b. Trim the 1"ID hose if/as needed to match this measurement.
  - c. Install fitting on cylinder head and tighten clamp.
- 3)** Install the 8mm hose to the bleed pipe.
  - a. Route and line up the 8mm hose to the bleed pipe.
  - b. Trim the 8mm hose if/as needed.
  - c. Install hose onto the bleed pipe and tighten clamp.

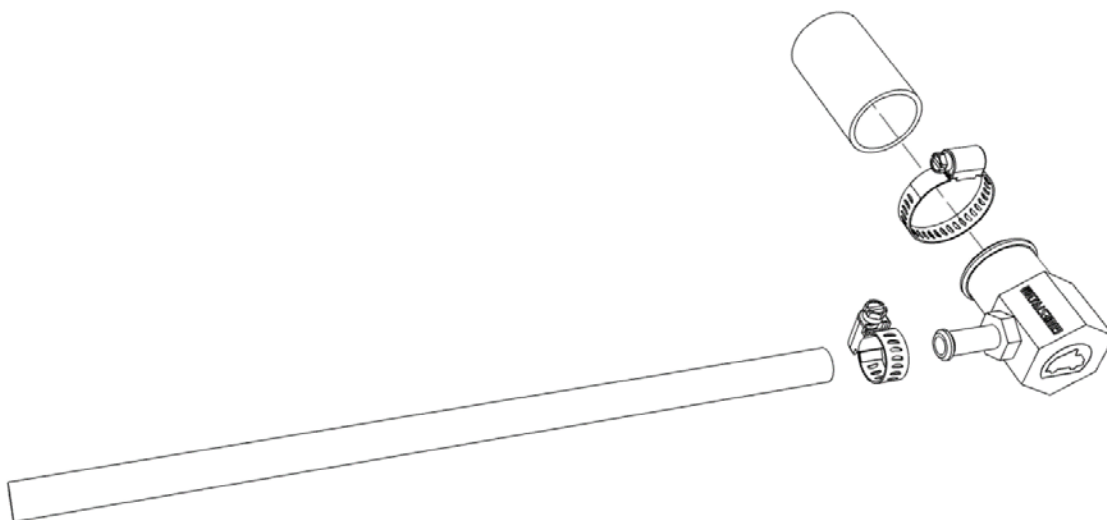

**That's it!**