




These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.

## H5-H4-KIT H5 to H4 Adapter Kit 1985-1991 Vanagon

This kit converts an H5 socket to an H4 socket so you can install H4 bulbs.

### *Instructions:*

- 1) Remove the negative terminal on the starter battery.
- 2) Remove the headlight as described in the Bentley.  
*(See page 23 in the Appendix or 94.4)*
- 3) Cut the H5 connector off and strip the ends of the wire.
- 4) Make the crimp connections as shown to the right:
- 5) Install the headlight and repeat steps 2-4 on the other side.
- 6) **That's it, you're done!**

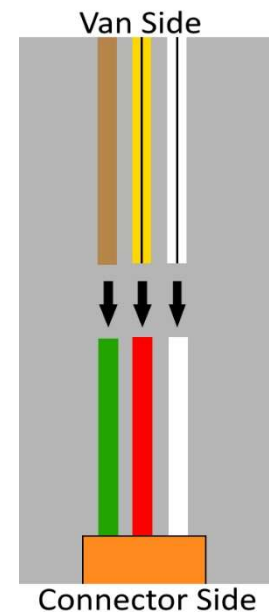

GoWesty Camper Products • 1119 Los Olivos Ave, Los Osos, CA 93402 • 888-469-3789 • [www.gowesty.com](http://www.gowesty.com)




These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.

## H5-H4-KIT H5 to H4 Adapter Kit 1985-1991 Vanagon

This kit converts an H5 socket to an H4 socket so you can install H4 bulbs.

### *Instructions:*

- 1) Remove the negative terminal on the starter battery.
- 2) Remove the headlight as described in the Bentley.  
*(See page 23 in the Appendix or 94.4)*
- 3) Cut the H5 connector off and strip the ends of the wire.
- 4) Make the crimp connections as shown to the right:
- 5) Install the headlight and repeat steps 2-4 on the other side.
- 6) **That's it, you're done!**

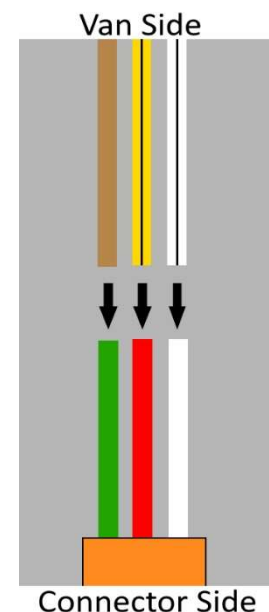

GoWesty Camper Products • 1119 Los Olivos Ave, Los Osos, CA 93402 • 888-469-3789 • [www.gowesty.com](http://www.gowesty.com)