



These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.

QP-ABS-RR-FH

ABS PLASTIC REAR QUARTER PANEL (FRONT HALF) FOR VANAGON

The QP-ABS-RR-FH for Vanagon is CNC-machined to fit the front-half of the rear, interior quarter panel. Made from nearly-indestructible, 3mm thick, ABS plastic, this panel can be run as-is (they look awesome), painted with a high-quality plastic paint, or upholstered. Each panel features cutouts for the various options that your van may have (or that you may want to add) including the factory ash tray or the 7 passenger seat bracket holes. These cutouts are scribed onto the back side of the panel with easy-to-follow lines.

See the diagram on the back of this sheet for a description of the scribed cutout lines on the back of each panel. Use an appropriately sized hole-saw, rotary tool or saw to cut the sections for your door accessory options. Each cutout may then need to be filed slightly for clearance. **Be sure to only cut the sections for your particular door accessory options. Not all recesses will need to be cut out.**

Panel Installation:

NOTE: COMPLETE REAR SEAT REMOVAL NOT REQUIRED FOR INSTALLATION

1. Place the panel over the door, aligning the mounting hole cutouts.
2. Screw in each Panel Fastener snugly using a Phillips-head screwdriver. Slight inward pressure can be used, but forcing the clips all the way in will make the clip hard to remove.

Be careful not to over-tighten and do not push the clips in without turning them.

GoWesty Camper Products • 1119 Los Olivos Ave, Los Osos, CA 93402 • 888-469-3789 • www.gowesty.com



These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.

QP-ABS-RR-FH

ABS PLASTIC REAR QUARTER PANEL (FRONT HALF) FOR VANAGON

The QP-ABS-RR-FH for Vanagon is CNC-machined to fit the front-half of the rear, interior quarter panel. Made from nearly-indestructible, 3mm thick, ABS plastic, this panel can be run as-is (they look awesome), painted with a high-quality plastic paint, or upholstered. Each panel features cutouts for the various options that your van may have (or that you may want to add) including the factory ash tray or the 7 passenger seat bracket holes. These cutouts are scribed onto the back side of the panel with easy-to-follow lines.

See the diagram on the back of this sheet for a description of the scribed cutout lines on the back of each panel. Use the appropriately sized hole-saw, rotary tool or saw to cut the sections for your door accessory options. Each cutout may then need to be filed slightly for clearance. **Be sure to only cut the sections for your particular door accessory options. Not all recesses will need to be cut out.**

Panel Installation:

NOTE: COMPLETE REAR SEAT REMOVAL NOT REQUIRED FOR INSTALLATION

1. Place the panel over the door, aligning the mounting hole cutouts.
2. Screw in each Panel Fastener snugly using a Phillips-head screwdriver. Slight inward pressure can be used, but forcing the clips all the way in will make the clip hard to remove.

Be careful not to over-tighten and do not push the clips in without turning them.


GoWesty Camper Products • 1119 Los Olivos Ave, Los Osos, CA 93402 • 888-469-3789 • www.gowesty.com



These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.

QP-ABS-RR-FH

ABS PLASTIC REAR QUARTER PANEL (FRONT HALF) FOR VANAGON

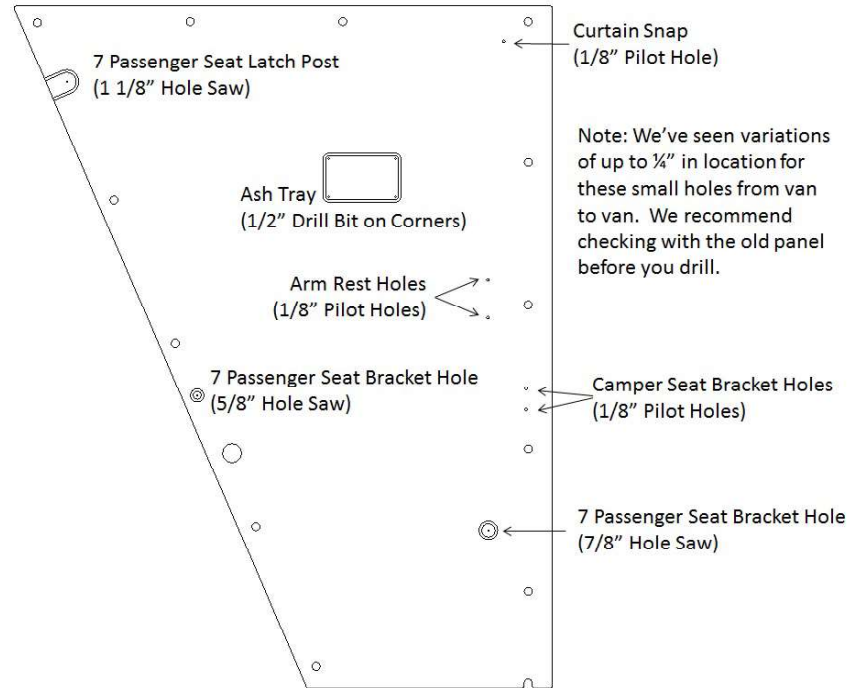


GoWesty Camper Products • 1119 Los Olivos Ave, Los Osos, CA 93402 • 888-469-3789 • www.gowesty.com



These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.

QP-ABS-RR-FH

ABS PLASTIC REAR QUARTER PANEL (FRONT HALF) FOR VANAGON

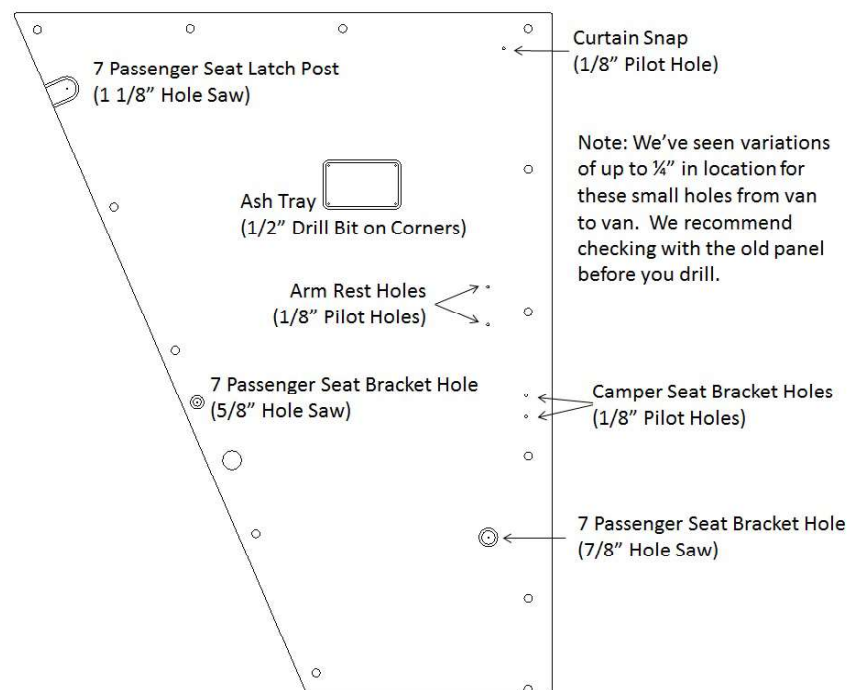

GoWesty Camper Products • 1119 Los Olivos Ave, Los Osos, CA 93402 • 888-469-3789 • www.gowesty.com