



These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.

## QP-ABS-LR-FH

### ABS Plastic Driver's Side Rear Quarter Panel (Front Half) for 7-Passenger Vanagon

---

*The QP-ABS-LR-FH for Vanagon is CNC-machined to fit the driver's-side front-half of the rear quarter panel in 7-Passenger models. Made from nearly-indestructible, 3mm thick, ABS plastic, this panel can be run as-is (they look awesome), painted with a high-quality plastic paint, or upholstered. Each panel features cutouts for the various options that your van may have (or that you may want to add), specifically, provisions for the 7-Passenger seat mounting. These cutouts are scribed onto the back side of the panel with easy-to-follow lines.*

See the diagram on the back of this sheet for a description of the scribed cutout lines on the back of each panel. Use an appropriately sized hole-saw, rotary tool or saw to cut each section. Each cutout may then need to be filed slightly for clearance. **Be sure to only cut the sections required for your seat mounting options.**

#### **Panel Installation:**

NOTE: COMPLETE REAR SEAT REMOVAL NOT REQUIRED FOR INSTALLATION

1. Place the panel over the door, aligning the mounting hole cutouts.
2. Screw in each Panel Fastener snugly using a Phillips-head screwdriver. Slight inward pressure can be used, but forcing the clips all the way in will make the clip hard to remove.

Be careful not to over-tighten and do not push the clips in without turning them.

GoWesty Camper Products • 1119 Los Olivos Ave, Los Osos, CA 93402 • 888-469-3789 • [www.gowesty.com](http://www.gowesty.com)



These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.

## QP-ABS-LR-FH

### ABS Plastic Driver's Side Rear Quarter Panel (Front Half) for 7-Passenger Vanagon

---

*The QP-ABS-LR-FH for Vanagon is CNC-machined to fit the driver's-side front-half of the rear quarter panel in 7-Passenger models. Made from nearly-indestructible, 3mm thick, ABS plastic, this panel can be run as-is (they look awesome), painted with a high-quality plastic paint, or upholstered. Each panel features cutouts for the various options that your van may have (or that you may want to add), specifically, provisions for the 7-Passenger seat mounting. These cutouts are scribed onto the back side of the panel with easy-to-follow lines.*

See the diagram on the back of this sheet for a description of the scribed cutout lines on the back of each panel. Use an appropriately sized hole-saw, rotary tool or saw to cut each section. Each cutout may then need to be filed slightly for clearance. **Be sure to only cut the sections required for your seat mounting options.**

#### **Panel Installation:**

NOTE: COMPLETE REAR SEAT REMOVAL NOT REQUIRED FOR INSTALLATION

3. Place the panel over the door, aligning the mounting hole cutouts.
4. Screw in each Panel Fastener snugly using a Phillips-head screwdriver. Slight inward pressure can be used, but forcing the clips all the way in will make the clip hard to remove.

Be careful not to over-tighten and do not push the clips in without turning them.


GoWesty Camper Products • 1119 Los Olivos Ave, Los Osos, CA 93402 • 888-469-3789 • [www.gowesty.com](http://www.gowesty.com)



These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.

### QP-ABS-LR-FH

## ABS Plastic Driver's Side Rear Quarter Panel (Front Half) for 7-Passenger Vanagon

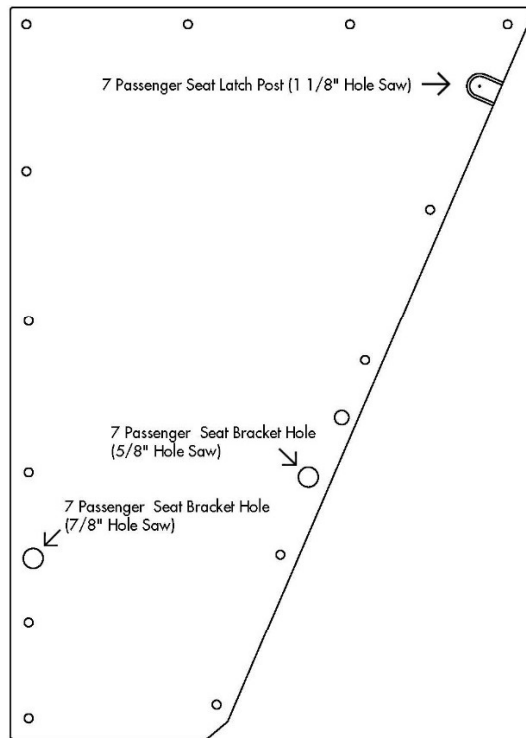


GoWesty Camper Products • 1119 Los Olivos Ave, Los Osos, CA 93402 • 888-469-3789 • [www.gowesty.com](http://www.gowesty.com)



These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.

### QP-ABS-LR-FH

## ABS Plastic Driver's Side Rear Quarter Panel (Front Half) for 7-Passenger Vanagon

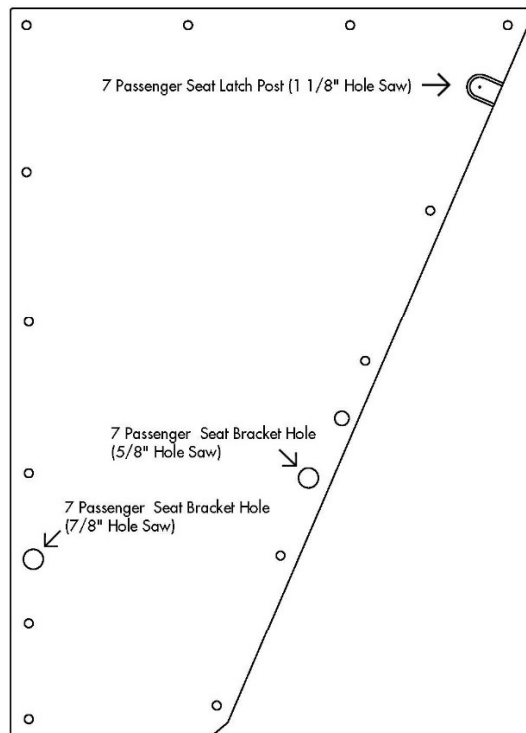

GoWesty Camper Products • 1119 Los Olivos Ave, Los Osos, CA 93402 • 888-469-3789 • [www.gowesty.com](http://www.gowesty.com)



These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.

## QP-ABS-LR-RH

### ABS Plastic Driver's Side Rear Quarter Panel (Rear Half) for 7-Passenger Vanagon

---

*The QP-ABS-LR-RH for Vanagon is CNC-machined to fit the driver's-side rear-half of the rear quarter panel in 7-Passenger models. Made from nearly-indestructible, 3mm thick, ABS plastic, this panel can be run as-is (they look awesome), painted with a high-quality plastic paint, or upholstered. Each panel features cutouts for the various options that your van may have (or that you may want to add). These cutouts are scribed onto the back side of the panel with easy-to-follow lines.*

See the diagram on the back of this sheet for a description of the scribed cutout lines on the back of each panel. Use an appropriately sized hole-saw, rotary tool or saw to cut the sections for your door accessory options. Each cutout may then need to be filed slightly for clearance. **Be sure to only cut the sections for your particular door accessory options. Not all recesses will need to be cut out.**

#### Panel Installation:

NOTE: COMPLETE REAR SEAT REMOVAL NOT REQUIRED FOR INSTALLATION

1. Place the panel over the door, aligning the mounting hole cutouts.
2. Screw in each Panel Fastener snugly using a Phillips-head screwdriver. Slight inward pressure can be used, but forcing the clips all the way in will make the clip hard to remove.

Be careful not to over-tighten and do not push the clips in without turning them.

GoWesty Camper Products • 1119 Los Olivos Ave, Los Osos, CA 93402 • 888-469-3789 • [www.gowesty.com](http://www.gowesty.com)



These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.

## QP-ABS-LR-RH

### ABS Plastic Driver's Side Rear Quarter Panel (Rear Half) for 7-Passenger Vanagon

---

*The QP-ABS-LR-RH for Vanagon is CNC-machined to fit the driver's-side rear-half of the rear quarter panel in 7-Passenger models. Made from nearly-indestructible, 3mm thick, ABS plastic, this panel can be run as-is (they look awesome), painted with a high-quality plastic paint, or upholstered. Each panel features cutouts for the various options that your van may have (or that you may want to add). These cutouts are scribed onto the back side of the panel with easy-to-follow lines.*

See the diagram on the back of this sheet for a description of the scribed cutout lines on the back of each panel. Use an appropriately sized hole-saw, rotary tool or saw to cut the sections for your door accessory options. Each cutout may then need to be filed slightly for clearance. **Be sure to only cut the sections for your particular door accessory options. Not all recesses will need to be cut out.**

#### Panel Installation:

NOTE: COMPLETE REAR SEAT REMOVAL NOT REQUIRED FOR INSTALLATION

3. Place the panel over the door, aligning the mounting hole cutouts.
4. Screw in each Panel Fastener snugly using a Phillips-head screwdriver. Slight inward pressure can be used, but forcing the clips all the way in will make the clip hard to remove.

Be careful not to over-tighten and do not push the clips in without turning them.


GoWesty Camper Products • 1119 Los Olivos Ave, Los Osos, CA 93402 • 888-469-3789 • [www.gowesty.com](http://www.gowesty.com)



These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.

### QP-ABS-LR-RH

## ABS Plastic Driver's Side Rear Quarter Panel (Rear Half) for 7-Passenger Vanagon

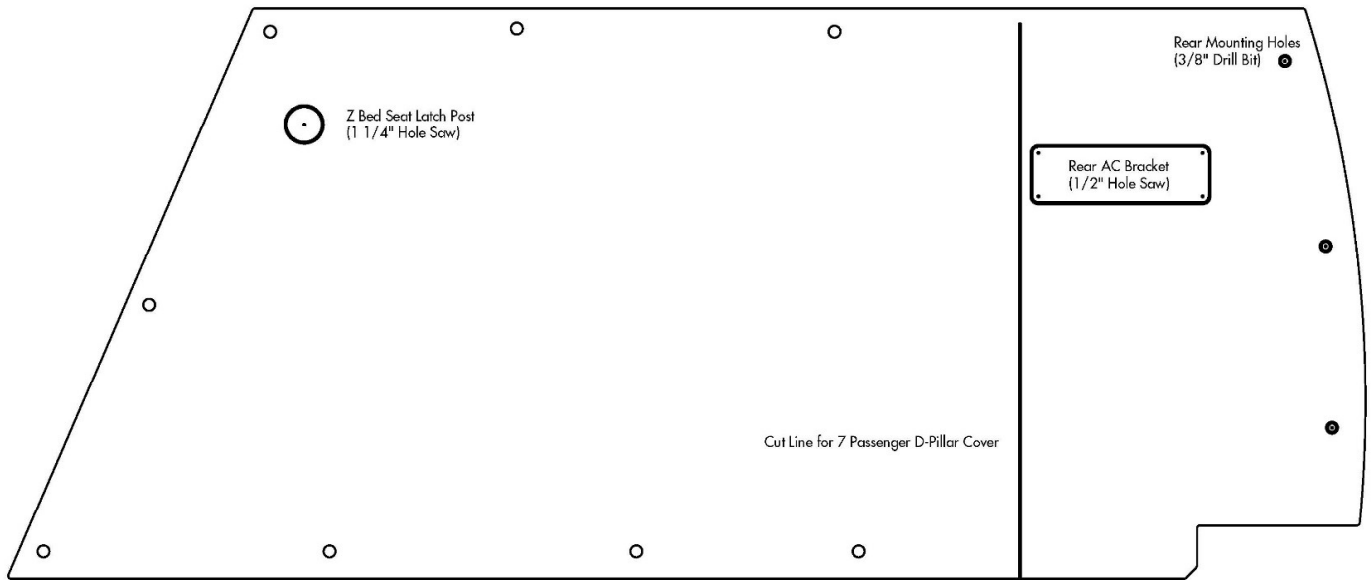

*NOTE: If you have an '89-'91 Seven Passenger Van with 3 Point seatbelts in the rear, you will need to cut a hole for the belt to pass through. Make sure to sand the ABS smooth where the belt runs through to avoid belt wear.*


GoWesty Camper Products • 1119 Los Olivos Ave, Los Osos, CA 93402 • 888-469-3789 • [www.gowesty.com](http://www.gowesty.com)



These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.

### QP-ABS-LR-RH

## ABS Plastic Driver's Side Rear Quarter Panel (Rear Half) for 7-Passenger Vanagon

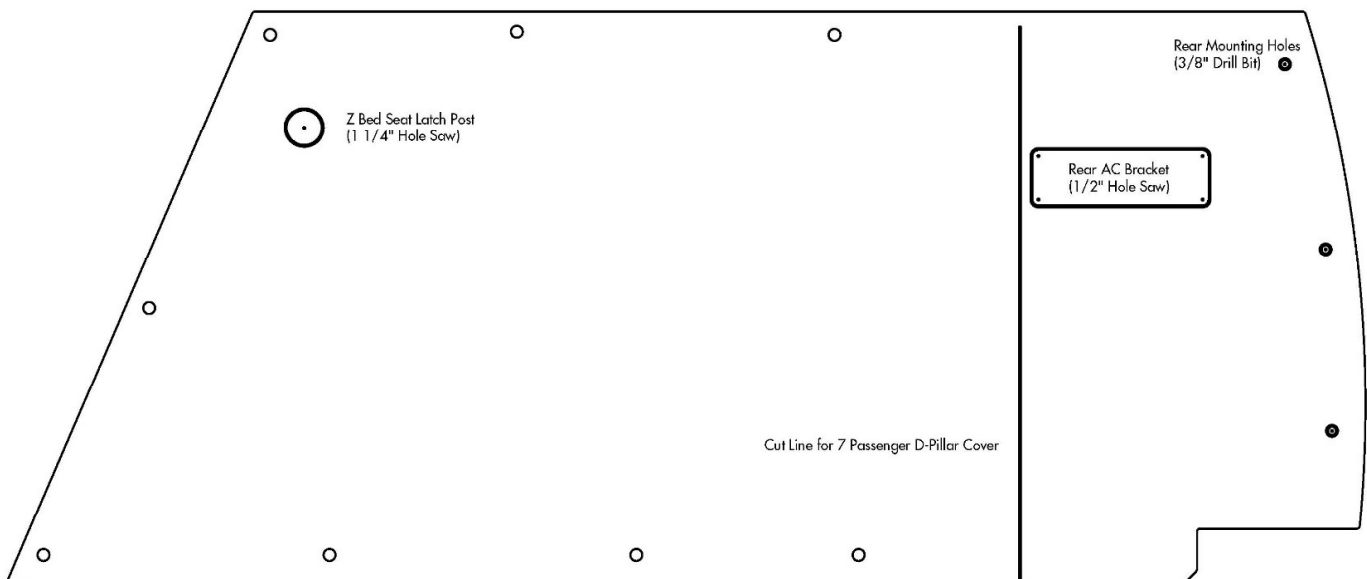

*NOTE: If you have an '89-'91 Seven Passenger Van with 3 Point seatbelts in the rear, you will need to cut a hole for the belt to pass through. Make sure to sand the ABS smooth where the belt runs through to avoid belt wear.*

GoWesty Camper Products • 1119 Los Olivos Ave, Los Osos, CA 93402 • 888-469-3789 • [www.gowesty.com](http://www.gowesty.com)